



**Test positions for body:**

According to the antenna position, the Body SAR is tested at the following 6 test positions between the EUT and the phantom bottom :

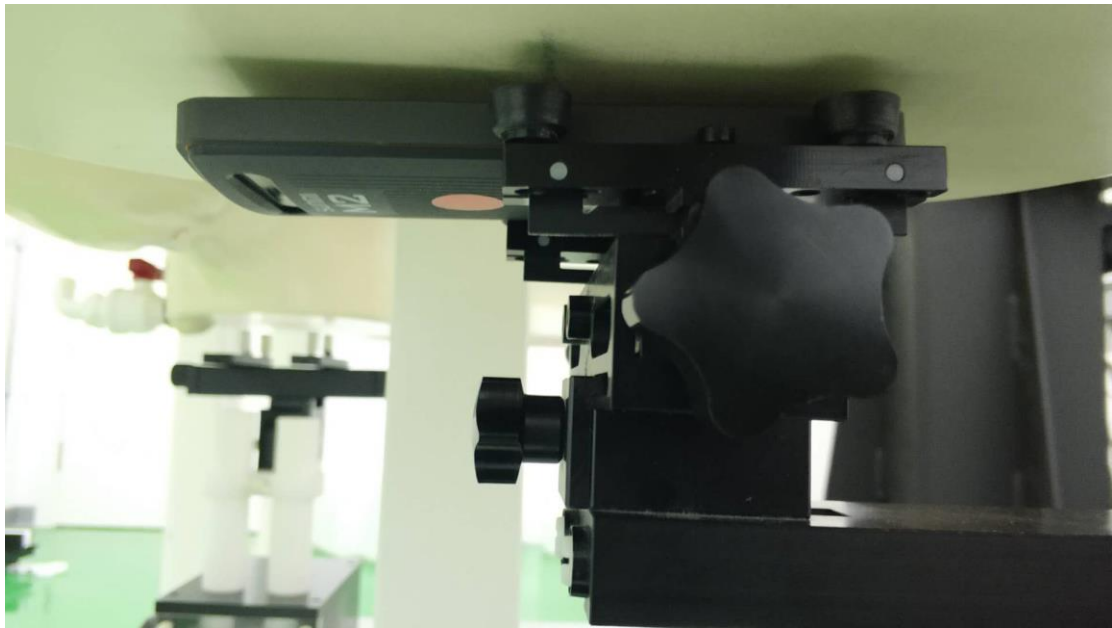

**Toward Phantom (5mm)**

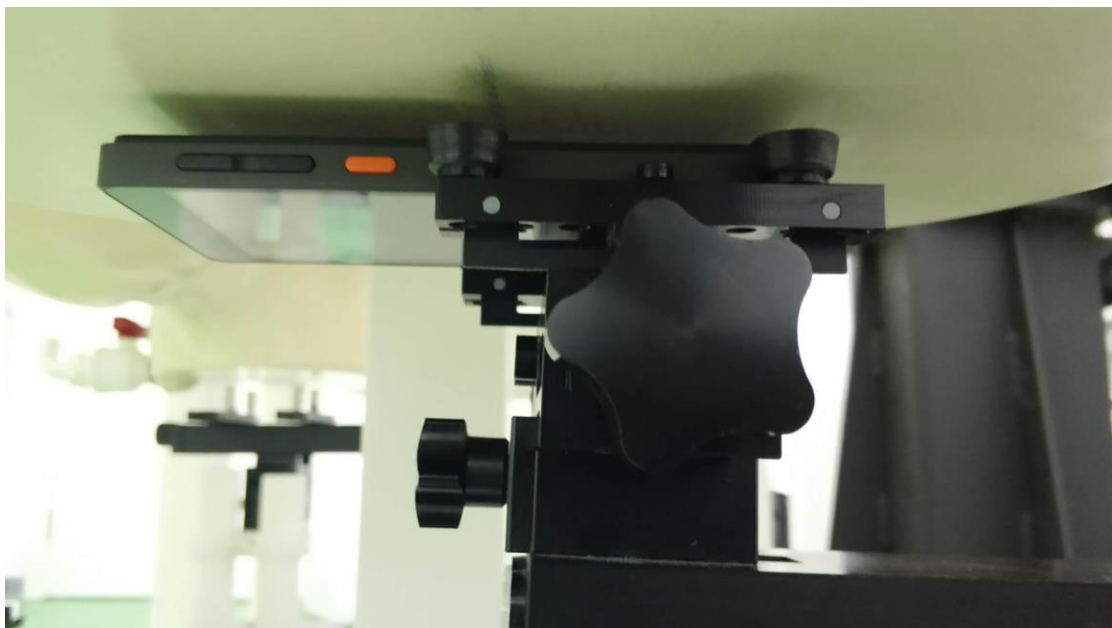


**Toward Ground (5mm)**




**Toward Left (5mm)**



**Toward Right (5mm)**

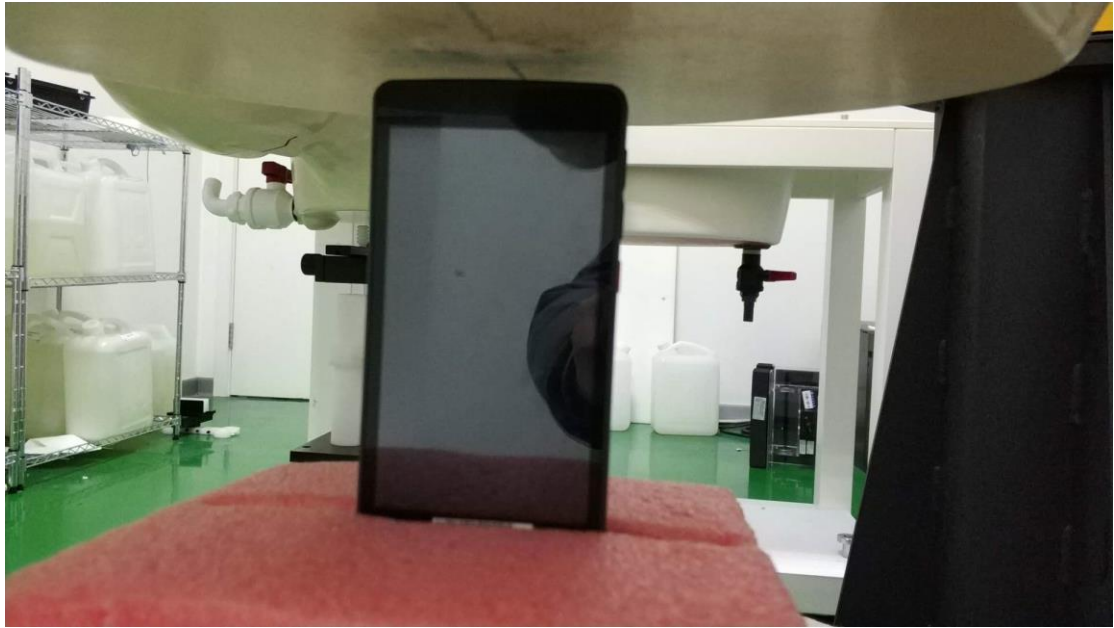

**Toward Top (5mm)**

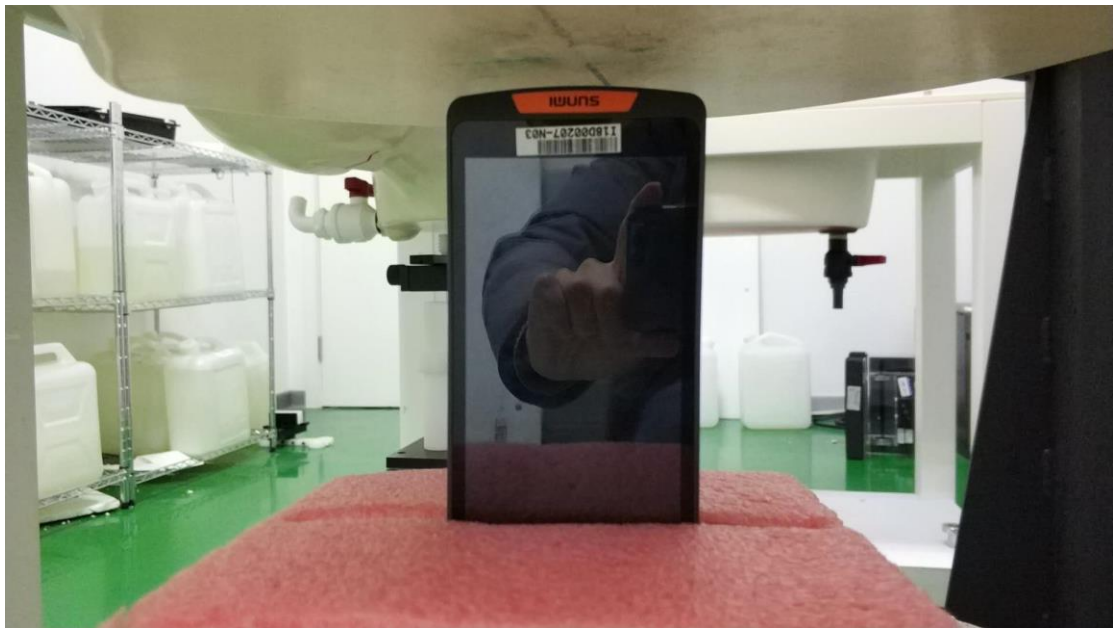

**Toward Bottom (5mm)**