



USB TypeA

19 打印仓开关(80打印机)

Easy Start-up

⑥ 磁卡读卡器 用于读取银行卡磁条信息。

7 前置摄像头

- It only takes several steps to enable this smart commercial device.
- 1 Press the power button to turn on the device, enter the initial boot-up interface, then follow the prompts. Wired network, Wi-Fi, and 4G (optional) are all available for this device.

1 电源键 短按:点亮屏幕,锁定屏幕。

及2. 然况所靠。 长按: 关机状态下,长按 2-3 秒开机; 使用状态下,长按 2-3 秒,可选择关机或重启; 死机状态下,长按 11 秒,自动重启。

160

- Click "Setting" button, and then enable WLAN, enter WLAN search interface to wait for its searching and listing
- Click WLAN to be connected. If an encrypted network is selected, you are required to enter the access password to get connected.

How to download/use APP

You may open the App Store under the networking mode. Browse & download the App and complete the installation. List of Pre-installed Software

· App Store · Push Service · User Feedback · Data Service · Electronic User Guide · Remote Assistance · POS Steward · Print Service · Launcher · User Center · OTA

You can go to Settings -> Apps to select the corresponding app to view its detailed information. For removing apps, you can go to Settings -> Apps -> Manage Apps -> Uninstall to remove the apps that you don't need, or you can also long press the app and drag it to the recycle bin to remove it.

Application scenarios Such as canteens, restaurants, and retail stores.

Users

Cashiers working in different stores.


Can provide data service and management function, and non-cash settlement is available such as bank card swiping and code scanning, and also support printing receipts.


For more information, please refer to the Help APP installed in the device

Printing Instructions

APK才可实现以上功能。

更多使用帮助请阅读机内帮助 APP

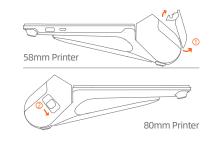

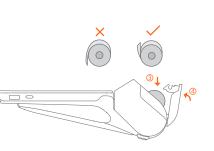

This device supports 58mm or 80mm thermal paper with specifications of 57±0.5mm*Ø40mm or 79±0.5mmר50mm; For 58mm printer, please open the paper container with the uncovering handle as shown in figure ①; For 80mm printer, please open the paper container with the latch as shown in figure 2. Please do not force open the paper container to avoid print head -Feed the paper correctly into the paper container in the direction as shown in figure 3, and pull some paper outside the cutter; ·Close the cover of the paper container to finish printing paper feeding, as shown in figur 4. Note: If the printed paper is blank, please check whether the paper roll has been installed in the correct direction.

Common Problems & Troubleshooting

Problems	Solutions
Device crashes	Long press the power button for 11 seconds to power off the device, and then short press to reboot it.
Printer can't work	Check if the paper container cover is closed correctly; Check if there is a paper jam.
The printed paper is blank	Check if the paper roll is installed in the correct direction; Check if the correct thermal paper roll is used.
Blurry printed content	Check if the thermal print head is dirty. If yes, please use a cotton swab dampened with anhydrous alcohol to clean it; Please change the thermal paper with a higher quality one to avoid blurry printed contents resulted from bad paper quality.

Package content

☑ Host x1 ☑ User Guide x1(including a product warranty card and a product certificate)

Notices

Safety Warnings

the marked input of the power adapter; · This is a Class A product. This product may cause radio . Do not drop, throw or bend the device; interference in living environments. In that case, the user may be required to take adequate measures

against interference; · Do not open the device in an unsecured area; · Do not charge the battery in a hazardous location; · About battery replacement:

① There is a danger of explosion if the battery is replaced with the wrong type! ② The replaced battery shall be handed over to the

maintenance personnel for proper disposal. Do not

throw it into the fire! · Please use this device in the temperature range of -10°C to 50°C, and store it and its accessories in the temperature range of -20°C to 60°C; · It's strictly prohibited to use the device in places where . The customer is not entitled to change or modify the

there is any potentially explosive gas; Non-profession- product without the Company's consent. als should not open the power adapter at will to avoid

 \cdot Do not open the battery cover during use.

Significant Safety Instructions

 \cdot Do not install or use the device during lightning storms to avoid the potential risks of lightning shock; · Please turn off the power immediately if you notice abnormal odor, heat or smoke; · The paper cutter is sharp, please do not touch! · Please use the original power adapter.

Suggestions

· Connect the AC plug to the AC socket corresponding to . Do not use the device in extremely cold or hot environments, such as near flames or lit cigarettes;

· Use the device in a clean and dust-free environment if

possible to prevent small items from falling into the device; · Please do not use the device near a medical equipment without permission.

Statements

The Company does not assume responsibilities for the following actions: · Damages caused by use and maintenance without

complying with the conditions specified in this guide; · Damages or problems caused by optional items or consumables (rather than the initial products or approved products of the Company).

· The product's operating system supports official system updates, but if the user changes the operating system into a third party ROM system or alters the system files by system cracking, it may cause system instability and security risks and threats.

Disclaimer

As a result of product upgrading, some details in this document may not match the product, and the actual product shall govern. The company reserves the right of interpretation of this document. The company also reserves the right to alter this specification without prior notice.

☑ Power adapter x1,AC power cord x1 ☑ Printing paper roll x1

Technical specifications

To prevent possible injury, please read all instructions and safety information before you use the product. Discharging temperature: -10°C ~ 50°C, Storage temperature: -20°C ~ 60°C, Charging temperature: -10°C ~ 40°C.

Charge battery only at ambient temperatures ranging from 0°C to 45°C.

(1) CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by the manufacturer. Dispose of used batteries according to the battery manufacturer's

(2) CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

* The product information listed on this page may be updated from time to time due to product upgrades or other reasons.SUNMI reserves the right to modify the product information and contents on this page without notice. RF Exposure Statement (SAR)

This device has been tested and meets EU, FCC and IC RSS-102 applicable limits for radio frequency (RF) exposure.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Regrient or relocate the receiving antenna.


—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED Canada compliance statements

This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil ést conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:(1) L'appareil ne doit pas produire de brouillage, et (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionne-

打印说明

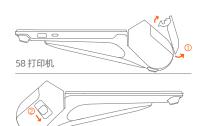

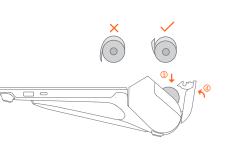

本机支持 58mm 或者80mm热敏打印纸,规格为 57±0.5mmר40mm或者79±0.5mmר50mm ·58打印机请通过开盖提手开启打印纸仓(图示 $\overline{\mathbf{0}}$); 80打印机请通过打印仓开关开启打印纸仓(图示 $\overline{\mathbf{0}}$), 勿强行打开纸仓, 防止打印头齿

·按照图示方向, 将打印纸正确放入纸仓, 并拉出部分纸至切刀外(图示 3); ·盖好纸仓盖,打印纸安装完成(图示4)。

注意: 如果打印内容空白, 请检查纸卷方向是否放反。

常见故障排除					
	症状	解决方法			
	死机怎么办	· 长按电源键11秒,进入断电关机,短按重新开机。			
	打印机不工作	· 确认纸仓盖正确关闭; · 确认是否发生卡纸故障。			
	打印内容空白	· 请检查纸卷是否放反; · 请检查是否使用了错误的热敏打印纸卷。			
	打印内容模糊	·请检查热敏头片是否脏污,如果脏污,请使用棉签蘸无水酒精进行擦拭; ·请更换品质有保障的热敏纸,避免因为纸质引起的打印不清。			

包装内容

☑ 打印纸x1

☑ 主机x1 ☑ 用户指南x1(含产品保修卡、产品合格证)

☑ 电源适配器x1,AC电源线x1

注意事项

安全警告

·请将交流电插头插入与配件电源适配器上标识输入相对 应的交流电插座中; ·请在温度-10°C~50°C范围内使用本设备,并在-20°C~60°C 范围内存放设备及配件;

·严禁在存有任何潜在爆炸性气体的场所使用;非专业人员不 要随意打开电源适配器,以免发生危险; ·此为A级产品。在生活环境中,该产品可能会造成无线 电干扰。在这种情况下,可能需要用户对于干扰采取切 实可行的措施。

关于电池的更换

· 用错误型号电池更换会有爆炸危险! · 更换后的旧电池应交维修人员处置,切勿把它投入火中! · 消费者不可自行拆卸内置电池, 如要拆卸需请专业人士/ 维修厂商拆卸。

重要安全说明

· 避免在雷电期间安装或使用, 否则有被雷电电击的危险; · 当您发现有异常气味,过热或烟雾情形下,请立刻切断

· 撕纸刀较锋利, 请勿触碰! ·请使用原装适配器。

· 避免长期在靠近水或潮湿的环境中使用; ·不要在极端冷、热环境中使用,例如靠近火源或点燃的

香烟; ·不要摔、投掷或弯折; ·尽量在清洁无尘环境中使用,避免细小物品落入终端中; · 在未获允许的情况下,不要在医疗设备附近使用。

声明 本公司不对以下行为负责

·不在本指南说明的条件下使用和维护所造成的损坏; ·对于因选件或耗材(非本公司提供之最初产品或认可产 品)造成的损坏或问题; ·未经本公司同意,无权进行产品修改或变动; ·本产品的操作系统支持官方的系统更新,如果用户刷了

第三方的ROM系统或者采用破解方式修改了系统文件,

可能会导致系统不稳定,以及带来安全风险和安全威胁。

免责申明

由于产品的更新,此文档的某些细节可能与产品不符,请 以实物为准,此文档的解释权归本公司。保留不预先通知 的情况下,修改本说明书的权利。

本产品有毒有害物质名称及含量标识表

	有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
电路板组件	×	0	0	0	0	0	
壳体组件	0	0	0	0	0	0	

○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006规定的限量要求以下。 ×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006规定的限量要求;

但是上表中打"x"的部件,其含量超出是因为目前业界还没有成熟的可替代的技术。 达到或超出环保使用年限的产品,应依据《电子信息产品控制管理办法》规定进行回收再利用,不应随意丢弃。						
产品保修卡						
产品名称:	以下情况恕不提供免费保修: · 未经允许擅自拆卸修理的产品。 · 产品条码、易碎贴破损及保修卡涂改、残缺的。 · 未按照说明书的要求操作设备所引起的故障。 · 因进水或跌落而造成的故障、划伤或破损的人为损坏。 · 因不可抗拒因素造成的故障或损坏。					

保修期限外。 (一) 符合"微功率短距离无线电发射设备目录和技术要求"第一条通用微功率设备第3款C类设备的规定,内置环形 NFC 天线 ,1.5A/m≤磁场强度≤ 94/m; 二)不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率(包括额外加装射频功率放大器),不得擅自更改发射天线;

(三) 不得对兵心占法的尤线电台(站)广王有害于水,也不得连世光支有害于水味产, (四) 应当承受辐射射频能量的工业、科学及医疗(ISM)应用设备的于就或其他合法的无线电台(站)干扰; (五) 如对其他合法的无线电台(站)产生有害干扰时,应立即停止使用,并采取措施消除干扰后方可继续使用; (六) 在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站(含测控、测距、接收、导航站)等军民用无线电台 (站)、机场等的电磁环境保护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定; (七)禁止在以机场跑道中心点为圆心、半径 5000 米的区域内 使用各类模型遥控器; (八)微功率设备使用时温度和电压的环境条件。


操作系统仅支持官方升级,如果用户自己刷非官方系统,导致安全风险和损失由用户负责。(可能存在的风险有:用户信息被盗取, 自动发送信息,定位您的位置等) 上海商米科技集团股份有限公司 地 址: 上海市杨浦区淞沪路388号创智天地7号楼505室



Front camera

8 Display/touch screen

Operators can operate on the

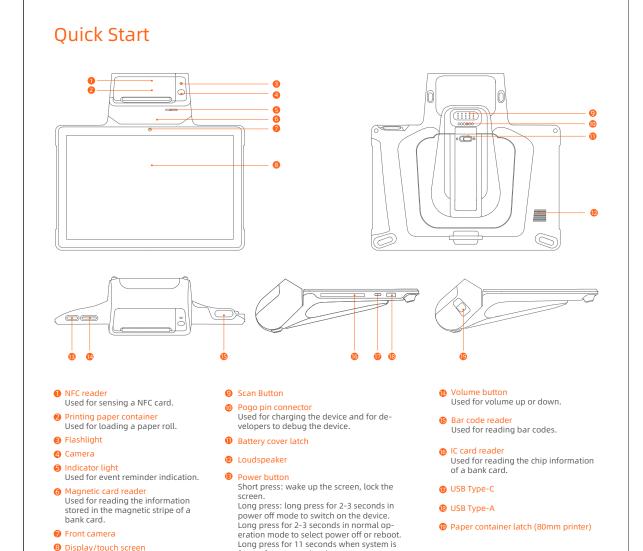

frozen for automatic reboot.



Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux. EU&UKCA regulatory conformance

Hereby, Shanghai Sunmi Technology Co., Ltd. declares that this device is in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017. The full text of the EU declaration of conformity is available at the following internet address: https://developer.sunmi.com/docs/read/en-US/maaeghjk480

INFORMATION ABOUT THE SOFTWARE The description of accessories and components, including software, which allow the radio equipment to operate as intended, can be obtained in the full text of the EU declaration of conformity at the following internet address: https://developer.sunmi.com/docs/read/en-US/maaeghjk480

RESTRICTIONS OF USE 5150-5350MHz only be used by indoor.

0 15U-535UMHZ 0	nly be used by indoor.			
Mode/Band	Fraguency	Power (dBm)		EU Representative :SUNMI
	Frequency		((France SAS 186, avenue
GSM900	880-915(TX),925-960(RX)	32.5±1		Thiers,69006 Lyon,France
DCS1800	1710-1785(TX),1805-1880(RX)	29.5±1	UK	
WCDMA Band 1	1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.5±1		
WCDMA Band 8	880-915 MHz(TX), 925-960 MHz(RX)	23.5±1	CA	
LTE Band 1	1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.5±1		This symbol means that it is
LTE Band 3	1710-1785 MHz(TX), 1805-1880 MHz(RX)	23.5±1		forbidden to dispose the
LTE Band 7	2500-2570 MHz(TX), 2620-2690 MHz(RX)	23.5±1		product of with normal
LTE Band 8	880-915 MHz(TX), 925-960 MHz(RX)	23.5±1		household waste. At the end
LTE Band 20	832-862 MHz(TX), 791-821 MHz(RX)	23.5±1		of the product life cycle,
LTE Band 28	703-736 MHz(TX), 758-791 MHz(RX)	23.5±1		waste equipment should be
LTE Band 34	2010-2025 MHz(TX), 2010-2025 MHz(RX)	23.5±1		taken to designated
LTE Band 38	2570-2620 MHz(TX), 2570-2620 MHz(RX)	23.5±1		collection points, returned to the distributor when
LTE Band 40	2300-2400 MHz(TX), 2300-2400 MHz(RX)	23.5±1		purchasing a new product, or
BT	2402-2480MHz(TX/RX)	11.55		contact your local authority
BLE	2402-2480MHz(TX/RX)	5.42		representative for detailed
2.4G Wifi	2412-2472MHz(TX/RX)	16.45		information on WEEE
5.2G Wifi	5150-5250MHz(TX/RX)	14.33		recycling.
5.3G Wifi	5250-5350MHz(TX/RX)	14.15		
5.5G Wifi	5470-5725MHz(TX/RX)	15.01		
5.8G WiFi	5725-5850MHz(TX/RX)	10.12		
NFC	13.56 MHz	-25.79dBµA/m@10M		
AT DE D	C CV C7 DE DV EE EE EI EB			

P3MIX_品牌中英文版_说明书_manual_20230726_V1.2

技术要求:

- 1.材质:105g雅粉纸
- 2.工艺: 单色+专色印刷+骑马钉+模切
- 3.尺寸:160*160mm,展开尺寸:160*320mm;公差:±1mm
- 4. 商米物料编码: M05054406



PANTONE Orange 021C