

Test positions for body:


According to the antenna position, the Body SAR is tested at the following 5 test positions between the EUT and the phantom bottom :




Toward Phantom (5mm)




Toward Ground (5mm)

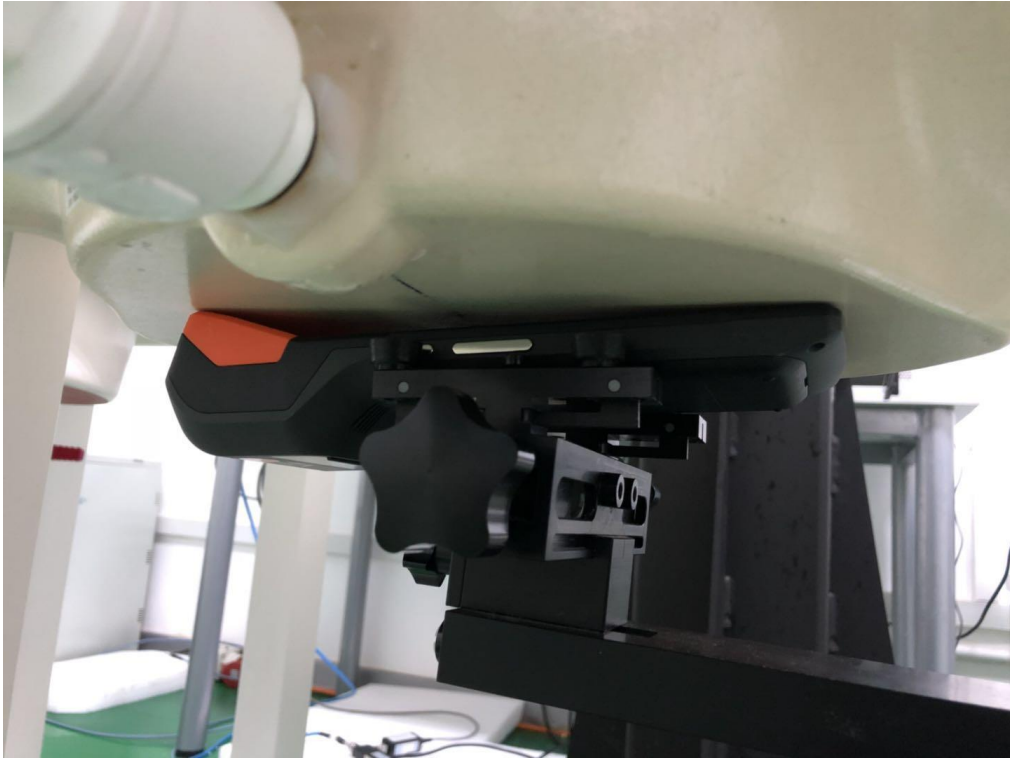

Toward Phantom (0mm)

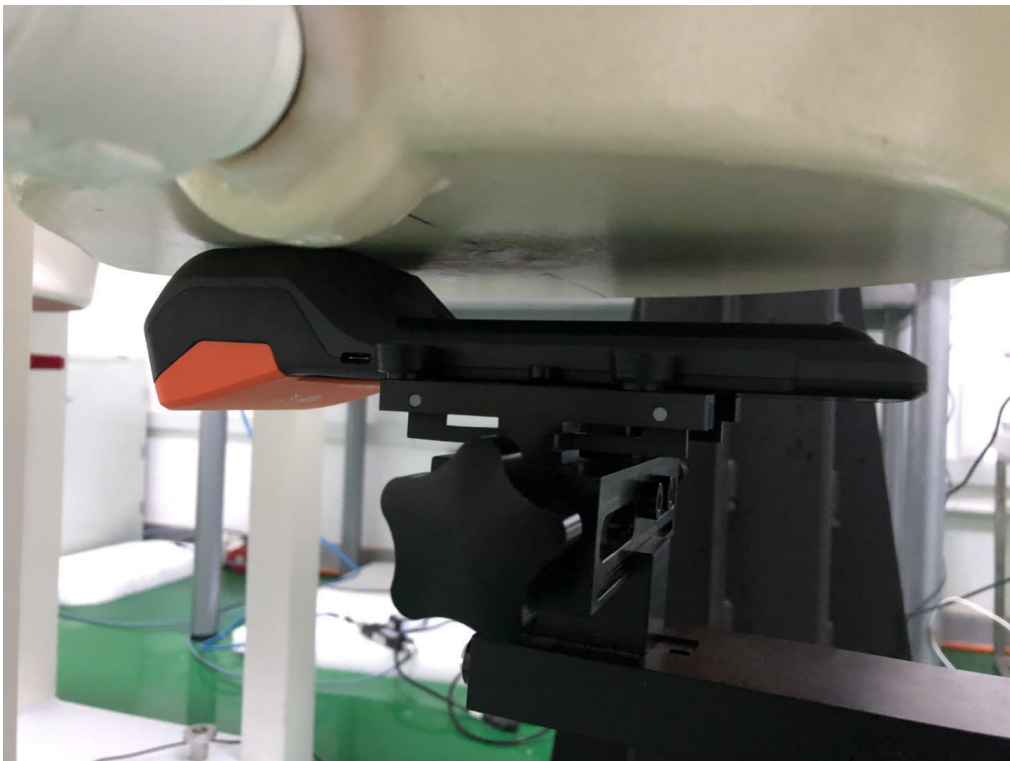

Toward Ground (0mm)

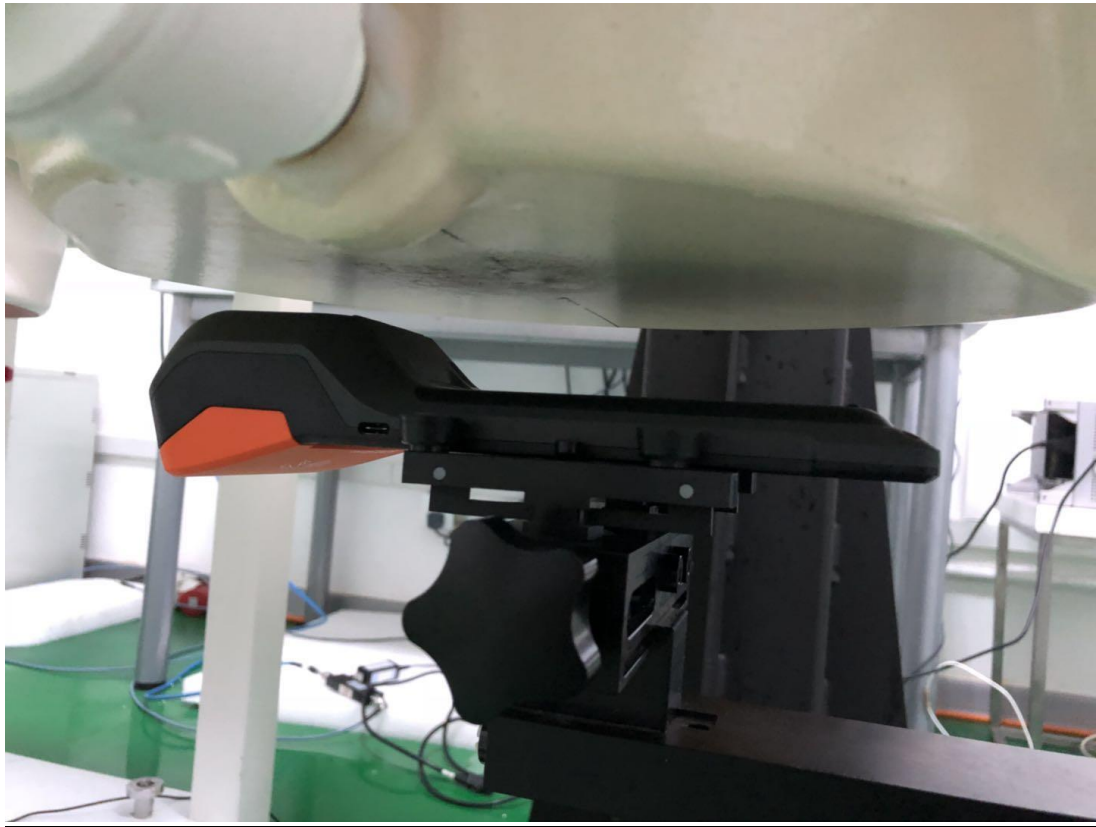

Toward Ground (19mm)