
Quick Start Guide Device (ione)

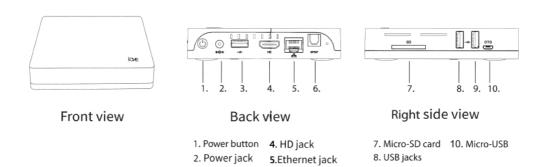



3.USB jacks

6. SPDIF jack

9.USB jacks

Accessories

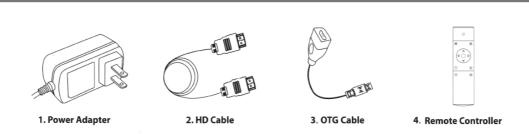

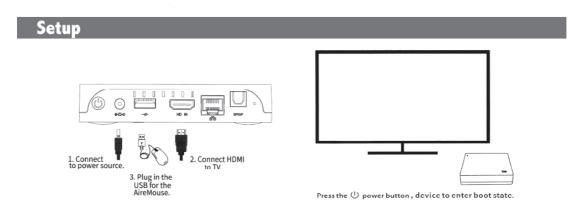

BasicOperations



Android System





Click the \triangleleft icon in the black bottom bar, or press the right mouse button.



Click the click icon in the black



Take screen shots

Click the তা icon in the black bottom bar. The screenshots will be stored in your Gallery.



Close applications Click the 🗌 icon. Click and hold an app screenshot and drag it up or



Hide bottom bar

Click the ≫ icon in the black bottom bar to hide the bottom bar. Click the bottom of the screen and drag to the top to make the bottom bar reappear.




Go back to home screen Click the O icon in the black bottom bar.




Read external data

Insert USB, removable hard disk, or MicroSD into the appropriate port. Go to Apps, click on File Browser, and click on the house icon. Your drive will appear under the Local Disk.

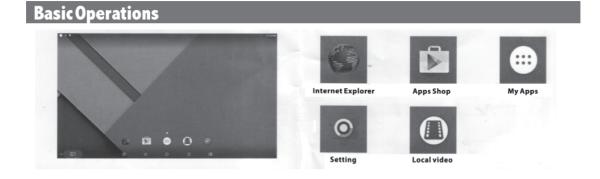

Language Settings

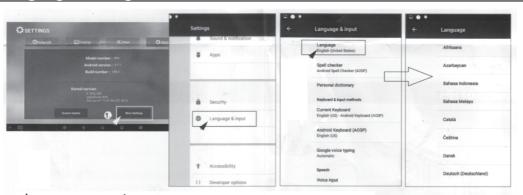

language settings

Homepage--Setting--Other--More Settings--Language&input--Language

Connecting to Internet

Wi-Fi

When device starts, you will be prompted to connect to the Internet. To connect to the Internet via Wi-Fi:

1. Select Wi-Fi.

2. Select your network. 3. Input network password.

After you have fished setting up your device, you can change how you connect to the internet by clicking on Settings on the homepage and going to Network and do steps 1-3.



Ethernet

To connect to the Internet via Ethernet:

1. Select Ethernet.

2. Plug in the Ethernet cable to the device.

3. The device will automatically detect it.

After you have fished setting up your device, you can change how you connect to the internet by clicking on Settings on the homepage and going to Network and do steps 1-3.



Set up WLAN hotspot

To set up a WLAN hotspot with your device:

1. From the homepage, click on Settings, then on Other, then on More settings, then Portable Hotspot, and select "Portable Wi-Fi Hotspot."

2. Select "Set up Wi-Fi hotspot" and create Network SSID, Security, and Password parameters.

3. To access device hotspot on other devices, select the Network SSID you modified and enter the password.

USB tellering USB commented, check to ustran	and the second sec
Partable WE. hanged Partable hanged federadd? active	n +) · · · · · · · · · · · · · · · · · ·
Bet up 101-01 bottopet Andread/P 00162 PDI partialize-00 Principal	
Biurtooth settering Not sharing this denixe's scaned connection	ar and which an art ar

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.