

HOMTOM




 









 
S16 User Guide

Read this guide carefully before using your smartphone.

Getting Started Overview



1 ICONS

Icon	Description	Icon	Description
	Indicate the intensity of network signals.		The phone is playing a song.
	Show missed calls.		Show battery level.
	Location by satellite.		Enable USB.
	Receive a new message.		The access is blocked.
	An application is being downloaded.		A call is in progress.
	The downloading is over.		No SIM card is installed in the phone.
	The alarm clock has been set and activated.		GPRS data connection is on.

2 FUNCTIONAL MENU

2.1 Dialing

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.

2.2 Browser

The browser allows you to surf on the internet and browse the page just like on the computer. You can create on the phone a bookmark. You can have a quick access to your favorite sites on the main screen.

You could view web pages in longitudinal or transverse mode. The page rotates according to the rotation of the phone and automatically adjusts to fit the page.

2.3 Settings

Bluetooth: Bluetooth can be turned on and off and settings are made.

Data usage: It makes you in full awareness of the usage of the information.

Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.

Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.

Storage: The internal memory of the storage card and of the phone is shown.

Battery: The usage detail of the battery's shown.

Applications: View, manage and delete the applications on your phone.

Account: Set the synchronization of your phone account with your phone.

Location service: Set the service during the locating.

Security: Set unlocking pattern; lock the SIM card; set the SD card.

Language & input: Select a language and input method.

Backup & reset: Reset DRM and restore factory settings to clear all personal data on your phone.

Date & time: Set current time and date.

Schedule power on/off: set the time to turn on or off your phone.

Accessibility: Some auxiliary functions can be set.

2.4 Clock

- Alarms

Your phone provides many groups of alarm clocks. Select one of them to edit and customize alarm clock.

- World Time

You can set a different time zone.

- Stopwatch
Single time you can also record multiple times.
- Timer
You can turn the dial to set down time.

2.5 Camera

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as face Defection, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.

2.6 Notification Menu

Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

2.7 theme

Click on the theme of your mobile phone to choose your favorite theme, you can also set the local picture as wallpaper.

3 FAQs and Solutions

If you have any questions about the phone, please find the solutions from the table below.

FAQs	Causes	Solutions
Poor reception	When you use your phone at poor reception areas, for example, near high rise buildings or base rooms, the radio wave cannot be transmitted effectively.	Avoid this as far as you can.
	When you use your phone at network traffic congestion, such as working time and off-duty time, the congestion can result in poor reception.	Avoid this as far as you can.
	This is related to the distance to base station in question.	You may ask the network service provider to provide service coverage map.
Echoes or noises	The trunk line of network is in bad condition. It is a regional problem.	Hang off the call and dial again. Choose another better line.
	In some areas, the call lines are in bad condition.	
Shorter standby time	The standby time is relevant to network settings.	In poor reception areas, turn off your phone temporarily.

	Replace the batteries	Change with a new battery.
	When no signals are received, your phone will continue searching for base stations, thus consuming a large amount of battery power and reducing standby time.	Use your phone at strong signal areas or Turn off the phone temporarily.
Failed to turn on your phone	The battery power is used up.	Check the battery power level or charge the battery.
SIM card error	The SIM card is damaged.	Contact your network service provider.
	The SIM card is not properly installed.	Ensure the SIM card is properly installed.
	The metallic face of the SIM card is contaminated.	Wipe the face with a clean cloth.
Failed to connect to the network	The SIM card is invalid.	Contact your network service provider.
	Beyond the GSM coverage.	Consult the network service provider for service areas.
	The signal is feeble.	Retry at a stronger signal area.
Failed to make a call	The call barring feature is used.	Cancel the call barring settings.
	The fixed dialing number feature is used.	Cancel the fixed dialing number settings.

PIN code error	Enter incorrect PIN codes for three times in succession.	Contact your network service provider.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10°C or above 55°C.	Change the environment.
	Poor connection.	Check whether the plug is properly connected.
Failed to add contacts to phone book	The storage space of phone book is used up.	Delete some contacts from the phone book.
Failed to set up some features	Your network service provider does not provide the services, or you haven't subscribed them.	Contact your network service provider.

S A F E T Y I N F O R M A T I O N

Read this guide carefully before using your smartphone.

[EN] Safety Information

Please read this safety information carefully so that you can use your phone in complete safety

1. Children : Be very careful with children and your phone. A mobile phone contains a number of detachable parts. Exercise great care when children are in close proximity to the phone. The phone contains small parts that could be swallowed or cause choking. If your phone is equipped with a camera or lighting device, do not use it too near children or animals.
2. Hearing : Prolonged listening at full power using a lightweight headset or headphones can damage your hearing. Reduce the volume to the lowest possible level when listening to music or conversations. Avoid high volumes over extended periods.
3. Driving : Exercise care when driving. Driving requires maximum attention at all times in order to minimise the risk of accidents. Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws in force regarding the use of cell phones whilst driving. You are not allowed to use the phone whilst driving. A hands-free kit should not be regarded as an alternative solution. Flying : Turn your phone off when flying. Remember to turn your phone off when you are in a plane (GSM + Bluetooth) as it may cause interference.
4. Hospitals : Turn your phone off near any medical devices. It is extremely dangerous to leave a phone switched on near medical devices as it may cause interference. You must observe any instructions or warnings in hospitals and treatment centres. Remember to turn your phone off in service stations. Do not use your device in a petrol station near fuel. It is dangerous to use your phone inside a professional garage.
5. Electronic implants and pacemakers : Users who wear a pacemaker or who are fitted with an electronic implant must hold the phone on the opposite side to their implant as a precaution when making a call. If you notice that your phone is causing interference with a pacemaker, switch it off immediately and contact the manufacturer of the pacemaker for advice on what action to take.
6. Fire hazard : Do not leave your device near heat sources such as radiators or cookers. Do not leave your phone charging near

flammable materials as there is a real risk of fire.

7. Contact with liquid : Do not expose the phone to liquid or touch it with wet hands : any damage caused by water may be irreparable.
8. Use only HOMETOM -approved accessories. The use of unauthorised accessories may damage your phone or cause a safety risk.
9. Do not destroy the batteries and chargers. Never use a battery or charger that has been damaged. keep batteries away from magnetic objects as the latter might cause a short-circuit between the positive and negative terminals of your batteries and permanently destroy the battery or phone. As a general rule, you should not expose the batteries to very high or low temperatures (below 0°C or above 45°C). Differences in temperature may reduce battery autonomy and service life.
10. Shocks and impact : Handle and use your phone with the utmost care. Protect your phone : shocks and impact may damage it. some parts of your phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping your phone. Do not touch the screen with sharp objects.
11. Electric shock : Do not try to dismantle your phone as there is a very real risk of electric shock.
12. Maintenance : If you want to clean your handset, use a dry cloth (do not use a solvent, such as benzene, or alcohol).
13. Recharge your phone in a well ventilated area. Do not recharge your device when it is resting on a soft surface.
14. Damage to magnetic strips : keep your phone away from credit cards as they may damage the data on the magnetic strips.