

Printed black & white, one sided & folded accordion style with Photo Image page as front.
 Each page 57mm by 100mm or paper is 285mm across by 100mm high when cut for folding.
 NOTE: Red lines are die-line guide (on its own layer) to be deselected before printing.

SKU 20019
 REV062021-1




100.0 mm

57.0 mm

Just Wireless
Magnetic Wireless Power Bank
User Manual

Power Bank Layout

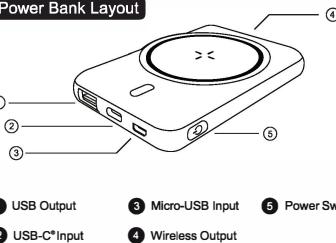

① USB Output ③ Micro-USB Input ⑤ Power Switch
 ② USB-C[®] Input ④ Wireless Output

To Charge Power Bank

Charge via USB Wall Charger



- Using the included Micro-USB cable, connect the USB connector to an AC wall adapter or USB port on a computer.
- Connect the Micro-USB connector to the input connector on the Power Bank.
- During charging, the LEDs will flash to show charging status.
- When charging is complete, the LEDs will be permanently on.
- Additionally, USB-C[®] input can be used to charge the Power Bank using a standard USB-C[®] cable.

To Check Remaining Capacity

- Press On/Off button and LEDs will light to show remaining capacity.
- The LEDs will turn off automatically after about 35 seconds or pressing On/Off button twice will turn off the LEDs immediately.

LED	On	Off	Flashing	Remaining Capacity
●	○	○	○	Less than 25%
●	●	○	○	25% to 50%
●	●	●	○	51% to 75%
●	●	●	●	76% to 100%

Important Safety Instructions

- To maximize battery life span, fully charge Power Bank before first use.
- Store Power Bank in a cool and dry place.
- Do not store Power Bank in hot or humid environment.
- Do not charge and discharge at the same time.
- Do not charge Micro-USB and USB-C[®] at the same time.
- Operating temperature should be between 14F to 104F.
- If Power Bank is not used for long periods of time, you should charge and discharge once every three months.
- When charging a device, the Power Bank may feel warm, this is a normal operating condition and should not be cause for concern.
- In normal conditions, the battery performance will decline over several years.
- Do not dispose of Power Bank in heat or fire.
- Do not clean Power Bank with harmful chemicals or detergents.
- Misuse, dropping or excessive force may cause product damage.

FCC Warning

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

• If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures
 -- Reorient or relocate the receiving antenna,
 -- Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement -
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For Warranty information, please visit our website.
www.justwireless.com

140 58th Street, Suite 2-1 Brooklyn
 New York United States 11220
 © 2021 Just Wireless

SKU 20019
 REV062021-1