



10.1 inch Tablet PC

User Manual

www.haehne.cc

Please read all instructions carefully before use and keep for future reference.

The design and features are subject to change without further notice.

IMPORTANT SAFETY INSTRUCTIONS

Do not use this apparatus near water.

Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers)that produce heat.

Only use attachments/accessories specified by the manufacturer. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.

The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Do not place any naked flame sources, such as lighted candles, on the apparatus.

The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

Please charge your unit when it is:

- The battery icon indicates the power is lower.
- The unit shuts off suddenly, even if restart again.
- Tapping any button has no response.

Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit.

When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this.

We are not responsible for the memory loss caused by product damage, repairment or other reasons. Please operate strictly following these instructions.

Clean only with dry cloth. Don not use aerosol cleaners, benzene, anti-static liquids or any other solvents for cleaning

Refer all servicing to qualified service personnel.

Turn off the unit or use airplane mode when use is prohibited, such as traveling in the aircraft.

The supplied USB cable is used for data transmission only.

Non-waterproof.

Attention: For your safety, please do not use the product when charging beware of accident

Warning: Wearing earphones at high volume for long time permanent hearing impairment may occur

Illustrations contained within this user manual are for representation only and subject to change.



Get around

PRODUCT OVERVIEW

1. Volume+/- buttons

Press to increase or decrease the volume level.

2. ↵ (Return) button

Press to go back to the main screen.

3. Camera

Take a photo or record a video.

4. ⏻ (Power) button

Press and hold to turn on/off the unit.

Press to wake up the screen.

Press to lock the screen.

5. TF card slot

Insert a flash card to extend the memory.

6. 📶 Micro USB port

Connect through USB cable to your PC for transferring data.

7. DC-5V(DC IN) jack

Connect to AC adaptor for charging

8. 🎤 (Microphone)

Use for video conference, talking, and sound recording.

9. 📶 (Earphone) jack

Outputs audio to earphone, speakers and amplifier.

10. Speakers

Outputs high-definition sound.

11. 🏠 Home

Open Home. If you're viewing a left or right Home screen, opens the central home screen.

(🏠 🏠 🏠) After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.)

The All Apps 📁 icon at the bottom of the screen is permanent. Touch it to see all your apps and widgets.

The middle of your Home screen can hold app and widget icons, plus folders.

* To open an app, folder, or widget, touch its icon.

* To see additional Home screens, swipe your finger quickly left or right.



BASIC OPERATION

Tap: Tap an item or App once to select the item or launch the App.

 
Long-tap: Tap and hold the current operating interface or area until the relevant items appear, then release.

Slide: Slide up/down/left/right to switch between different screens conveniently.


Drag: Tap and hold an icon on the desktop and drag to other position.


Pinch & Spread: Use two fingers to tap the screen, and adjust the distance between them to zoom in/out the current photo or web contents.

EXPLORING THE MAIN SCREEN

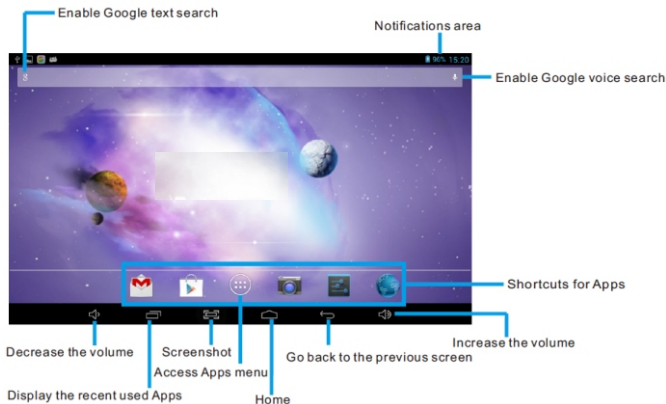

ANDROID APPS AND WIDGETS

 Tap the  button on the main screen to enter the Apps menu.

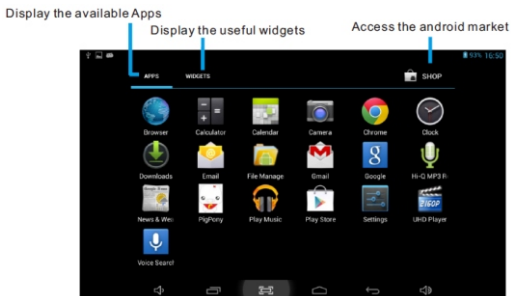


Notes:

- . Tap and hold an App or a widget, and drag it to a desired screen.
- . Tap and hold an App or a widget on the main screen until X appears, then drag it to touch the X to remove from the screen.

INFORMATIONINPUT

  
When you need to input texts, tap the text input box, the key board will appear automatically. After input, tap the button to close the key board.

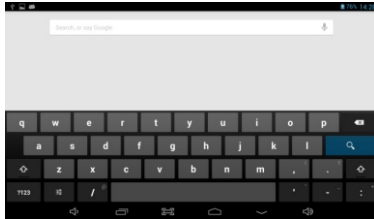






 
 


Basic editing

- * Move the insertion point: Touch where you want to type. The cursor blinks in the new position, and a blue tab appears below it. Drag the tab to move the cursor.
- * Select text: Touch & hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection. The tab disappears after a few moments, to get out of your way. To make it reappear, touch the text again.
- * Delete text: Touch to delete selected text or the characters before the cursor.
- * Cut, copy, paste: Select the text you want to manipulate.

Then touch the Paste  PASTE, Cut , or Copy  button:

 


Tips & shortcuts

- * Type capital letters: Touch the shift key  once to switch to capital letters for one letter. Or touch & hold the shift key  while you type. When you release the key, the lowercase letters reappear.
- * Turn caps lock on: Double-tap or touch & hold the shift key , so it changes to . Touch the shift key  again to return to lowercase.
- * Show numbers or symbols: Touch the  key. To see more choices, touch the  key.
- * Type special characters: Touch & hold the shift key  while you touch a key with a small gray character in its corner to enter the gray character.
- * Touch & hold any key to see alternative letters, symbols, or numbers, which you can then touch to type.
- * Change input language or keyboard: Touch the  key, then Input options menu appears. Choose the option you want to adjust.

Related settings: Setting > Language & input

CONNECTING TO PC

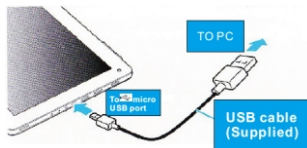

WARNING!

.When connecting to PC, please follow the computer prompts strictly to avoid any data loss.

.Do not disconnect the USB connection during data transferring: otherwise it will cause data damage or loss.

- 1.Connect the one end of the USB cable (supplied) to the unit, and the other end of the USB cable (supplied) to your PC.
- 2.Tap Turn on USB storage to transfer files.

 
CONNECTING TO EARPHONE

You can connect an earphone to the earphone jack for personal listening.



For protecting your hearing, always turn the volume down before plugging the earphones and use only the minimum volume setting necessary to hear your conversation or music.

CHARGING THE BATTERY

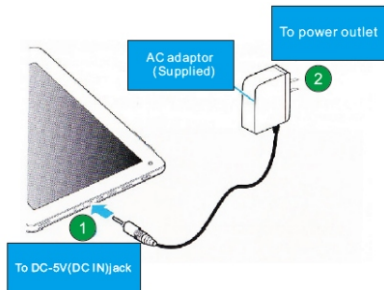

CAUTION!

Please charge the battery fully when use the unit for the first time.


Notes:

.Please charge only using the supplied AC power adaptor.

 
.Charge your unit at least for 10hours at the initial two charges.

After then you can charge just for 7 hours. Otherwise you may got problem with charging and battery life.

MUSIC


Tap the  in the Apps menu to listen to your favorite music with the music player.



**Classify music in different categories*

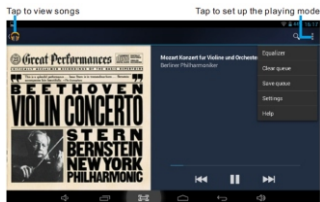

*You can use these categories to find your preferred music conveniently. (Or search music directly)

 GALLERY

  Tap the Apps menu and select WIDGETS then touch and hold  to view photos stored in your unit or TF flash card.

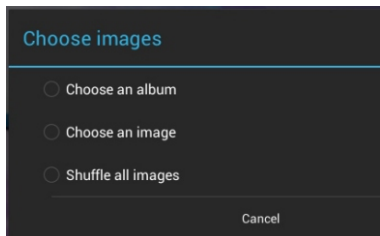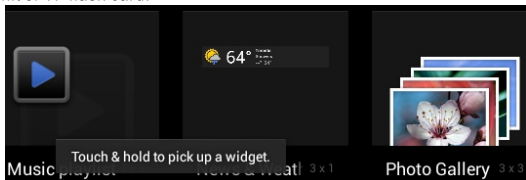


(Classify photo and video files in different categories)

Note:

.You can choose to view a photo, and use the toolbar on the upper-right corner to slideshow, delete, edit it, and view its detailed information.

Use folders

 You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.



From any Home screen, you can


- * Open a folder: Touch it. The folder opens.
- * Rename a folder: Touch its name.
- * Move icons around your Home screen: Touch, hold, and slide.
- * As with any folder, you can customize its contents.
- * After you open an app, you can usually adjust its settings by choosing items from its menu icon near the top of the screen.

Start Gmail


- 1 To launch Gmail, touch the Gmail icon  on a Home or All Apps screen.



 
From here, you can:

1. Read email. Touch a message to read it. Unread messages are bold.
2. Organize email. Check the box beside a message to select it. Then use the icons and menu at the top of the screen to manage the selected messages.
3. Change your settings. Touch the menu icon  to change your preferences, add star, report spam, etc.

CAMERA


Tap the  on the main screen or in the Apps menu to take photos or record using the camera.

The photos and videos will be stored into the File Manage automatically.

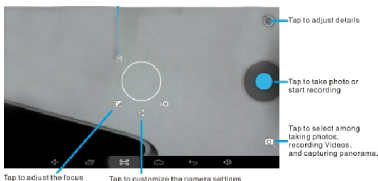

ANDROID MARKET

 
You can use your Google account to download various Apps from the Android Market. Set up your own account first to access the Android Market.

1. Tap the  in the Apps menu. 2. Add a Google account to the unit.




Tap to sign in if you have an account before
Tap to create a new account

3. After signing in, you can download your desired Apps from the Android Market.

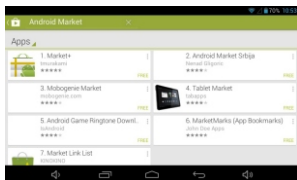

SETTINGS

In the Setting menu, you can configure the unit, set app options, add accounts, and set other preferences.

1. Tap the  on the main screen or in the Apps menus to enter the settings menu.

 


2. Tap and select an option and configure it according to the screen prompts.

NOTIFICATIONS PANEL

1 Tap and slide down this area select 


Or tap  directly on the main screen.

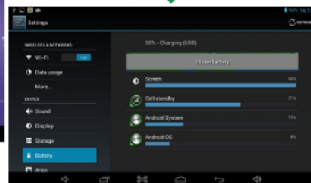


After operating, tap  on the screen to turn off the Notifications panel.

WI-FI CONNECTION

Before creating the WI-FI connection, please ensure that your WLAN network has been configured correctly.

1. Tap the  on the main screen or in the Apps menu to enter the settings menu.
2. Tap to select WI-FI item and switch it to ON. The unit will scan the available networks automatically.
3. Tap the desired network, and input the password if necessary. Then tap *Connect*.

 Refresh to see the available Wifi

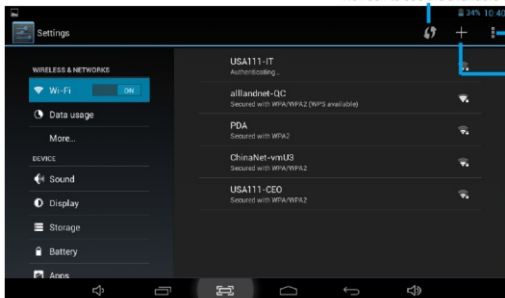


Tap to view more information about Wi-Fi

Tap to add a network with Network SSID

Change the wall paper

 Wallpapers are images from super-HD player (pictures you shot with camera, synced from Picasa, and soon), still images included with the system, and live images (such as an animation or a map that centers on your location). They take the place of the default background for your Home screens.

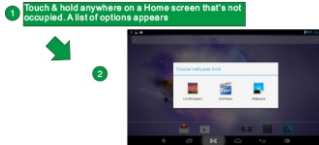


To set a wall paper, touch "set wall paper" or "OK".

Related settings


Settings > Display > Wall paper

CONNECTING TO HDMI DEVICES (Optional)

 An HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.

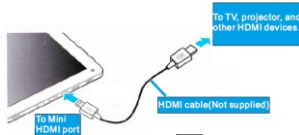

Notes :

On the main screen or in the Apps menu, tap  --> HDMI to enable and deploy the HDMI output. The connected device source should be set to HDMI.

Protective film

Note:

In order to prevent the scratches on the LCD screen during transport, our products come with an original screen protector.

Hence, you may find the screen protector is not in perfect condition when arrived.

Please peel off the screen protector before using the device. If you need an extra new screen protector, you could purchase it from local store or website.



FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.