



HAEHNE



7 inch Tablet PC **User Manual**

www.haehne.cc

Please read all instructions carefully before use and keep for future reference.

The design and features are subject to change without further notice.

IMPORTANT SAFETY INSTRUCTIONS

Do not use this apparatus near water.

Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers)that produce heat.

Only use attachments/accessories specified by the manufacturer. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.

The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Do not place any naked flame sources, such as lighted candles, on the apparatus.

The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

Please charge your unit when it is:

- The battery icon indicates the power is lower.
- The unit shuts off suddenly, even if restart again.
- Tapping any button has no response.

Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit.

When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this.

We are not responsible for the memory loss caused by product damage, repairment or other reasons. Please operate strictly following these instructions.

Clean only with dry cloth. Don not use aerosol cleaners, benzene, anti-static liquids or any other solvents for cleaning

Refer all servicing to qualified service personnel.

Turn off the unit or use airplane mode when use is prohibited, such as traveling in the aircraft.

The supplied USB cable is used for data transmission only.

Non-waterproof.

Attention: For your safety, please do not use the product when charging beware of accident

Warning: Wearing earphones at high volume for long time permanent hearing impairment may occur

Illustrations contained within this user manual are for representation only and subject to change.



PRODUCT OVERVIEW

1. Volume+/- buttons

Press to increase or decrease the volume level

2. (Return) button

Press to go back to the main screen.

3. Front camera

Take a photo or record a video.

4. (Power) button

.Press and hold to turn on/off the unit.

.Press to wake up the screen.

.Press to lock the screen

5. TF card slot

Insert a flash card to extend the memory.

6. Micro USB port

Connect through USB cable to your PC for transferring data

7. DC-5V(DC IN) jack

Connect to AC adaptor for charging.

8. (Microphone)

Uses for video conference, talking, and sound recording.

9. (Earphone) jack

Outputs audio to earphone, speakers and amplifier.

10. Speakers

 
Outputs high-definition sound.

11. Rear camera

Take a photo or record a video.



CHARGING THE BATTERY

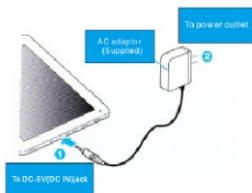

CAUTION!

Please charge the battery fully when use the unit for the first time.

 
Notes:

.Please charge only using the supplied AC power adaptor.

.Charge your unit at least for 10hours at the initial two charges.


After then you can charge just for 7 hours. Otherwise you may got problem with charging and battery life.

EXPLORING THE MAIN SCREEN

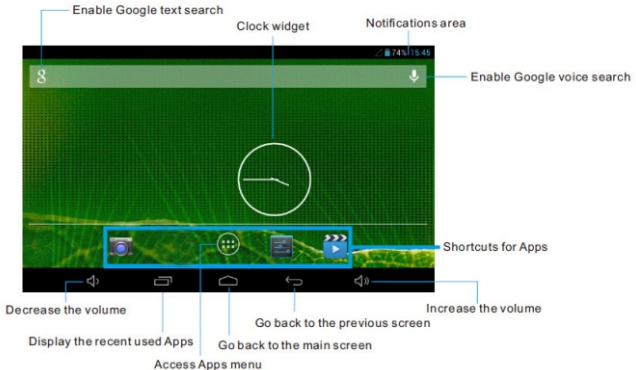

ANDROID APPS AND WIDGETS

 Tap the button on the main screen to enter the Apps menu.

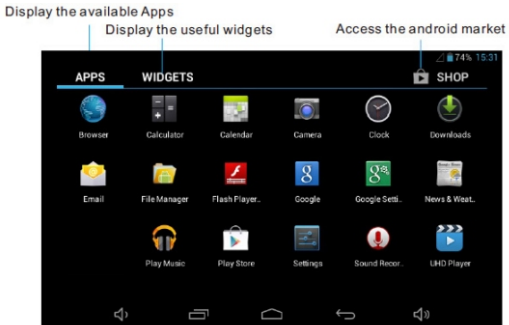

Notes:

- .Tap and hold an App or a widget, and drag it to a desired screen.
- .Tap and hold an App or a widget on the main screen until X appears, then drag it to touch the X to remove from the screen.

NOTIFICATIONS PANEL



After operating, tap on the screen to turn off the Notifications panel.

BASIC OPERATION

OPERATING ACTIONS

- Tap:** Tap an item or App once to select the item or launch the App.
- Long-tap:** Tap and hold the current operating interface or area until the relevant items appear, then release.
- Slide:** Slide up/down/left/right to switch between different screens conveniently.
- Drag:** Tap and hold an icon on the desktop and drag to other position.
- Pinch & Spread:** Use two fingers to tap the screen, and adjust the distance between them to zoom in/out the current photo or web contents.

 
 
INFORMATION INPUT

When you need to input texts, tap the text input box, the keyboard will appear automatically. After input, tap the button to close the keyboard.




Google apps location settings

Tap the  in the Apps menu to Google settings, select Location. Then let Google apps access your location.

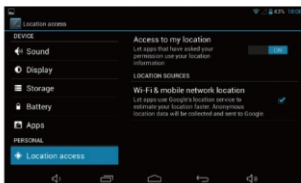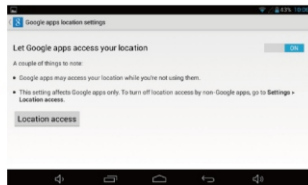

CONNECTING TO PC

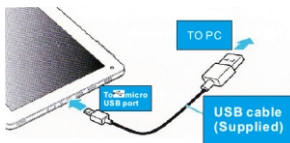 

WARNING!

- .When connecting to PC, please follow the computer prompts strictly to avoid any data loss.
 - .Do not disconnect the USB connection during data transferring; otherwise it will cause data damage or loss.
- 1.Connect the one end of the USB cable (supplied) to the unit, and the other end of the USB cable (supplied) to your PC.
 - 2.Tap Turn on USB storage to transfer files.


CONNECTING TO EARPHONE

 
You can connect an earphone to the earphone jack for personal listening.



For protecting your hearing, always turn the volume down before plugging the earphones and use only the minimum volume setting necessary to hear your conversation or music.

MUSIC

Tap the  in the Apps menu to listen to your favorite music with the music player.

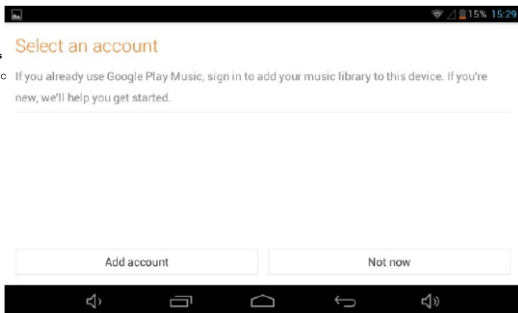

*Classify music in different categories

 
1. Tap to view the current playing music
2. Tap to set up the playing mode

If you already use Google Play Music, sign in to add your music library to this device. If you're new, we'll help you get started.

*You can use these categories to find your preferred music conveniently.

GALLERY

Tap the Apps menu and select WIDGETS then touch and hold to view photos and videos stored in your unit or TF flash card.

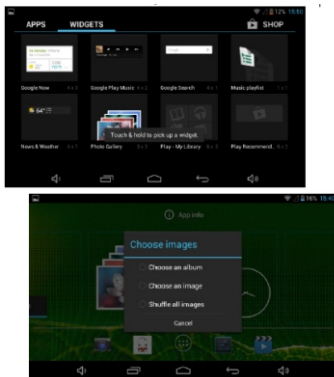


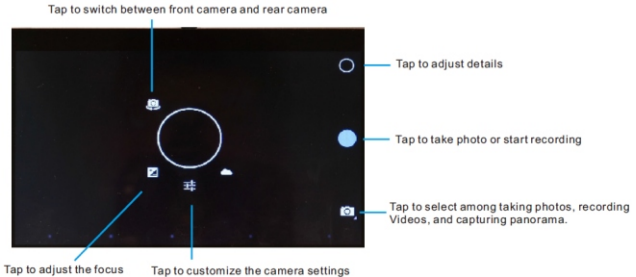 
(Classify photo and video files in different categories)

Note:

.You can choose to view a photo, and use the toolbar on the upper-right corner to slideshow, delete, edit it, and view its detailed information.

 
CAMERA


Tap the  on the main screen or in the Apps menu to take photos or record using the camera. The photos and videos will be stored into the Gallery automatically.



WI-FI CONNECTION


Before creating the WI-FI connection, please ensure that your WLAN network has been configured correctly.

 
1. Tap the  on the main screen or in the Apps menu to enter the settings menu.
2. Tap to select WI-FI item and switch it to ON. The unit will scan the available networks automatically.
3. Tap the desired network, and input the password if necessary. Then tap *Connect*.

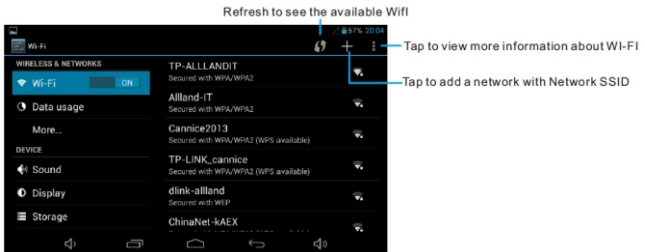

ANDROID MARKET

You can use your Google account to download various Apps from the Android Market. Set up your own account first to access the Android Market.

 1. Tap the  in the Apps menu.
2. Add a Google account to the unit.

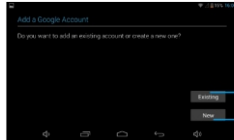


3. After signing in, you can download your desired Apps from the Android Market.



Tip:
Because some Apps are not free, you need to pay for them via your credit card for downloading.

SETTINGS

 In the Setting menu, you can configure the unit, set app options, add accounts, and set other preferences.

1. Tap the  on the main screen or in the Apps menus to enter the settings menu.



Protective film

Note:

In order to prevent the scratches on the LCD screen during transport, our products come with an original screen protector. Hence, you may find the screen protector is not in perfect condition when arrived. Please peel off the screen protector before using the device. If you need an extra new screen protector, you could purchase it from local store or website.



TROUBLE SHOOTING

Check this list for a possible trouble shooting solution.

Cannot power on

Check the battery power if it is too low.

Connect the adaptor and power on again.

After powering on, the screen starts blinking and power off suddenly

Battery power is low, please charge in time.

No sound output

Check the volume setting, and adjust the volume level by tapping Volume+/- buttons.

Check if the audio file is damaged; try to choose another audio to play.

Cannot copy files or play audio files

Check if the connection is available.

Check if the unit has enough storage memory.

System has errors

Power off the unit and then power on again by holding and pressing the (Power) button.

Restore the system to factory default.

If you have any questions please contact us,
website: <http://www.haehne.cc>
Email: jinyjialtd@hotmail.com

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.