

9 inch Tablet PC User Manual

www.haehne.cc

TROUBLE SHOOTING

Check this list for a possible trouble shooting solution.

Cannot power on

Check the battery power if it is too low. Connect the adaptor and power on again.

After powering on, the screen starts blinking and power off suddenly

Battery power is low, please charge in time.

No sound output

Check the volume setting, and adjust the volume level by tapping Volume+/- buttons.

Check if the audio file is damaged; try to choose another audio to play.

Cannot copy files or play audio files Check if the connection is available.

Check if the unit has enough storage memory.

System has errors

Power off the unit and then power on again by holding and pressing the (Power) button.

Restore the system to factory default.

If you have any questions please contact us, website: http://www.haehne.cc Email:jinyjialtd@hotmail.com Please read all instructions carefully before use and keep for future reference.

The design and features are subject to change without further notice.

IMPORTANT SAFETY INSTRUCTIONS

Do not use this apparatus near water.

Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers)that produce heat.

Only use attachments/accessories specified by the manufacturer. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.

The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. Do not place any naked flame sources, such as lighted candles, on the apparatus.

The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

Please charge your unit when it is:

- -The battery icon indicates the power is lower.
- -The unit shuts off suddenly, even if restart again.
- -Tapping any button has no response.

Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit. When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this.

We are not responsible for the memory loss caused by product damage, repairment or other reasons. Please operate strictly following these instructions.

Clean only with dry cloth. Don not use aerosol cleaners, benzene, anti-static liquids or any other solvents for cleaning Refer all servicing to qualified service personnel.

Turn off the unit or use airplane mode when use is prohibited, such as traveling in the aircraft.

The supplied USB cable is used for data transmission only. Non-waterproof.

Attention: For your safety, please do not use the product when charging beware of accident

Warning: Wearing earphones at high volume for long time permanent hearing impairment may occur

User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.

1



Use the Lock screen

To protect personalin formation, you can adjust your phone 'slock settings:



Afteryousetalockhere, alockscreendisplays wheneveryourscreenwakesup, requesting the pattern, PIN, or other specifiedkey.

Im portant: The strength of security options are listed from low to high, starting with None and slide, which provide no security. Even though face unlock and pattern is fancy way to set upsecurity, we still recommendy outouse password be cause it is

If your tablet?? splaying music when the screenlocks, you can continue listening or pause the selection without un locking.

Ch a nge the w a lipap er

Wallpapersare images from super-HDplayer(pictures you shot with camera, synced from Picasa, and soon), still images included with the system, and live images (such as an animation or a mapth atcenters on your location). They take the place of the default background for your Home screens.



To set a wall paper, touch "set wall paper" or "OK". Related settings

Setting>Display>Wallpaper

CONNECTINGTOHDMIDEVICES(Optional)

A H D MI cable can output both vide o and audio and en ables you to enjoy digital-quality vide o and audio with minimal loss of quality.



Notes:

On the mains creen or in the Appsmenu, tap --> Hami to enable and deploy the HDMI output. The connected devices our ceshould be set to HDMI.

Get around

PRODUCT OVERVIEW

1 Volume+/- buttons

Press to increase or decrease the volume level.

2. (Return) button

Press to go back to the main screen.

3.Camera

Take a photo or record a video.

4. (Power) button

.Press and hold to turn on/off the unit.

.Press to wake up the screen.

.Press to lock the screen.

5.TF card slot

Insert a flash card to extend the memory.

6. Micro USB port

Connect through USB cable to your PC for transferring data.

7.DC-5V(DC IN) jack

Connect to AC adaptor for charging.

8. \(\Psi \) (Microphone)

Uses for video conference, talking, and sound recording.

9. (Earphone) jack

Outputs audio to earphone, speakers and amplifier.

10.Speakers

Outputs high-definition sound.

11. A Home

Open Home. If you re viewing a left or right Home screen, opens the central home screen.

(After a short time without getting used, these buttons may shrink to dots or fade away, depending on thecurrent app. To bring them back, touch their location.)

at the bottom of the screen is permanent. Touch it to see all your apps and

The All Apps icon widgets.

widgets.
The middle of your Home screen can hold app and widget icons, plus folders.

* To open an app, folder, or widget, touch its icon.

* To see additional Home screens, swipe your finger quickly left or right.

BASIC OPERATION

Tap: Tap an item or App once to select the item or launch the App.

 
Long-tap: Tap and hold the current operating interface or area until the relevant items appear, then release.

Slide: Slide up/down/left/right to switch between different screens conveniently.

Drag: Tap and hold an icon on the desktop and drag to other position.

Pinch & Spread: Use two fingers to tap the screen, and adjust the distance between them to zoom in/out the current photo or web contents.



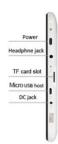

NOTIFICATIONS PANEL



After operating, tap to on the screen to turn off the Notifications panel.

WI-FI CONNECTION


Before creating the WI-FI connection, please ensure that your

WLAN network has been configured correctly.

- 1. Tap the on the main screen or in the Apps menu to enter the settings menu.
- Tap to select WI-FI item and switch it to ON. The unit will scan the available networks automatically.
- 3. Tap the desired network, and input the password if necessary. Then tap Connect.



EXPLORING THE MAIN SCREEN

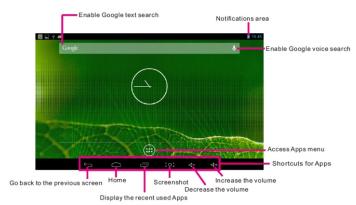

ANDROID APPS AND WIDGETS

Tap the button on the main screen to enter the Apps menu.

Display the available Apps



Notes:

- .Tap and hold an App or a widget, and drag it to a desired screen.
- .Tap and hold an App or a widget on the main screen until X appears, then drag it to touch the X to remove from the screen.

ANDROID MARKET

You can use your Google account to download various Apps from the Android Market. Set up your own account first to access the Android Market.

1. Tap the in the Apps menu. 2. Add a Google account to the unit.



After signing in, you can download your desired Apps from the Android Market.



SETTINGS

In the Setting menu, you can configure the unit, set app options, add accounts, and set other preferences.

1. Tap the on the main screen or in the Apps menus to enter the settings menu.



2. Tap and select an option and configure it according to the screen prompts.

INFORMATIONINPUT

When you need to input texts, tapthete xt in put box, the key boar d willa p pear auto matic ally. Afterinput, tap the butt on to close the keyboard.



Basice diting

textagain.

*Move the insertion point: Touch where you watto type. The curs or blinks in the new position, and ablueta bappears below it. Drag the tab to move the curs or.

*Select text: Touch & hold or double-t a p wit in the text. Then eares tword high light s, with a tabate achend of the select ion. Drag the tabs to chan g e the selection.

The tab disappea rs after a few moments, toget out of your way. To makei treappear, touch the

- * Deletetext: Touch tod elete selected text or the characters before the cursor.
- * Cut, copy, paste: Select the text you want to man ipulat e.

Then touch the Paste Paste Cut Cor Copy Copy button:



Tips & shortcuts

*Type capital letters: Touch the shift key \bigcirc once to switch to capital letters for one letter. Or touch & hold the shift key \bigcirc while you type. When you release the key, the lowercase letters reappear

*Turn caps lock on: Double-tap or touch & hold the shift key $\, \widehat{\,\,\,\,}$, so it changes to $\, \widehat{\,\,\,\,}$, Touch the shift key $\, \widehat{\,\,\,\,}$ again to return to lowercase.

*Show numbers or symbols: Touch the ?123 key. To see more choices, touch the ~\{ key.

*Type special characters: Touch & hold the shift key $\, \widehat{\,\,\,\,\,\,} \,$ while you touch a key with a small gray character in its corner to enter the gray character.

*Touch & hold any key to see alternative letters, symbols, or numbers, which you can then touch to type.

*Change input language or keyboard: Touch the key, then Input options menu appears. Choose the option you want to adjust.

Related settings: Setting > Language & input

Use folders

You can combine several appicons in a folder. Drop one appicon over another on a Home screen, and the two icons will be combined.

Organize your apps with folders

To make a new folder on your Home screen, stack one app on top of another.

From any Home screen, you can

- * Open a folder: Touch it. The folder opens.
- * Rename a folder: Touch its name.
- * Move icons around your Home screen: Touch, hold, and slide.
- * As with any folder, you can customize its contents.
- *After you open an app, you can usually adjust its settings by choosing items from its menu icon near the top of the screen

Start Gmail



From here, you can:

- 1.Read email. Touch a message to read it. Unread messages are bold.
- 2.Organize email. Check the box beside a message to select it. Then use the icons and menu at the top of the screen to manage the selected messages.
- 3. Change your settings. Touch the menu icon to change your preferences, add star, report spam, etc.

CAMERA.

Tap the on the main screen or in the Apps menu to take photos or record using the camera. The photos and videos will be stored into the File Manage automatically.



CONNECTING TO PC



WARNING

- .When connecting to PC, please follow the computer prompts
- strictly to avoid any data loss.
- .Do not disconnect the USB connection during data transferring: otherwise it will cause data damage or loss.
- 1. Connect the one end of the USB cable (supplied) to the unit,
- and the other end of the USB cable (supplied) to your PC.
- 2. Tap Turn on USB storage to transfer files.

CONNECTING TO EARPHONE

You can connect an earphone to the earphone jack for personal listening.

For protecting your hearing, always turn the volume down before plugging the earphones and use only the minimum volume setting necessary to hear your conversation or music.

CHARGING THE BATTERY



Notes:

- .Please charge only using the supplied AC power adaptor.
- .Charge your unit at least for 10hours at the initial two charges.
- After then you can charge just for 7 hours. Otherwise you may got problem with charging and battery life.

MUSIC

Tap the in the Apps menu to listen to your favorite music with the music player.

*Classify music in different categories

 


*You can use these categories to find your preferred music conveniently (or search music directly)

GALLERY

Tap the Apps menu and select WIDGETS then touch and hold to view photos stored in your unit or TF flash card.



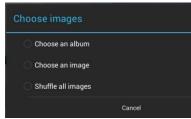

(Classify photo and video files in different categories)

Note:

. You can choose to view a photo, and use the toolbar on the upper-right corner to slideshow, delete, edit it, and view its detailed information.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.