

-7 inch 2G/3G phone Tablet PC

User Manual

www.haehne.cc

Please read all instructions carefully before use and keep for future reference.

The design and features are subject to change without further notice

IMPORTANT SAFFTY INSTRUCTIONS

Do not use this apparatus near water.

Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers)that produce heat.

Only use attachments/accessories specified by the manufacturer. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.

The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. Do not place any naked flame sources, such as lighted candles, on the apparatus.

The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

Please charge your unit when it is:

- -The battery icon indicates the power is lower.
- -The unit shuts off suddenly, even if restart again.
- -Tapping any button has no response.

Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit. When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this

We are not responsible for the memory loss caused by product damage, repairment or other reasons. Please operate strictly following these instructions.

Clean only with dry cloth. Don not use aerosol cleaners, benzene, anti-static liquids or any other solvents for cleaning

Refer all servicing to qualified service personnel. Turn off the unit or use airplane mode when use is prohibited, such as travelino in the aircraft.

The supplied USB cable is used for data transmission only.

Non-waterproof.

Attention: For your safety, please do not use the product when charging beware of accident

Warning: Wearing earphones at high volume for long time permanent hearing impairment may occur

Illustrations contained within this user manual are for representation only and subject to change.

PRODUCT OVERVIEW

1.Volume+/- buttons

Press to increase or decrease the volume level

2. (Return) button

Press to go back to the main screen.

3.Front camera

Take a photo or record a video.

4. (Power) button

Press and hold to turn on/off the unit

.Press to wake up the screen.

Press to lock the screen

5 TF card slot

Insert a flash card to extend the memory.

6. Micro USB port

Connect through USB cable to your PC for transferring data

Connect to AC adaptor for charging.

7. SIM card Slot

You can insert two SIM CARDS

8. (Earphone) jack

Outputs audio to earphone, speakers and amplifier.

9. Rear camera

Take a photo or record a video.

10. Function cover

11. telephone earcap

12. Screenshot function keys

Can perform image capture

13. Home kevs

Click it in any interface will return to main interface.17

14.Setting button

Setting button & Display recently-used application

15.Dialing keyboard

16.phone book

17.Menu button

This button will display in menu interface.

18:messaging

19 IE browser

20. (Microphone)

Uses for video conference, talking, and sound recording.

21.Speakers

Outputs high-definition sound.

CAUTION

Please charge the battery fully when use the unit for the first time.

.Please charge only using the supplied AC power adaptor.

.Charge your unit at least for 10hours at the initial two charges.

After then you can charge just for 7 hours. Otherwise you may got problem with charging and battery life.



Basic Setting

SIM Management

Voice call Click settings in main menu, choose SIM Management



Click voice call, choose defaulted SIM card

Video Call

Click settings in main menu choose SIM Management and click video call choose defaulted SIM card when makes video call



Wireless and Internet

- 1. Connect Wi-Fi
- 1) In the main menu or interface, choose setting application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet.
- 3)Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.



Bluetooth

Bluetooth function operation

Click setting application in main menu interface

Click bluetooth and open it.

If somebody open bluetooth in your surroudings, click search device in right above then MID will automatically search the bluetooth device nearby



Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.

After match successfully, choose the operation you want to

Data Usage

Check SIM card data usage



Check WIFI data usage

Click licon in right top, click Data Usage

Contextual Model

Open settings, click contextual model



Display

Adjust the screen brightness

Click Setting application procedure.

Click display, choose brightness.

Drag the portlito to adjust the brightness volume

HDMI setting

Use HDMI connector, in the right bottom of MID it will remind HDMI connector is connected.

Click HDMI setting

Audio

Open audio to realize HDMI audio output.

Click never, MID will never sleep.

Video Resolution

Click video resolution to adjust reslution

Battery

Click setting function, select battery, you can view the battery situation

Application program

Click setting application in Apps.

Select application, after enter, you can manage and delete installed application and check system used storage space and left space

View internal storage used space and left space,

Location service

Click setting, select location service

Google's location service

Open Google location service, you can use WIFI to positioning MID.

GPS satellites

Open GPS satellite, you can use GPS to positioning MID.

GPS Assistance

Open GPS Assistance, it can insrease the speed of GPS positioning, but you need to insert SIM card and use data transimission.

EPO setting

Click EPO setting, then check if EPO positioning information and EPO has turned on auto download.











Safety setting

Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

- 1.Click setting application in main interface.
- 2.Click safe.
- 3.Click locked the screen.
- 4. Choose picture in text setting area.
- Click next following the remind message.
- 6. The unlocked pattern board pop up, there are nine

touch spots, connect 4 points from vertical, horizontal or diagonal direction, move your finger from the screen when finish. The system will record yous new unlock pattern. 7. Click continue.

8. When you see the reminder, enter the unlock pattern, then click confirm.

Language and Input Method

Click setting, select language and input method, choose language to switch language

| Contraction |

Backup and Reset

Connect WIFI and login your google account, choose backup my data, system will backup your data into google server.

If you need to recovery factory reset, please click reset, if you need to formulate NAND, please click reset tablet

Music

Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play





Video

Enter video player: choose in main menu, choose the video vouwant to play.

Operation of video player button



Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

- 1.Click gallery application in main interface.
- 2. Enter into gallery, click the folder you want to view.
- 3. Click the picture you want to view, the system will play it in full screen mode automatically.
- 4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separete the fingers (gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures. Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures. Slide Show

- 1. Open a picture, use virtual key to click menu key, display menu selection.
- 2.Click slide show, it will auto loop play(or choose button in picture folder)

- 1.Click menu key to display menu selection.
- 2. Then click crop, click and drag related area to adjust the cropper.
- 3. Click cropper and drag it inside and outside to adjust the image.
 - 4. After adjust the size you want, click crop.
 - 5. If you wish to give up to crop, click cancel to return to picture browse. Edit

- 1.Click menu key, display the menu selection. 2.Click edit.
- 3. Adjust teh brightness, style, color, antialias setting in selection.
- 4.Click save.
- 5. If you want to give up edit, click return key, click not to return to picture browse.

CAMERA

Tap the on the main screen or in the Apps menu to takephotos or record using the camera. The photos and videos will be stored into the Gallery automatically.



GPS Function

Map of the third parties is required for MID internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

Enter into setting interface, click icon,

When positioning successfully, the blue parts will turn to green color, and it shows the latitude, longitude, height, speed, and the time of your location

The value indicates the signal strength, the positioning time is relavant to time zone in your setting, if the time is not inconsistent with real time in your location, please check the time zone in your setting is correct or not





Note:

when using GPS navigation, the first to download the Google map, and then download the offline map file package after use. If you use the GPS network, possible data errors caused by the network interruption, lead to inaccurate navigation.

Protective film

Note:

In order to prevent the scratches on the LCD screen during transport, our products come with an original screen protector. Hence, you may find the screen protector is not in perfect condition when arrived. Please peel off the screen protector before using the device. If you need an extra new screen protector, you could purchase it from local store or website.



TROUBLE SHOOTING

Check this list for a possible trouble shooting solution.

Cannot power on

Check the battery power if it is too low.

Connect the adaptor and power on again.

After powering on, the screen starts blinking and power off suddenly

Battery power is low, please charge in time.

No sound output

Check the volume setting, and adjust the volume level by tapping Volume+/- buttons.

Check if the audio file is damaged; try to choose another audio to play.

Cannot copy files or play audio files

Check if the connection is available.

Check if the unit has enough storage memory.

System has errors

Power off the unit and then power on again by holding and pressing the (Power) button.

Restore the system to factory default.

If you have any questions please contact us, website: http://www.haehne.cc Email:jinyjialtd@hotmail.com This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

ThisTablet PCmeets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: MD706 (FCC ID: 2AH96-MD706) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.372W/kg and on the body is 0.696W/kg.