


WIRELESS SPEAKER

Instruction Manual

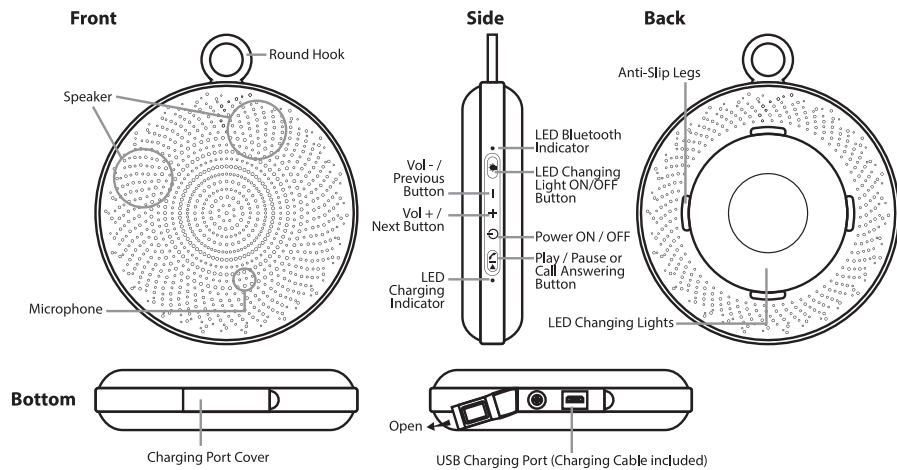

PAIRING THE SPEAKER

1. Ensure the wireless speaker is turned off. If it is not, please turn off the wireless speaker first before pairing.
2. Turn the wireless speaker on; the LED indicator will keep flashing blue. This will indicate your wireless speaker is now in pairing mode.
3. Place the wireless speaker and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 10 feet apart.
4. Ensure Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the wireless speaker "NV-05858" from the list of available Bluetooth devices. Blue LED light is on when pairing is successful.
6. If pairing is unsuccessful, turn off the wireless speaker first and repeat the steps. Once you have paired the wireless speaker with a device, the wireless speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

LISTENING TO MUSIC

Once the wireless speaker is paired to your device, you can stream music wirelessly to the wireless speaker. Select the track you wish to listen to on your device to listen via wireless speaker. If you encounter any problems while streaming, please refer to your device's user manual.

MANUAL KEY FUNCTIONS

Wireless speaker is equipped with a few shortcut keys. Please note the following functions.

1. Answering a Call
When a call comes in, you will hear a ring tone. Press the Play / Pause Button to answer the call. Press the Vol- / Vol+ buttons to adjust volume on your call.
2. Ending a Call
During talking, press the Play / Pause Button again to end or disconnect the call.
3. Redial
Long press the Play / Pause Button.
4. Reject a Call
When receiving a call, long press the Play / Pause Button to reject it.
5. Volume Control
When listening to music or on a call, you can adjust volume by holding the Vol + or Vol - button accordingly.
6. Next Track
Press the Vol + button to skip the current track.
7. Previous Track
Press the Vol - button to go back to the last track played.

CHARGE THE WIRELESS SPEAKER

1. The wireless speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the wireless speaker.
2. Open the charging port cover. Connect the USB cable to a computer USB port and the USB plug to the charging port on the wireless speaker. The red LED light will illuminate while the wireless speaker is charging.
3. When the battery is fully charged, the LED light will turn off automatically. Disconnect the wireless speaker at this point. The wireless speaker will then be ready for use.
4. When the battery is low, it will have a warning sound. When this happens, charge the wireless speaker.

Note: Never charge the item when the wireless speaker is wet. Please dry it with soft dry clean cloth. Please check and close the charging port cover properly before use.

PRODUCT SPECIFICATION

Frequency Response Range: 200Hz - 20KHz
 Driver Unit: Ø36mm each
 Speaker Output: 3W x 2
 Sensitivity: less than 75dB
 Rechargeable Battery Capacity: 1200mAh

CAUTION:

- The speaker is water proof. Please make sure the charging port cover is closed properly. Speaker side face up.
- Avoid contact with corrosive liquids and gas.
- Do not store this speaker in high temperature locations.
- Clean the speaker with a soft dry cloth. Do not use any chemicals or solvents to clean.
- Avoid dropping the speaker. If the speaker becomes damaged, discontinue use.
- Do not attempt to disassemble the unit.
- Do not dispose of the unit in fire as they may explode or combust.
- Please dry it with soft dry clean cloth after use.

TROUBLESHOOTING

1. If the Bluetooth does not function or powers off after powering on, the wireless speaker is low in power and needs to be recharged.
2. Wireless speaker and pairing device need to be within 10 feet of each other with no major obstacles in order to pair.
3. If the device paired successfully, but there is not sound,
 - a. Check to make sure the device and the wireless speaker are connected correctly.
 - b. Check whether volume is set at minimum.
 - c. Delete all paired Bluetooth devices from your device and pair the wireless speaker again.
4. The wireless speaker is making unwanted noises:
 - a. Make sure the devices are within effective operating distance and no obstacles are blocking the signal. If anything is blocking the signal, the sound may distort or be fragmented in the wireless speaker.
 - b. Water may go into the speaker side. Please release water from the speaker side.
 - c. The warning sound is appeared may be the low battery warning.
5. Some mobile devices support Bluetooth communication, but do not support Bluetooth music streaming.

BATTERY MAINTENANCE

1. In order to prolong battery life, turn off the wireless speaker when not in use.
2. If the wireless speaker is not in use for a long period of time, store it in a dry, safe location. The wireless speaker will need to be charged every 2 months to maintain battery life.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:—Reorient or relocate the receiving antenna.
 —Increase the separation between the equipment and receiver.
 —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 —Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.