

GETTING STARTED

Thank you for choosing the Digit 3D LED Art Panels by Monster Smart Illuminessence. This Ouick Start Guide will help you with setup and installation of your device.

WHAT'S IN THE BOX

- · 3 x Digit LED segments
- · 3 x Digit mounting brackets with 3M Command damage-free adhesive strip (preinstalled on each segment)
- · 2 x Digit connector cables
- · 1x Digit controller
- 1x Adhesive strip for controller (optional)
- 1x Power adapter (12V 3A, 6ft/1.8m cord)
- · 1x Quick Start Guide
- · 1x Design Guide

WHAT DO YOU NEED?

Cellphone or tablet with

Android 6.0 or higher / iOS 10 or higher

- · Wi-Fi router with an internet connection
- · Wi-Fi 2.4GHz 802.11n

Before setup, make sure your phone or tablet is connected to the 2.4GHz WI-FI network that your Digit will be placed on. You may also need to turn on location to find nearby devices.

TIP: Do you know your Wi-Fi network name and password? Write it down now if it's hard to remember.

ANYTHING ELSE?

If you really want to be precise during installation, you can use a level, but it's not required.

TIP: Save these instructions for future reference.

SETUP COMPLETE SETUP BEFORE INSTALLATION

STEP 1

Remove your Digit segments and all components from the bo Note that the mounting bracket and adhesive tape will be preinstalled on each segment.



DESIGN TIP: Pointing the LED pattern directional markers on the back of each panel towards or away from each other will create different lighting effects when panels are combined, but you can easily change this after installation!

STEP 2

Download the MONSTER SMART app from the App Store (for iPhone) or Google Play Store (for Android phones)



Open the MONSTER' SMART app and create an account by following the on-screen instructions.

Make sure your phone or tablet is successfully connected to the

2.4GHz WI-FI network that your Digit will be placed on


STEP 4

STEP 3

It is recommended to pair Digit in a location close to your router BEFORE installation. Segments do not need to be connected to he controller to pair.

Plug the power adapter into the bottom of the controller and connect the other end to a powered wall outlet. The LED indicator STEP 6 will begin blinking rapidly when it has entered pairing mode and is ready to pair. (Any connected segments will blink as well.)

change between pairing modes.

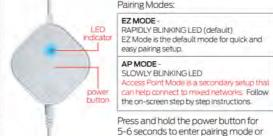

nster Smart devices only work on a 2.4GHz Wi-Fi network. Many newer home WI-Fi networks are mixed networks that are se

5GHz by default (ex: AT&T, Verizon) and you may need to use pairing mode to connect. If you still have difficulty, contact your internet Service Provider for assistance with 2.4GHz network setu



reconnect the power to cancel pairing and operate the product without WI-Fi. Advanced features will not be available.

NOTE: At any point during pairing mode you can unplug and

STEP 5

In the MONSTER SMART app, select the "+" in the upper right corner of the home screen to add a new device and then select "Lighting (Wi-Fi)" to add your device.



If needed, click "Net Pairing Mode" in the upper right to switch the default EZ pairing mode for 2.4GHz Wi-Fi networks to AP mode for mixed Wi-Fi networks

Confirm that the LFD indicator is SLOWLY blinking.

mode Wi-Fi password and click "Confirm". Follow the on-screen

Once complete, your device will be connected to the network

You can now use the app to add voice control (see pg 12), adjust

settings, create custom lighting effects, set schedules, and more!

Your Digit is now setup and you can proceed to installation.

AP Confirm the network is your mixed Wi-Fi network, enter your

instructions to set up your device via wireless access point.

Enter Wi-Fi Password

2.4GHz 5GHz

< X

Drily 2.40 Wt Flinetworks are supported

P -----

A

Confirm that the LED indicator is RAPIDLY blinking. Confirm that the network displayed is your 2.4GHz Wi-Fi (default) network, then enter your Wi-Fi password and click "Confirm"

Connecting Now


Digit 2

DESIGN TIP: Pointing the directional markers on the back of each segmen towards or away from each other will create different lighting effects when segments are combined, but you can easily change this after installation!

STEP 2

First, clean the mounting surface with rubbing alcohol and let of When you're ready to start, peel off the adhesive backing from one Digit segment, position the segment on the wall where you would like to begin your pattern, and press gently on the center.

 
NOTE: Do not attach this product to wallpaper, brick, the ceiling, or the floor. If desired, you can use a level to help align and place this first panel.



INSTALLATION

STEP 1

 Before installing anything, try out different shapes and patterns with your segments on the floor or a large table to decide what you would like to create! Consult the Design Guide for ideas.




- Plan to install your Digit near enough to a power outlet.
- Place the controller somewhere on the bottom of your pattern To ensure all segments light up, make sure all the connector
- Only one GREEN plug should ever be connected a single segment

STEP 4

STEP 3

ensure all other cables are connected RED side in and GREEN ends pointing out. Make sure to insert each connector fully into the port.

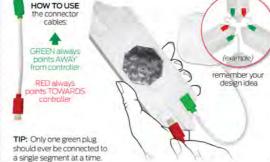

Remove the segment, leaving the bracket in place on the wall. Press firmly on the bracket for 10 seconds to ensure a strong hold.



NOTE: If you ever want to uninstall your Digit segment in the future, simply hold the bracket and SLOWLY stretch the damage-free removal tab down along the wall to remove. It can be reinstalled with new 3M strips (rated at least 3lbs).

Attach the controller and connector cables to your first segment as Build out your Digit pattern by repeating these steps with more desired to build your pattern. Plug the green controller cable in and segments and cables, moving away from the controller.

A. Peel off the adhesive backing on a new segment B. Place the new segment on the wall less than

3 inches away from the last segment.

NOTE: For flush corners in square designs, use the outside ports. See the Design Guide for details.



STEP 6

C. Remove the segment and press firmly on the bracket for 10 seconds D. Attach more connectors using the

RED side, then attach the open GREEN plug from the last segment. E. Replace the segment over the mounting bracket and make sure

all connections are secure.

STEP 5

centering it over the mounting bracket so it snaps into place.





STEP 7

Once your pattern is complete, plug the power adapter into the controller and plug the adapter end into a powered wall outlet.



NOTE: If desired, use the extra adhesive strip to secure the controller in place.

STEP 8

You're done! Your Digit is now setup, installed, and ready to use. Remember, you can always easily remove a segment to rotate the directional marker or add more connectors and segments from





YOUNS

add-on kits to change or expand your design.





With everything installed, return your first segment to the wall by NOTE: Ensure the directional marker | NOTE: Ensure the GREEN

is pointing in the desired direction for

TROUBLESHOOTING

HAVING TROUBLE WITH SETUP? Don't return this product to the retailer, we're here to help. Your Digit 3D LED Art Segments can be easily controlled by the Please call for customer support: 866-246-2008

O: Why is my device failing to connect to my Wi-Fi network A1: Make sure your phone or tablet is successfully connected to the 2.4GHz Wi-Fi network that your device will be placed on

A2: You may first need to enable and allow location services on

your phone or tablet to find nearby devices. A3: If your Wi-Fi network is a mixed 2.4GHz/5GHz network, to

using AP pairing mode for better results. A4: If you still have issues with your mixed network, you may need to access your router settings and/or call your Internet Service

Provider to create a separate 2.4GHz network. O: None of my segments are lighting up, what should I do?

A1: Check that the power adapter is connected securely both to the controller and to a powered outlet. The LED indicator should illuminate if it is powered and paired to Wi-Fi.

A2: Ensure that the GREEN controller plug is securely connected to the first segment and that it is the **ONLY** green plug connected. O: Why are only some of my segments not lighting up?

A1: To ensure all segments light up, make sure all the cables always point the GREEN side AWAY from the controller

A2: If you've just added a segment, try turning Digit off and on again.

O: What if the LED colors don't line up between segments A1: Pointing the directional arrows on the back of each segment towards or away from each other will create different lighting effects when they are combined. Try rotating some segments **NOTE:** Take care to hold down neighboring segments when

removing one. Always ensure all connections are secure O: I've added add-on kits, why are the LEDs flickering? A1: 1 Digit Power Kit can run up to 10 Digit Segments (1 x Starter Kit +

3 x Add-on Packs). Adding more than 10 x Segments will require grouping in an additional Power Kit to maintain normal operation.

For other frequently asked questions please visit our

CONTROLS

HOW TO USE

controller, using the **MONSTER** SMART app to access advanced and customizable lighting effects, or by using a compatible voice assistant product for hands-free operation

CONTROLLER FEATURES:

SETTINGS ADJUST +/-POWER AND PAIRING ·on/off (press) white brightness pair/reset color brightness (press and hold) scene speed MODE SELECT — CHANGE BETWEEN white mode WHITE SHADES · cool white, warm white, soft white scene mode CHANGE BETWEEN COLORS: · red, orange, vellow, green, cvan, blue, purple, pink CHANGE BETWEEN PRESET SCENES: 8 advanced scenes, 8 solid scenes, up to 4 custom scenes (requires Wi-Fi pairing and app)

NOTE: One controller can run up to 10 x Digit segments. Adding more than 10 x segments will require an additional controller and power kit to maintain normal operation.

APP CONTROL: CUSTOM SCENES VOICE CONTROL OPTIONA

The MONSTER'SMART app gives you full control over all the functions of the Digit, as well as the ability to edit preset scenes and create your own custom scenes. Below are some of the

PICTURE

— COLOR SETS

choose from 8 preset color sets

and adjust them as you wish

individual color adjustments

TIP: Brightness 0% = "off" color

TIP: Saturation 0% = white color

choose between 3 color changing

modes Fade Flash, and Music

choose between 9 patterns that

light effects will travel

determine what direction the LFF

adjust the color transition speed

submit and save your scene

Reactive (activates built-in mic)

or add your own colors and arrange

custom scene features for Digit

Edit Scene

or Changing Mode

lor Flash Speed

WORKS WITH **)** alexa

AMAZON VOICE CONTROL SETUP Make sure your Amazon Alexa device is installed and setup

STEP 1: Open the Alexa app and go to Skills in the menu

STEP 2: Search for and choose MADNSTER SMART STEP 3: Enable the Skill and authorize your account using

your login information

create your Monster Smart account



At any time, go to the Alexa app to set nicknames and rooms for your devices. You can also rename devices in the Monster Smart

Using the name Digit, or the name you assigned your Digit, you can ask Alexa to control your device just say "Alexa" and ask: "Turn on my Digit", "Set my Digit to blue", "Set my Digit to 50% brightness", and more!

Make sure your Google Assistant device is installed and setup.

STEP 1: Open the Google Home app, go to the Home menu, and tap the "+" button

STEP 2: Click "Set up device"

works with Google Assistant

STEP 3: Click "Have something already set up?"

GOOGLE VOICE CONTROL SETUP

STEP 4: Search for and choose MMONSTER' SMART and authorize your account using your login information

NOTE: Use the same login information that you used to

create your Monster Smart account

Set up Invite home member 3 to your home Set up new devices in your home Have something already set up? ink your smart home service: Add and manage monster smart Set up device Invite frome member

At any time, go to the Google Home app to set nicknames and rooms for your devices. You can also rename devices in the

STEP 1: Open the MONSTER SMART app and go to

WARRANTY instructions before using this product. If damage is caused by

NOTES

Do not drop, puncture, or disassemble this produc

· Do not install this product in any way other than what is outlined in this guide Do not attach this product to the ceiling or to the floor

Do not install this product on unpainted brick, uneven/ bumpy surfaces, or wallpaper

Do not use this product in small, enclosed locations that could limit the flow of air or trap excess heat

Do not expose this product to open flames

 Do not use the product in a strong magnetic field · Do not use this product for emergency lighting/exits

 Do not allow small children to operate, modify, or install this device unsupervised · Use a clean, soft cloth to clean - do not use any corrosive

cleaners/oils to clean

For indoor use only

1 Year Limited Warranty - Please read and understand al

failure to follow the instructions, this warranty is null and void SAFETY

Keep these instructions

Do not use this product in wet or very humid environment

or expose to dripping or splashing liquids of any kind Do not immerse in water

Le présent appareil est conforme aux CNR d'Innovation. Sciences et Développement économique Canada applicable Avoid long exposure to direct sunlight, which may cause damag

> (1) l'appareil nedoit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and

les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les

1 YEAR LIMITED WARRANTY

DIGIT | Model: MI B7-1035-RGB | Input: 12VDC 3A FCC ID: 2AHAS-MLB71035 | IC: 26069-MLB71035 | HVIN: MLB7-1035-RGB

The illustrated products and specifications may differ slightly from those supplied. a service mark of Apple Inc. Google and Google Play are trademarks of Google LLC may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party

FCC Compliance

making a claim under this Limited Warranty, the owner of the Product must (a) visit responsible for compliance could void the user's authority to operate the equipment. monsterilluminessence.com/support during the Warranty Period to provide notice of your warranty claim and descri This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 1! the alleged failure, and (b) comply with Jem Accessories (or its authorized distributor's) return shipping instruction: of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a Jem Accessories will have no warranty obligations with respect to a returned Product if it determines, at its reasonab residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed discretion after examination of the returned Product, that the Product is an Ineligible Product (defined below). Jer and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no quarantee that interference will not occur in a particular installation. If this equipment does cause except with respect to any Ineligible Product or products shipped internationally, for which the owner will bear all harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 4. WHAT THIS LIMITED WARRANTY DOES NOT COVER This Limited Warranty does not cover the following (collectively —Reorient or relocate the receiving antenna. Ineligible Products"): (i) Products marked as "sample" or "Not for Sale", or sold "AS IS"; (ii) Products that have been —Increase the separation between the equipment and receiver. subject to: (a) modifications, alterations, tampering, or improper maintenance or repairs; (b) handling, storage, —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help. RF Fynosure Statement

To satisfy FCC's RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device

This device complies with Innovation, Science, and Economic Development Canada license-exempt RSS standard(s)

ISEDC Warning

Operation is subject to the following two conditions: by applicable law, Jem Accessories disclaims all express, implied, and statutory warranties and conditions with respec (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the devi

aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

compliance. The minimum distance from body to use the device is 20cm. Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ

informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

Jem Accessories, Inc. Limited Warranty Policy for Monster Smart Products Last Updated: March 27, 2020

This limited warranty contains important information about your rights and obligations, as well as limitations and exclusions that may apply to you. 1. WHAT THIS LIMITED WARRANTY COVERS: PERIOD OF COVERAGE Jem Accessories. Inc. ("Jem Accessories"). 3

contained in this box ("Product") will be free from defects in materials and workmanship for a period of one year. Notwithstanding the foregoing, the Warranty Period for a factory refurbished Product is one (1) year, even if installe by a professional. If the Product fails to conform to this Limited Warranty during the Warranty Period, Jem Accessorie will, at its sole discretion, either (a) repair or replace any defective Product or component; with proof of purchase using

Brunswick Ave Edison, New Jersey, USA, warrants to the owner of the enclosed Monster Smart-branded product

original documentation. Repair or replacement may be made with a new or refurbished product or components, at Jem Accessories's sole discretion. If the Product or a component incorporated within it is no longer available, Jem The M Monster logo and IlluminEssence are trademarks or registered trademarks of Monster. Accessories may, at Jem Accessories's sole discretion, replace the Product with a similar product of similar function. Inc. or its subsidiaries in the U.S. and other countries and are used under license. Apple and the This is your sole and exclusive remedy for breach of this Limited Warranty. Any Product that has either been repaired or Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App store is replaced under this Limited Warranty will be covered by the terms of this Limited Warranty for the longer of (a) ninel (90) days from the date of delivery of the repaired Product or replacement Product, or (b) the remaining Warranty Pre-set-up required. Amazon, Alexa, and all related logos are trademarks of Amazon.com. Inc. Period. This Limited Warranty is not transferable from the original purchaser to subsequent owners. 2. TOTAL SATISFACTION RETURN POLICY If you are the original purchaser of the Product and you are not

to the product, including the implied warranties of merchantability and fitness for a particular purpose. To the maximum extent permitted by applicable law. Jem Accessories also limits the duration of any applicable implied warranties or conditions to the duration of this limited warranty. 6. LIMITATION OF DAMAGES In addition to the above warranty disclaimers, in no event will Jem Accessories be liable for any consequential, incidental, exemplary, or special damages, including any damages for lost data or lost profits, arising from or relating to this limited warranty or the product, and Jem Accessories's total cumulative liability arising from or related to this limited warranty or the product will not exceed the amount actually paid for the product by the LIMITATION OF LIABILITY The Jem Accessories online services at monsterilluminessence.com ("services") provide yo information ("product information") regarding your Jem Accessories products or other peripherals connected to your products ("product peripherals"). The type of product peripherals that may be connected to your product may change from time to time. Without limiting the generality of the disclaimers above, all product information is provided for vo convenience, "as is", and "as available". Jem Accessories does not represent, warrant, or guarantee that product

information will be available, accurate, or reliable or that product information or use of the services or product will provide safety in your home. You use all product information, the services, and the product at your own discretion an risk. You will be solely responsible for (and Jem Accessories disclaims) any and all loss, liability, or damages, including t your wiring, fixtures, electricity, home, product, product peripherals, computer, mobile device, and all other items an pets in your home, resulting from your use of the product information, services, or product. Product information provided by the services is not intended as a substitute for direct means of obtaining the information. For example notification provided through the service is not intended as a substitute for audible and visible indications in the home and on the product, nor for a third party monitoring service that monitors alarm state

8, YOUR RIGHTS AND THIS LIMITED WARRANTY This Limited Warranty gives you specific legal rights. You may also have other legal rights that vary by state, province, or jurisdiction. Likewise, some of the limitations in this Limited Warrant may not apply in certain states, provinces or jurisdictions. The terms of this Limited Warranty will apply to the exter permitted by applicable law. For a full description of your legal rights you should refer to the laws applicable in your jurisdiction and you may wish to contact a relevant consumer advisory service

satisfied with this Product for any reason, you may return it in its original condition to the retailer in compliance with

3. WARRANTY CONDITIONS; HOW TO GET SERVICE IF YOU WANT TO CLAIM UNDER THIS LIMITED WARRANTY Before

Accessories will bear all costs of return shipping to owner and will reimburse any shipping costs incurred by the owner

installation, testing, or use not in accordance with any quick start quide, manual or other instructions provided by Je

Accessories: (c) abuse or misuse of the Product: (d) breakdowns, fluctuations, or interruptions in electric power or the

telecommunications network; or (e) Acts of God, including but not limited to lightning, flood, tornado, earthquake, o

hurricane; or (iii) any non-Jem Accessories branded hardware products, even if packaged or sold with Jem Accessories

hardware. This Limited Warranty does not cover consumable parts, including batteries, unless damage is due to defect

recommends that you use only authorized service providers for maintenance or repair. Unauthorized use of the Produc

5. DISCLAIMER OF WARRANTIES Except as stated above in this limited warranty, and to the maximum extent permitte

in materials or workmanship of the Product, or software (even if packaged or sold with the product). Jem Accessori

or software can impair the Product's performance and may invalidate this Limited Warranty.

If you need to start a warranty claim for your Monster Smart device, please reach out to Customer Support by emailin customerservice@monsterilluminessence.com or calling our support number 866-246-2008.

Please allow 7-10 business days to process warranty claims. Customers located outside of U.S. will be

website at www.monsterilluminessence.com

add or edit vour scene thumbnail

add or edit your scene name

Use the same login information that you used to

Monster Smart app.

Using the name Digit, or the name you assigned your Digit, you can ask your Google Assistant to control your device, just say "Hey Google" and say: "Turn on my Digit", "Set my Digit to blue", "Set

my Digit to 50% brightness", and more!

Tap-to-Run Automation

Set a condition

Create Smart

! launch Tap To Run

Add to Siri

SIRI VOICE CONTROL SETUP

STEP 2: Tap "launch Tap To Run" and fill out the information

STEP 3: Once your Smart Scene is created and saved, click the

says "Add to Siri" to open the list of options

STEP 4: Select your new Tap To Run Smart Scene from the list

STEP 5: Create a custom phrase to say to Siri to run your Smart

Scene (this can be any verbal command)

the "Smart" menu, tap the "+" button to create a new

button that appears at the bottom of the screen that

Requires iPhone running iOS 12 or later

Tap To Run Smart Scene

and click "Add to Siri"

you've set up as your Tap To Run Smart Scene.

Now Siri can use your voice and custom verbal command to turn

your device on or off, activate your favorite lighting pattern, adjust

Digit at the same time as your other smart devices, or whateve

Add to Siri

dd a custom phrase Siri can use to tel

Smart Life to run this shortcut.

or its affiliates. All other brand names are trademarks of their respective owners. Neither Jem Accessories, Inc. nor Monster, Inc. is affiliated with the respective owners of their trademarks. Licensed and Manufactured by Jem Accessories, Inc. Edison, NJ 08817. Made in China.

responsible for all shipping costs.