

# ONE PAGE FOLDED, Black and White Copy



## AURORA LIGHT-UP BLUETOOTH® SPEAKER



**Package Contents:**  
Bluetooth® Speaker  
Micro USB Charging Cable  
Manual

855-999-8841 | [www.xtremecables.com](http://www.xtremecables.com)

### CONNECTING TO BLUETOOTH® DEVICES

Please make sure your battery is fully charged before using. To charge your Xtreme Aurora Bluetooth® Speaker, connect the supplied Micro USB to a valid power source (2.1Amp or not included). The LED indicator (7) will illuminate RED to indicate that the speaker is charging. After approximately 1.5 hours, charging time fully charge the speaker. (RECHARGING: BLUE/WHITE SPEAKER)

1. Power the Aurora Speaker on by sliding the On/Off power switch (8), at which point the LED ring (1) will illuminate.
2. The speaker will enter pairing mode. Enable Bluetooth® search mode on your Bluetooth® enabled device and search for the pairing speaker to connect; the speaker will indicate that the device has been paired successfully.

3. Press the **PAUSE** (2) button to power and play music.
5. To change to the next track, short press the Volume Up Button (6). To raise the volume, long press the Volume Up Button (6).
6. To change to the previous track, short press the Volume Down Button (7). To lower the volume, long press the Volume Down Button (7).
4. Slide the Source (8) to the OFF position to power down device.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly used and in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Change or modifications to this unit are not approved by the party responsible for compliance with FCC and the user's warranty to operate this equipment.
- The device has been evaluated to meet general RF exposure requirements. The device was used by Goodfellow (aka Steve) against wireless wireless wireless.

2



### FUNCTION KEY

1. LED Ring
2. Mode Button
3. Pause/Play Button
4. Volume Up/Down Key
5. Volume Down/Previous Track
6. Micro USB Port
7. LED Indicator
8. Power Switch

### LED/ON/OFF CHARGE MODES

Press the Mode Button (2) in the order shown below, to alternate between the different other charging modes:

1. Slow flash
  2. Single Glow (press the mode button while in "Slow Flash" mode to hold the device on/off)
  3. Fast Changing
  4. Music Reactive (Colors change to the beat of your music).
5. LED ring will turn off

### CARE AND MAINTENANCE

- Wipe the product with a damp cloth and dry thoroughly.
- Store the product in a dry area.
- Do not place the device on or near any hot surfaces.
- Please keep this manual in a safe place for future reference.

3

### ONE YEAR WARRANTY

Xtreme warrants its products for **ONE YEAR** against defects in manufacturing under regular consumer use with original receipt of retail purchase.

This warranty is our product's best effort to provide you with a replacement if needed, but we are not liable for the problem when the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the product, we require the customer must provide proof of the original receipt.

\*Any customers outside of the U.S. will be responsible for shipping and handling charges. If replacement is required that is not due to a manufacturing defect, there is not a replacement direct shipping and handling will be applied.

**XTREME'S WARRANTY IS LIMITED TO OUR PRODUCTS ONLY. OUR WARRANTY DOES NOT COVER THE REPLACEMENT OR REPAIR COST OF ANY THIRD PARTY ACCESSORY, ELECTRONIC DEVICE OR PERSONAL PROPERTY.**

For instructions about how to obtain warranty service for your product, please contact Customer Service at [customer.service@xtremecables.com](mailto:customer.service@xtremecables.com)

### IMPORTANT

- Do not use the product if it has been damaged in any way.
- Do not use the speaker for anything other than its intended use.
- Keep out of reach of children as this product is not a toy.

### REGULATIONS

Bluetooth® Speaker: FCC ID: A60000-1000000  
USB Speaker: FCC ID: A60000-1000000  
Charging Cable: FCC ID: A60000-1000000

4