


Double Sided, Black and White

XBS9-1058-SIL Manual




Front

COVER PAGE



<p>SAFETY AND CARE INSTRUCTIONS</p> <ul style="list-style-type: none"> Do not attempt to disassemble the unit. Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty. Do not puncture or harm the exterior surface of the product in any way. Do not drop or let the unit fall from high places, as doing so may damage the device. Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty. This product is not a toy. Keep out of reach of children. Do not expose batteries or battery pack to excessive heat or open flame. Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and/or distort certain parts. Do not use abrasive cleaning solvents to clean the unit. In order to prolong battery life, turn off when not in use. Do not use the product if it has been damaged in any way. Do not use the speaker for anything other than its intended use. Keep out of reach of children as this product is not a toy. <p>SPECIFICATIONS</p> <table border="1"> <thead> <tr> <th>PORTABLE SPEAKER</th> <th>HEADPHONES</th> <th>MAGNETIC EARBUDS</th> </tr> </thead> <tbody> <tr> <td>300mAh Battery</td> <td>200mAh Battery</td> <td>55mAh Battery w/ protection</td> </tr> <tr> <td>Wireless Range: 33ft</td> <td>Wireless Range: 33ft</td> <td>Charging Time: 2 Hours</td> </tr> <tr> <td>Charging Time: 2 Hours</td> <td>Charging Time: 2 Hours</td> <td>Play Time: 2-3 Hours</td> </tr> <tr> <td>Play Time: 2-3 Hours</td> <td>Play Time: 2-3 Hours</td> <td>Electroplating finish</td> </tr> </tbody> </table> <p>WHAT'S INSIDE</p> <ul style="list-style-type: none"> Bluetooth® Speaker Headphones Earbuds 3 x Micro USB Charging Cable Manual 	PORTABLE SPEAKER	HEADPHONES	MAGNETIC EARBUDS	300mAh Battery	200mAh Battery	55mAh Battery w/ protection	Wireless Range: 33ft	Wireless Range: 33ft	Charging Time: 2 Hours	Charging Time: 2 Hours	Charging Time: 2 Hours	Play Time: 2-3 Hours	Play Time: 2-3 Hours	Play Time: 2-3 Hours	Electroplating finish	<p>FCC CAUTION</p> <p>Any changes or modifications not expressly approved by the part responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.</p> <p>ONE YEAR WARRANTY</p> <p>Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.</p> <p>For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com</p>		<p>XTREME® DIGITAL LIFESTYLE ACCESSORIES</p> <p>AUDIO ESSENTIALS BLUETOOTH® SPEAKER, HEADPHONES & EARBUDS</p>  <p>XBS9-1058-SIL 855.999.8041 WWW.XTREMECABLES.COM</p>
PORTABLE SPEAKER	HEADPHONES	MAGNETIC EARBUDS																
300mAh Battery	200mAh Battery	55mAh Battery w/ protection																
Wireless Range: 33ft	Wireless Range: 33ft	Charging Time: 2 Hours																
Charging Time: 2 Hours	Charging Time: 2 Hours	Play Time: 2-3 Hours																
Play Time: 2-3 Hours	Play Time: 2-3 Hours	Electroplating finish																

Back

<p>POWERING YOUR AUDIO DEVICES</p> <p>For best sound performance, please be sure battery is fully charged on your device before use. For best results (or to charge fast) do not use devices while charging.</p> <p>CHARGING THE BLUETOOTH® PORTABLE SPEAKER</p> <p>To charge your Xtreme Bluetooth® portable speaker, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adapter not included). LED indicator will illuminate RED to indicate that the speaker is charging. Allow approximately 2 hours charging time to fully charge the speaker. When battery is fully charged, the LED will turn off.</p> <p>CHARGING THE BLUETOOTH® HEADPHONES</p> <p>To charge your Xtreme Bluetooth® headphones, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adapter not included). The LED charging indicator will turn red, indicating that the headphones are charging properly. When the LED indicator turns off, the headphones are fully charged (To maximize the life of the battery, do not charge more than 2 hours).</p> <p>CHARGING THE BLUETOOTH® EARBUDS</p> <p>To charge your Xtreme Bluetooth® earbuds, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adapter not included). Allow approximately 2 hours charging time to fully charge the earbuds.</p>	<p>OPERATING YOUR AUDIO DEVICES</p>  <p>OPERATING THE BLUETOOTH® SPEAKER</p> <ol style="list-style-type: none"> Turn the Bluetooth® Speaker on by switching the power switch to the ON position. The LED accent ring will flash indicating that the device is in pairing mode. Enable Bluetooth search mode on your Bluetooth® enabled device and select pairing name "HELIX" on your Bluetooth® device list. Once the speaker has successfully connected, the LED accent ring will continue to flash. To power down the Speaker, switch the power switch to the OFF position. The LED accent ring will turn off. 	 <p>OPERATING THE BLUETOOTH® HEADPHONES</p> <ol style="list-style-type: none"> Turn the headphones on by holding the multi-function button ▶ for 3 seconds. The LED light indicator (4) will begin flashing blue and red. The headphones will enter pairing mode. Enable Bluetooth® search mode on your audio device and search for pairing name "ONYX" and select it on your audio device. Once the headphones have been successfully connected, the LED will flash blue. Press the Multifunction Button ▶ to answer calls, pause and play and hang up call. To change to the next track, press the ▶ button To change to the previous track, press the ◀◀ button To raise volume, press and hold the Volume "+" Button To lower volume, press and hold the Volume "-" Button To power down the headphones, hold the multi-function button ▶ for 5 seconds. The LED light indicator will flash red 3 times and remain off. To use headphones from a wired audio source, plug in a 3.5mm audio cable into the "Aux" port (Aux cable not included). The headphones will automatically switch from "Bluetooth" mode to "Auxiliary" mode. (Please note that the music controls on the headphones will not function while in auxiliary mode). 	 <p>OPERATING THE BLUETOOTH® EARBUDS</p> <ol style="list-style-type: none"> Turn the Bluetooth® earbuds on by holding the Ⓞ button for 2 seconds. There will be a startup sound and the LED indicator will begin flashing blue and red. The earbuds will enter pairing mode. Enable Bluetooth® search mode on your audio device and search for pairing name "ELECTRA" and select it on your audio device. Once the earbuds has successfully connected, your audio device will state that the earbuds has been successfully connected. The LED indicator will turn off. Press the Ⓞ button to answer calls, pause and play and hang up call. To raise volume, long press Volume "+" Button . To change to the next track, short press the Volume "+" Button. To lower volume, long press the Volume "-" Button. To change to the previous track short press the Volume "-" Button. To power down earbuds, hold the Ⓞ button for 2 seconds, until the LED indicator will remain off.
--	--	---	---