

Power/WPS	OFF: I Flash	ON: DC38 is powered on. OFF: DC38 is not receiving electrical power. Flashing: WPS connection is established or WPS signal of another device is expected.			
LAN WAN/LAN	OFF:	ON: The Ethernet port is connected. OFF: The Ethernet port is disconnected. Flashing: Data transferring			
Vi-Fi Signal					
Mode				Description	
Mode AP/Router	ON	ON	ON		
	ON ON	ON ON	ON ON		
AP/Router Repeater				Wi-Fi signal output power 100% Excellent reception signal	
AP/Router	ON	ON	ON	Wi-Fi signal output power 100% Excellent reception signal strength 50% to 100% Good reception signal	





Wireless-N More Range for Warden Network		Log Off
Wizard Repeater State A Repeater Note of A Repeater Note	Vill AFTReader Inserved	Wireless States Mode Repeater Status Scatting Caractic Wireless N 1 Clannel 11 Security Dualied Clents 0
Winford Windows Windows	Network	19 192.548.10.1 DBCP Auto MAC 80.32545782.04
Panseed Time Zone Settings Save:Robust Settings Upped Finance	i	Ferroware Version RTN2-AW.GD R3464 1.20150209 Upture Oday the Om 33 s Build Turne







Wireless-N More Range for Wireless	Network	Log Off	SSID
Wizard AP	Á E Al-Ruder Harret	Windes States Mole AP Statu Fahled SSID Windes N Clamol 11 Socurty Dualed Clamb 0	Security ty
Wircless Back Softige Back Softige Advanced Softige Wirdless	Network	19 192.144.10.1 DBKP Anto MAC 80.355457.8294	Security ty
Parrored Tax Zore Series See Relaad Series Upgade Ference Reloot Desc	r i	Ferrovan Version RTN2-AW-GD R3464 120210200 Option Gdyth 2na35n Built Time Main Feb 9 10.50212 CST 2015	Click on " <b>Ap</b> After the reb SSID and the
The following message	. ,	n you web browser:	Configur Connect DC: wireless rout
SSID Channel Security type	Wireless-N Auto WPA2 PSK		WICKSFOOL
Security key	Umask		


SSID	Wireless SSID of DC38	1. Set the 2. Plug D0
Security type	Setup the wireless security and encryption to prevent unauthorized access and monitoring. Support 64/128-bit WEP, WPA, WPA2, WPA/WPA2 encryption methods.	3. Connec 4. Follow 5. After lo <b>Router</b> bi
Security type	The "Password" of DC38	WITH
ter the reboot h ID and the Wire	<i>`</i>	Wizar
Configure th	e Wireless Router Mode	Wi
nnect DC38 to reless router.	a DSL or cable modem and DC38 works as a regular	War
		Choose y If <b>Dynam</b> from the
ADSL	WAN	you can g
		1







<ul> <li>Internet service providers of Automatically obtain an IP</li> <li>ADSL Dial-up (PPPoE)</li> </ul>	offer a fixed IP address (static IP) address (dynamic IP)
User Name	
Password	
	Unmask

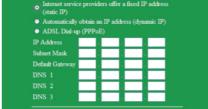

Change your passw User name New password	
	Apply Cancel sword unchanged, click "Cancel". Click

©		
		Save
	Load Settings	Upload
		Load Default



