# The MeatProbe Ultimate BBQ Set Ouick Start Guide





## Step 1 | Download

Download The MeatProbe app on iOS or Android to your mobile device.

Visit theMeatProbe.com/app



### Step 2 | Power

Use the included Micro USB cables to power on the Bridge and Charger with a USB charger or a USB battery pack for portability. Place a MeatProbe into the Charger to begin charging.



## Step 3 | Setup

Open the app and follow the instructions to setup an account and the MeatProbe Bridge. Attach the included antenna to the threaded antenna post on the Bridge.



## Step 4 | WiFi

When prompted, enter your WiFi credentials. The WiFi icon will appear on the Bridge's LCD screen when the connection is successful. When turned on, the Bridge will always connect to the last connected WiFi.



#### Step 5 | The MeatProbe

It is recommended to charge each MeatProbe for at least an hour before the first use. If the Charger's LED is flashing orange, the MeatProbe has enough power for most cooking situations.



#### Step 6 | Let's cook!

With everything setup and ready to go, add a recipe in the app and get cooking. Enjoy your perfectly cooked meat!

Any Questions or Problems? Visit us at http://grandex.com.tw/support

## **FAQ**

#### What are the meanings of the audible/visual alerts?

Long beep - Cook is added/edited.

Three beeps repeated and internal temperature icon flashes – Early warning temperature has been reached.

Constant beeps - Target temperature has been reached.

Two beeps repeated and ambient temperature icon flashes – Ambient temperature is too low or too high.

Two short beeps repeated every five seconds and Bluetooth icon flashes or is gone – Bridge has lost connection with the MeatProbe.

One short beep repeated every ten seconds and name of cook flashes – The MeatProbe has low batteries.

#### How do I stop the audible alarm?

Clinking the next button will stop the alarm.

#### How do I turn off the LCD backlight?


Long press and release the button. This will toggle between analways on backlight and a temporary 30 second backlight. Clicking the next button will then turn on the backlight.

#### Can I toggle between F and C?

You can change to your preferred temperature scale in the app settings and recreate the cook.

## Do I need to setup the WiFi each time I use the Bridge?

The Bridge remembers the last connected WiFi. If it is unable to connect on boot, it will rebroadcast its WiFi signal so that it can be connected to another WiFi.

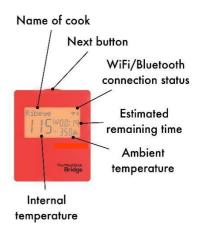

Any Questions or Problems? Visit us at http://grandex.com.tw/support

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm