



Register your new Bosch now:  
[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)



**Dishwasher**  
**SHEM78WH5N**



**BOSCH**

en-us Operating instructions

# Table of contents

- 4** Safety Definitions . . . . . 4
- C** IMPORTANT SAFETY INSTRUCTIONS . . . . . 5
- C** Causes of Damage . . . . . 8
- \*✳** Getting Started . . . . . 9
- O** Home Connect . . . . . 14
- +** Water softening system / special salt . . . . . 17
- Rinse Aid . . . . . 19
- Loading the Dishwasher . . . . . 20
  - Detergent . . . . . 29
- /** Dishwasher Cycles . . . . . 31
- O** Dishwasher Cycle Options . . . . . 33
- 1** Operating the Dishwasher . . . . . 36
- 2** Care and Maintenance . . . . . 40
- 3** Troubleshooting . . . . . 44
- 4** Customer Service . . . . . 54
- 4** Statement of Limited Product Warranty . . . . . 55
- 5** Installation and connection . . . . . 59

'HDU 9DOXHG &XVWRPHU,

7KDQN\RX IRU VHOHFWLQJ D %RVFK<sup>S</sup> GLVKZDVKHU. <RX KDYH MRLQHG WKH PDQ\ FRQVXPHUV ZKR GHDPDQG TXLHW DQG VXSHULRU SHUIRUPDQFH IURP WKHLU GLVKZDVKHUV.

7KLV PDQXDO ZDV ZULWWHQ ZLWK \RXU VDIHW\ DQG FRQYHQHLHQFH LQ PLOG, DQG WKH LQIRUPDWLRQ FRQWDLQHG KHUHLQ LV YHU\ LPSRUWDQW. :H KLJKO\ UHFRPPHQG WKDW \RX UHDG WKLV PDQXDO EHIRUH XVLQJ \RXU GLVKZDVKHU IRU WKH ILUVW WLP.

7R OHDUQ PRUH DERXW \RXU GLVKZDVKHU DQG DYDLODEOH DFFHVVRULHV, DV ZHOO DV PDQ\ RWKHU WRS TXDOLW\ %RVFK DSSOLDQFHV, YLVLW RXU ZHE VLWH DW:

ZZZ.ERVFK-KRPH.FRP/XV (86\$)

RU

ZZZ.ERVFK-KRPH.FD (&DQDGD)

:KLOH WKHUH, GRQ\ WIRUJHWWR UHJLVWHU \RXU QHZ GLVKZDVKHU E\ FOLFNLQJ RQ WKH 6XSSRUW\ WDE RU ILQOLQJ RXW WKH SURGXFW UHJLVWUDWLRQ FDUG HQFORVHG ZLWK \RXU QHZ XQLW.

,I \RX KDYH DQ\ TXHVWLRQV RU FRPPHQWV, SOHDVH FRQWDFW XV E\ SKRQH DW:

1-800-944-2904

RU ZULWH XV DW:

%6+ +RPH \$\$\$OLDQFHV &RUSRUDWLRQ

1901 ODLQ 6WUHHW, 6XLWH 600

,UYLQH, &\$ 92614

---

## 4 Safety Definitions

---

### 9 **WARNING**

This indicates that death or serious injuries may occur as a result of non-observance of this warning.

---

---

### 9 **CAUTION!**

This indicates that minor or moderate injuries may occur as a result of non-observance of this warning.

---

---

### **NOTICE:**

This indicates that damage to the appliance or property may occur as a result of non-compliance with this advisory.

---

**Note:** This alerts you to important information and/or tips.

# 9 **IMPORTANT SAFETY INSTRUCTIONS**

READ AND SAVE THESE INSTRUCTIONS

This dishwasher is provided with Installation Instructions and this Use and Care Manual. Read and understand all instructions before

using the dishwasher.

This dishwasher is intended for use up to a maximum altitude of 4,000 meters above sea level.

To reduce the risk of fire, electrical shock, or serious injury, observe the following:

---

9 **WARNING**

**RISK OF INJURY OR DEATH!**  
Misuse of the dishwasher can result in serious injury or death. Do not use the dishwasher in any way not covered in this manual or for any purpose other than those explained in the following pages.

---

---

9 **WARNING**

**RISK OF INJURY!**  
Severe injury and/or product damage could result from the use of unauthorized service technicians or non-original replacement parts. All repairs must be performed by an authorized service technician using only original equipment factory replacement parts.

---

---

9 **WARNING**

**RISK OF ELECTRICAL SHOCK OR FIRE!**

Electrical shock or fire could result if the electrical supply for the dishwasher covered in this manual is incorrectly installed or if the dishwasher has been improperly grounded. Do not use the dishwasher covered in this manual unless you are certain the electrical supply has been correctly installed and the dishwasher has been properly grounded.

---

---

9 **WARNING**

**HEALTH HAZARD!**

Never use harsh chemicals to clean your dishwasher. Some chloride-containing products can damage your dishwasher and may present health hazards!

---

### Grounding Instructions

This appliance must be grounded to a metal, permanent wiring system or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the dishwasher. See the Installation Instructions included with this dishwasher for more information on electrical requirements.

# 9 IMPORTANT SAFETY INSTRUCTIONS

# 9 IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

---

## 9 WARNING

---

### RISK OF ELECTRIC SHOCK!

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor.

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service technician if you are in doubt whether the appliance is properly grounded.

---

## Safe Operation

Use this dishwasher only for its intended function, which is the washing of household dishware and kitchenware rated as dishwasher safe.

Use only detergents or rinsing agents recommended for use in a dishwasher, and keep them out of the reach of children.

---

## 9 CAUTION!

---

When loading items to be washed:

- Locate sharp items so they are not likely to damage the door seal.
- Load knives and other sharp utensils with their HANDLES UP to reduce the risk of cut-type injuries.

- Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent. For plastic items not so marked, check the manufacturer’s recommendations.
  - Do not operate your dishwasher unless all enclosure panels are in place.
  - Do not tamper with or override controls and interlocks.
- 

Do not abuse, sit or stand on the door or dish racks of the dishwasher.

---

## 9 WARNING

---

### RISK OF INJURY!

To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.

---

NSF/ANSI 184 Certified residential dishwashers are not intended for licensed food establishments.

Ensure that you follow the safety instructions, even when they are out of reach while operating the appliance via the Home Connect app. Also follow the instructions provided by the app.





# 9 IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

### Child Safety

To reduce risk of injury, do not allow children to play in or on the dishwasher.

When children become old enough to operate the appliance, it is the responsibility of the parents/legal guardians to ensure the children are instructed in safe practices by qualified persons.

### Proper Care and Maintenance

---

#### 9 WARNING

**RISK OF EXPLOSION!** Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more.

Hydrogen gas is explosive. Before using a dishwasher that is connected to a hot water system that has been unused for two weeks or longer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is explosive, do not

smoke or use an open flame during this time.

---

Remove the dishwasher door to the washing compartment when removing an old dishwasher for service or discarding.

To avoid floor damage and possible mold growth, do not allow wet areas to remain around or under the dishwasher.

To avoid dishwasher damage, do not allow water to remain in your dishwasher systems through extended periods of freezing temperatures. Freezing temperatures can damage the water fill valve and potentially other components of your dishwasher.

---

#### **NOTICE:**

It is highly recommended for the end user to become familiar with the procedure to shut off the incoming water supply and the procedure to shut off the incoming power supply. See the Installation Instructions or contact your installer for more information.

---

---

#### 9 WARNING

**STATE OF CALIFORNIA PROPOSITION 65 WARNINGS!**  
This product contains one or more chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

---

---

## Causes of Damage

---



### **NOTICES**

---

- Never use steam cleaning products to clean your dishwasher. The manufacturer will not be liable for the possible damages or consequences.
  - To avoid possible dishwasher damage, do not use harsh chemicals, abrasive cleaners, scouring pads (metal or plastic), or abrasive cloths/paper towels to clean your dishwashers exterior door panel. Your dishwasher's exterior door panel can be damaged by doing so.
  - To avoid dishwasher damage, do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.
-

## ✧ Getting Started

### Appliance overview

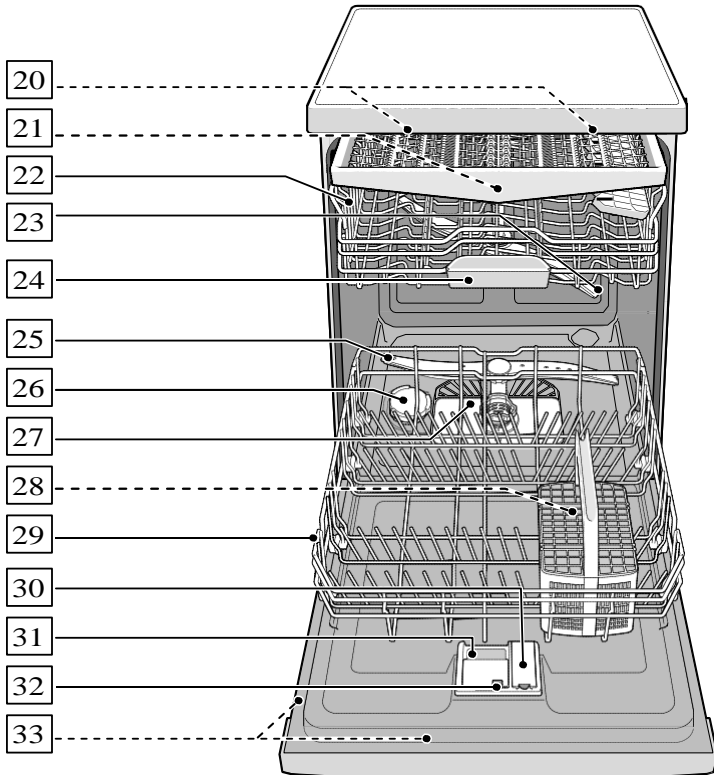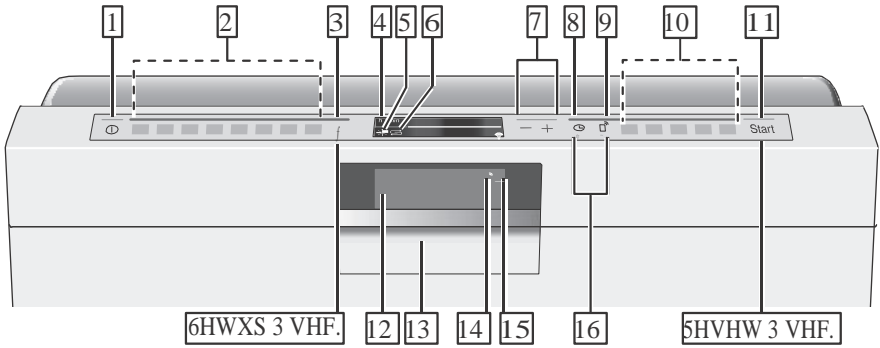

The numbers stated below refer to the overview images on the previous page of this manual.

 
 

 


 

 

 
 
 
### Operating panel

-  On/Off button
-  Wash cycles\*\*
-  Info button
-  Digital display
-  Rinse aid refill indicator
-  Salt refill indicator
-  Selection buttons
-  Time preselection
-  Remote Start button
-  Wash cycle options\*\*
-  START button
-  Front display \*
-  Open door button
-  Remote start display
-  WLAN display
-  < > button

\* optional feature which may or may not be included with your dishwasher






\*\*number of wash cycles and options varies on specific model number

### Dishwasher interior components

   
-  Interior light \*
-  Third rack\*
-  Upper rack
-  Upper spray arm
-  Detergent tab tray
-  Lower spray arm
-  Dispenser for special salt
-  Filters
-  Silverware basket \*
-  Lower rack
-  Rinse aid dispenser
-  Detergent dispenser
-  Lock for detergent dispenser
-  Rating plate


 
 
\* optional feature which may or may not be included with your dishwasher

### Display indicators

-  Cycle time remaining
-  **Refill rinse aid indicator**  
Lights up when rinse aid is low
-  **Refill salt indicator**  
Lights up when salt is low
-  **Remote Start indicator**  
Function Remote Start is set
-  **WLAN indicator**  
Wireless network connection is active

### Info button



 
 

 
 
The Info button  can be used to display additional wash cycle information.

1. Press the Info button .
2. Press the wash cycle button. Information on the selected wash cycle is indicated on the display window at the top .
3. To leave, press Info button .

### Time setting

When the appliance is switched on for the first time, the time starts at 12:00 o'clock.

#### Set the time as follows:

1. Open the door.
2. Switch on ON/OFF switch .
3. Press Info button  for 3 seconds until the following text is indicated on the display window at the top  :  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**
4. Keep pressing button  until the time setting is indicated on the display window at the top .
5. Make the setting with setting buttons . If the selection buttons  are held down, the set values are changed in 10-minute increments.

6. Press and hold the Info button  for 3 seconds.

The selected setting has now been stored.

**Note:** If the appliance was disconnected from the power supply for a prolonged period, the time starts at 12:00 o'clock. Set the time.

## Switching on the appliance for the first time

When the dishwasher is switched on for the first time, you are taken directly to the settings for switching on the appliance for the first time.

**Note:** If you select Home Connect during the initial start-up, make further settings via your dishwasher App. Observe the supplied Home Connect documents.

The following text is indicated on the display window at the top @:




**Scroll with < >**

**Set with + -**

**Leave with Setup 3 sec.**

The required settings for switching on the appliance for the first time are listed in the table below.

**Change the setting as follows:**

1. Keep pressing button  until the required setting is displayed.
2. Make the selection with setting buttons .
3. Press and hold the Info button  for 3 seconds.




 
The selected setting has now been stored.

Settings Switching on the appliance for the first time	Factory setting	Infotext by pressing Info button
Language	American English	Language selection.
Home Connect	Manual/ Home Connect	Manual/Home Connect
Time format	24h	12h or 24h.
Time setting	12:00	Set the current time.
Water hardness	°E 0	Setting water hardness. When using Multitabs, select the lowest setting.
Rinse aid disp.	Level 5	Amount of rinse aid affects drying. When using Multitabs, select setting 0.


## Settings

The dishwasher has been preset with certain settings for your convenience. You can change these factory setting.

### Change the setting as follows:

1. Open the door.
2. Switch on ON/OFF switch .
3. Press Info button  for 3 seconds until the following text is indicated on the display window at the top  :  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**
4. Keep pressing button  until the required setting is displayed.


5. Make the selection with setting buttons + - .

6. Press and hold the Info button  for 3 seconds.

The chosen setting has now been stored.

You have the option of resetting all changed settings back to the original factory settings.

**Note:** When you reset your dishwasher to the factory settings, you are taken directly to the settings for switching on the appliance for the first time.

Setting	Factory setting	Infotext by pressing Info button 
Time setting	12:00	Set the current time.
Time format	24h	12h or 24h.
Time display	Time	Show end of wash cycle with display "Finish in" or "Finish at".
Language	American English	Language selection.
Water hardness	°E 0	Setting water hardness. When using Multitabs, select the lowest setting.
Rinse aid disp.	Level 5	Amount of rinse aid affects drying. When using Multitabs, select setting 0.
Sensor setting	Standard	Adjustment of soiling detection for optimum cleaning result.
Extra dry	Off	Improved drying for glasses and plasticware.
Eco forecast	Off	Show the water and energy consumption.
Auto Power Off	Off	Appliance automatically switches off at end of rinsing process.
Emotion Light *	On	Interior light.
Front display *	On	The front display can be selected.
Remaining time proj. *	On	While wash cycle is running, status information is projected onto floor.
Infolight *	On	Light is projected to signal an active wash cycle.

\* depending on the features of your dishwasher

Setting	Factory setting	Infotext by pressing Info button (
Start wash cycle	Auto 130-150° F	When switching on, the last selected wash cycle appears.
Tone volume *	Level 2	Volume of signal at end of wash cycle.
Button volume	Level 2	Volume when using buttons.
Child-proof lock *	Off	Activated child-proof lock impedes opening of door.
Wi-Fi	on/off	Switch wireless network connection on/off.
Network login	Manual/Automatic	Check WPS function on router. No WPS function: Manual WPS function: Automatic
Connect to the app	Start with +	Connect dom. appliance to mobile terminal device.
Eco drying *	On	Door opens automatically at the end of the wash cycle.
Greeting	On	When switching on the appliance, the brand logo can be deselected.
Factory setting	Reset	Resetting to the factory setting.

\* depending on the features of your dishwasher

### Notes

- The “Network login” menu option is only available if Wi-Fi has been switched on.
- The “Connect to App” menu option is only available if a connection to the home network has been established.

## Home Connect

This dishwasher is Wi-Fi capable and can be remotely controlled via a mobile device.

If your dishwasher does not connect to the home network, you can also operate the dishwasher manually by pressing the buttons.

### Info button

The Info button **8** can be used to display additional wash cycle information.

1. Press the Info button **8**.
2. Press the wash cycle button. Information on the selected wash cycle is indicated on the display window at the top **@**.
3. To leave, press Info button **8**.

### Setting up the App

To be able to operate the appliance via Home Connect, the Home Connect App must be installed on your mobile terminal device.

Observe the supplied Home Connect documents with regard to this.

Follow the steps specified by the App to implement the settings.

### Setting up Home Connect

 
You can set your dishwasher by pressing the remote start button **h** or proceed as follows:

1. Open the door.
2. Switch on the ON/OFF switch **C**.
3. Press Info button **8** for 3 seconds until the following text is indicated on the display window at the top **@**:  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**

4. Keep pressing button **>R** until the required setting is indicated on the display window at the top **@**.
5. Make the setting with setting buttons **+ - X**.
6. Press and hold the Info button **8** for 3 seconds. The chosen setting has now been stored.

### Wi-Fi

In the Wi-Fi menu you can activate the wireless network connection with "on" and deactivate it with "off".



#### Notes

- If you have selected the Wi-Fi "off" setting, the "Network login" and "Connect to App" settings are not available.
- Remote control of the appliance requires a stable wireless network connection.

### Network login

The "Network login" menu option is not available unless you have activated Wi-Fi.

In the "Network login" menu you can select between "Autom./WPS" and "Manual" to connect the dishwasher to your home network.



**Automatic:** Connect to the home network using the WPS function of your router.





**Manual:** Connect your mobile terminal device to the Home Connect network. The network settings are then manually entered using the Home Connect App to connect to your home network.

Following successful connection, the following text is indicated on the display window at the top @.



Observe the supplied Home Connect documents with regard to this.

 
## Connect to App

The “Connect to App” menu option is not available unless there was a connection to the home network.

The “Connect to App” setting establishes the link between the dishwasher, App and your user account.



Following successful connection, the following text is indicated on the display window at the top @.



Observe the supplied Home Connect documents with regard to this.

**About data protection:** When your Home Connect dishwasher is connected for the first time to a WLAN network which is connected to the Internet, your Home Connect dishwasher transmits the following categories of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure IT connection).
- The current software and hardware version of your dishwasher.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is activated the first time you use these Home Connect functions. Please note that the Home Connect functions can be used only in conjunction with the Home Connect App. Information on data protection can be accessed in the Home Connect App.

## Remote start button }h

When the dishwasher is connected to the home network, activate the dishwasher remote control by pressing the remote start button }h.


If the dishwasher has still not logged into Home Connect, access the Home Connect settings by pressing the remote start button }h.

Observe the supplied Home Connect documents with regard to this.

## Notes

- When the login process is complete, the remote start button }h goes out.
- To activate the remote control, press the remote start button }h.
- If the Home Connect Assistant was aborted during start-up, press the remote start button }h again.

## en-us Home Connect

- If the connection to the router fails, the WLAN  display flashes on the display.

## Wi-Fi without a connection to the Home Connect server



You can use the Home Connect App to disconnect from the Home Connect server.


The appliance is then locally connected to your mobile terminal device without however any connection to the Home Connect server.

**Note:** If you did not deactivate the connection to the Home Connect server, check your Internet connection.

## Remote diagnosis ~

Customer Service can use Remote Customer Service~ to access your appliance if you contact them.

### Notes

- You have to confirm Customer Service access on your appliance.
- You can switch off Remote Customer Service ~ using the ON/OFF switch  or deactivate Customer Service access in the Home Connect App.

## Declaration of Conformity



Robert Bosch Hausgeräte GmbH hereby declares that the appliance which features Home Connect functionality is in accordance with the essential requirements and the other relevant provisions of the directive 1999/5/EC. A detailed R&TTE Declaration of Conformity can be found online at [www.bosch-home.com](http://www.bosch-home.com) among the additional documents on the product page for your appliance.

:L-)L LV D UHJLVWHUHG WUDGH PDUN  
RI :L-)L \$OOLDQFH.

## + Water softening system / special salt

To ensure good rinsing results, the dishwasher requires soft water, i.e. water which is low in lime, otherwise limescale will be deposited on the utensils and interior container. Tap water above 7° dH (1.2 mmol/l) must be softened. The water is softened with special salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see following water hardness table).

### Water hardness table

DWHU KDUGQHV YDOXH f (	+DUGQHV UDQH	PPROIO	6HW YDOXH RQ WKH PDFKLQH
088	VRIW VRIW	081 1	0 - 8
9810	PHGLXP	1 281 .4	9-10
11812	PHGLXP	1 581 8	11-12
13815	PHGLXP	1 982 1	13-15
16820	KDUG	2 282 9	16-20
21826	KDUG	3 083 7	21-26
27838	KDUG	3 885 .4	27-38
39862		5 588 9	39-62

### Using a water hardness test strip

The strip will be included in the detergent sample kit.




 

#### Sample test strip

Kurzeintauchen (1 sec), leicht ab- schüteln und nach 1 min ablesen. 4 grün/grün/vert	Dip brief y (1 sec), shake of excess water and compare after 1 min. 4 green/green/vert	Plongez brièvement (1 sec), agitez l'excess d'eau et com- parez après 1 min. <3°dH <3,75°e <5,41 >4°dH >5°e >7,27 >8,4°dH >10,5°e >15,11 >14°dH >17,5°e >25,21 >21°dH >26,25°e >37,81	<b>AQUADUR®</b> Teststäbchen zur Bestimmung der Wasserhärte Test stick for determination of water hardness Bandelette pour déterminer la dureté de l'eau
--	--	---	--

## Adjusting the water softening system


The amount of salt dispensed can be set from **0** to **62°E**. Salt is not required at the set value **0-8**.

### Set the softening system as follows:

1. Ask your local water utility company for the water hardness value of the tap water.
2. Required setting can be found in the water hardness table.
3. Open the door.
4. Switch on ON/OFF switch .
5. Press Info button  for 3 seconds until the following text is indicated on the display window at the top @ :  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**
6. Keep pressing button  until the water hardness is indicated on the display window at the top @.
7. Make the selection with setting buttons + - .
8. Press and hold the Info button  for 3 seconds.

The chosen setting has now been stored.

## Using special salt


As soon as the low salt indicator  lights up on the digital display, salt should be topped off. Always refill with special salt immediately before switching on the appliance. This ensures that overrun special salt solution is immediately washed out and does not corrode the rinsing tank.

### NOTICE:

Detergent will destroy the water softening system! Never pour detergent into the salt dispenser.

**Top off the salt as follows:**

1. Undo the screw plug on the dispenser **1 R**.
2. Fill the dispenser with water (required only when switching on the appliance for the first time).
3. Add salt as illustrated (**do not use table salt or tablets**).  
The water is displaced and runs out.

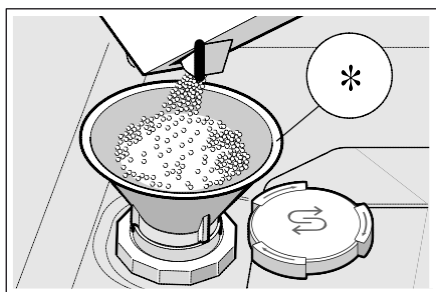

For more information about buying dishwasher salt, please contact customer service (1-800-944-2904).

## Using detergents with salt component

If combined detergents with a salt component are used, special salt can usually be omitted up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l). If the water hardness is over 21° dH, salt must be used.

## Switching off low salt indicator / water softening system

If the use of combined detergents with a salt component impairs the low salt indicator **P** on the control panel or the text on the display window at the top **@** (enough salt for x rinse cycles), the displays can be switched off.

Proceed as described under “Setting water softening system” and set the value to **0-8**. The water softening system and salt refill indicator are now switched off.

## Rinse Aid

To achieve proper drying, always use a liquid rinse aid, even if your detergent contains a rinse aid or drying additive.


**Note:** The dishwasher indicates low rinse aid by turning on the **Refill Rinse Aid** indicator. If this indicator lights up, you need to refill the rinse aid dispenser 9" by following the directions below.

### Adding rinse aid


#### NOTICE:

To avoid oversudsing or clogging, do not overfill the rinse aid dispenser 9". Wipe up any spills with a damp cloth.

1. Open the rinse aid dispenser 9" by pressing on the latch of the lid and pull it open.

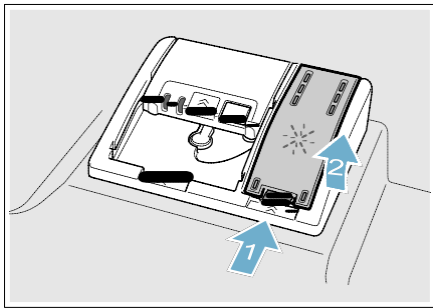

2. Add liquid rinse aid to the dispenser 9" until it is full. Do not overfill.

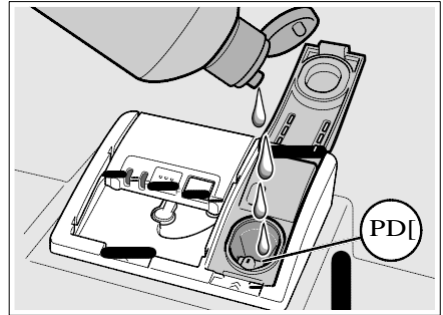

3. Close the lid. Lid must be fully closed until it clicks in order to seal.
4. Wipe up any excess rinse aid that may have puddled when the dispenser reservoir is full.

The indicator light will go out a few moments after the dishwasher door is shut.

#### NOTICE:

Do not fill the rinse aid dispenser 9" with detergent. Doing so will damage the dishwasher.




### Setting the amount of rinse aid used

The amount of rinse aid dispensed can be set from §:<< to §:<‡. The factory setting is §:<†.

You should only change the setting if streaks remain on the dishes (lower the amount), or if dishes are not getting dry enough (increase the amount).

Setting	Amount
§:<<	dispenser is OFF
§:< ,	lowest setting
§:< f	low setting

Setting	Amount
§:<,>	medium setting
§:<...>	medium/high setting
§:<†>	high setting
§:<‡>	highest setting

1. Open the door.
2. Switch on ON/OFF button .
3. Press Info button  for 3 seconds until the following text is indicated on the display window at the top @ :  
**Set with - +**  
**Leave with Setup 3 sec.**
4. Keep pressing button > )R until the rinse aid dispenser is indicated on the display window at the top @ .
5. Make the selection with setting buttons + - X .
6. Press and hold the Info button  for 3 seconds.

The chosen setting has now been stored.

### Turning off rinse aid indicator

Proceed as described in the section “Setting the amount of rinse aid used” and set value to §:<<. The rinse aid indicator is now turned off.

**NOTICE:**

Using rinse aid and setting the dispenser to §:<< may result in longer cycle times consuming more energy and water. The higher temperatures can damage fine china or glassware.

## — Loading the Dishwasher

### Dishware material

**Note:** Before using your dishwasher for the first time, check the information in this section. Some items are not dishwasher-safe and should be hand washed; others require special loading.

Recommended	
Aluminum	Colored anodized aluminum may fade over time. Minerals in your water may cause the aluminum to darken or spot. This can usually be removed with a soap-filled steel wool pad.
China, Crystal, Stoneware	Some hand-painted utensils may discolor, fade or spot. Hand wash these utensils. Position fragile glassware so that it will not topple over or come in contact with other utensils during the wash cycle.
Glass	Milk glass may discolor or become yellow.
Non-stick Coatings	Apply a light coating of vegetable oil to non-stick surfaces after drying.
Plastics	Make sure the plasticware is dishwasher-safe.
Stainless Steel, Sterling Silver and Silver Plates	Load these so they do not come in contact with other metals, stainless steel dishwasher tank walls or the inner door.

Not Recommended	
Acrylic	Crazing or small cracks throughout the acrylic, may occur.
Adhesive-Joined Pieces	Adhesives that join materials such as plastic, wood, bone, steel, copper, tin, etc. may loosen.
Bone-Handled Utensils	Handles may separate.
Iron	Iron will rust. Hand wash and dry immediately.
Non-Dishware Items	Your dishwasher is intended for use in cleaning ONLY standard household dishware and kitchenware.
Pewter, Brass, Bronze	These items will tarnish. Hand wash and dry immediately.
Tin	Tin will stain. Hand wash and dry immediately.
Wood	Wooden bowls, wooden utensils and utensils with wooden handles can crack, warp and lose their finish.

## Glass and silverware damage

### Causes:

- Glass type and glass production process.
- Chemical composition of the detergent.
- Water temperature of the wash cycle.

### Recommendation:

- Use only glasses and porcelain which the manufacturer designates as dishwasher-safe.
- Use a detergent which protects silverware.
- Take glass and silverware out of the dishwasher as soon as possible after the wash cycle ends.

## Loading the racks

For best dishwashing results, observe the following when loading the dishwasher:

- Do not pre-wash items with loosely attached food soil.
- Remove all food particles, bones, toothpicks and excessive grease.
- Items having burned-on, baked-on or starchy soils may require some pre-treatment.
- Load dishes in the dishwasher racks so the insides of bowls, pots and pans are facing the spray arms.
- Avoid nesting and contact points between dishes.
- Separate items of dissimilar metals. Use care to not block movement of the spray arms.
- Only wash household dishware and kitchenware rated as dishwasher-safe. Refer to the Dishware Materials section for more information about dishware suitability.

---

### NOTICE:

---

To avoid dishwasher damage, do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.

---

## Loading the upper rack

Ensure items do not protrude through the bottom of the racks and block the spray arms.

**Note:** When pushing the upper rack **12** into the dishwasher, push it until it stops against the back of the tub so the upper rack spray arm **1** : connects to the water supply at the back of the tub. Do not push racks in using the door.

## en-us Loading the Dishwasher


### Loading the lower rack

Place large items in the lower rack **1 j**. Load pots, pans and bowls upside down. Do not block the vent hole with tall baking sheets. Load these items on the right side of the dishwasher.


### Recommended loading pattern

**Note:** Folding the cup shelves down will allow the cups to sit at an increased angle and reduce water pooling on cup bottoms.


Lower rack - 12 place setting

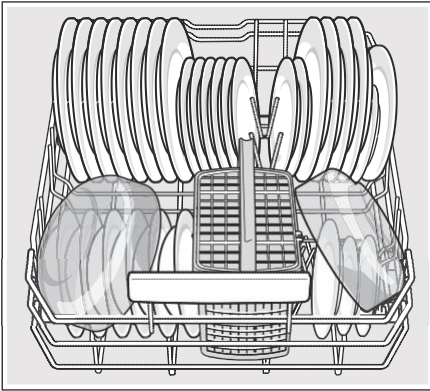


Third rack - 12 place setting

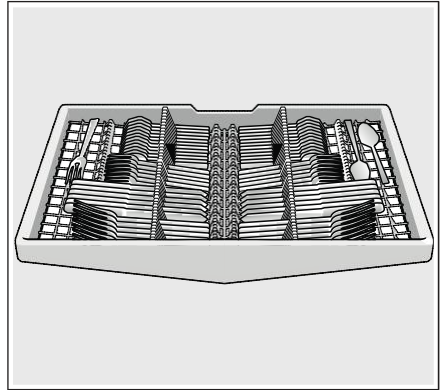


Lower rack - 10 place setting

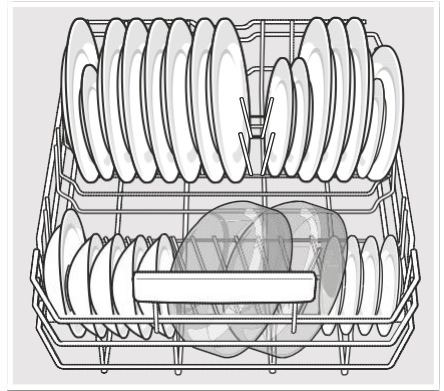

Upper rack - 12 place setting

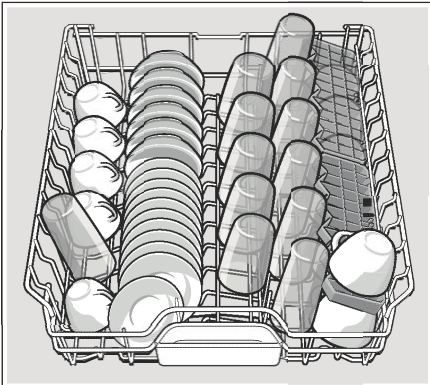


Upper rack - 10 place setting

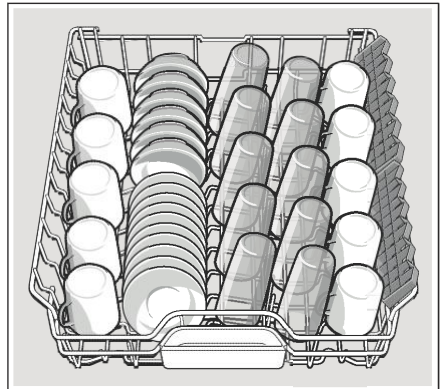



Third rack - 10 place setting

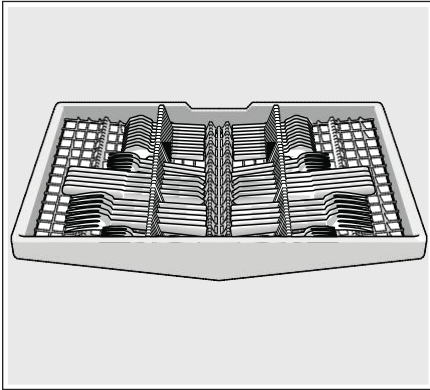


**Loading the silverware basket\***

Place knives and sharp utensils with their handles up and forks and spoons with their handles down. If large or oddly-shaped items are loaded in the silverware basket, be sure they do not nest together.

**WARNING**


**RISK OF INJURY!**

The sharp points and edges of knives and other sharp utensils can cause serious injury. Load knives and other sharp utensils with edges down. Do not allow children to handle or play near knives and sharp utensils.

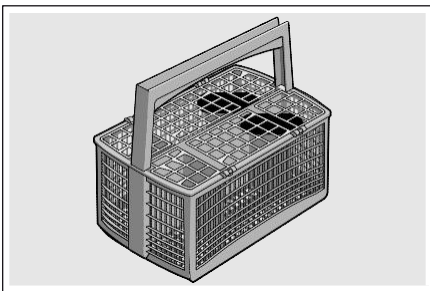


\* optional feature which may or may not be included with your dishwasher

**Suggested loading patterns**

 

- 1 Salad fork
- 2 Teaspoon
- 3 Dinner fork
- 4 Knife
- 5 Tablespoon
- 6 Serving spoon
- 7 Serving fork

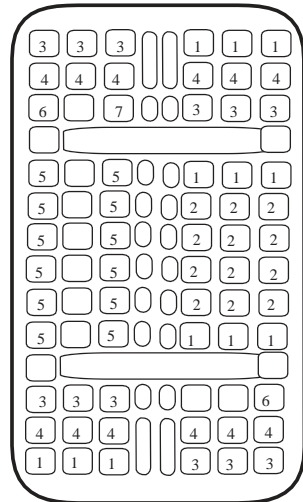

**Unloading the dishwasher**

When unloading the dishwasher, it is recommended to unload the lower rack **1 j** first. Next, unload the silverware basket **1 b** followed by the upper rack **1 2**, and then the 3rd rack **1 \***.

**Note:** Dishes are more likely to chip when unloading before cooling.

## Adjusting the height of the rack \*

If required, the height of the upper rack **12** can be adjusted to create more space for taller utensils either in the upper or lower rack.

### Appliance height 32 in (81.5 cm)

With silverware basket	Upper rack	Lower rack
Setting 1 max. ø	8.6 in (22 cm)	12.2 in (31 cm)
Setting 2 max. ø	9.6 in (24.5 cm)	10.8 in (27.5 cm)
Setting 3 max. ø	10.6 in (27 cm)	9.8 in (25 cm)

With third rack	Upper rack	Lower rack
Setting 1 max. ø	6.3 in (16 cm)	12.2 in (31 cm)
Setting 2 max. ø	7 in (18.5 cm)	10.8 in (27.5 cm)
Setting 3 max. ø	8.2 in (21 cm)	9.8 in (25 cm)


### Appliance height 35 in (86.5 cm)

With silverware basket	Upper rack	Lower rack
Setting 1 max. ø	9.4 in (24 cm)	13.4 in (34 cm)
Setting 2 max. ø	10.4 in (26.5 cm)	12 in (30.5 cm)
Setting 3 max. ø	11.4 in (29 cm)	11 in (28 cm)

With third rack	Upper rack	Lower rack
Setting 1 max. ø	7 in (18 cm)	13.4 in (34 cm)

With third rack	Upper rack	Lower rack
Setting 2 max. ø	8 in (20.5 cm)	12 in (30.5 cm)
Setting 3 max. ø	9 in (23 cm)	11 in (28 cm)

Arrange large plates up to a diameter of 12.2 in/13.4\* in (31/34\* cm) in the lower basket **1 j** as illustrated.

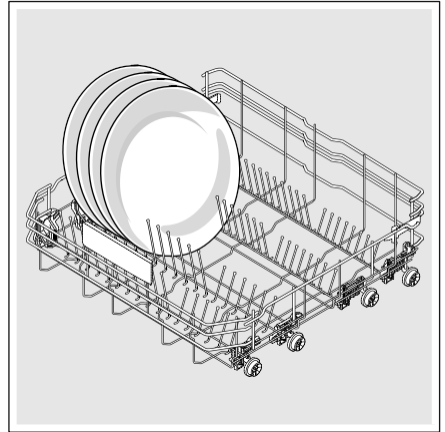


\* optional feature which may or may not be included with your dishwasher

## Rack accessories


### Flip tines\*

The upper and lower rack are fitted with flip tines that can be folded down depending on what you may need to load in the rack.

**Lower rack flip tines:** To fold down, pull flip tine gently forward and release it from the notch. Push the flip tine downward to the desired position. To fold up, push flip tines into an upright position until the holder engages in the notch.

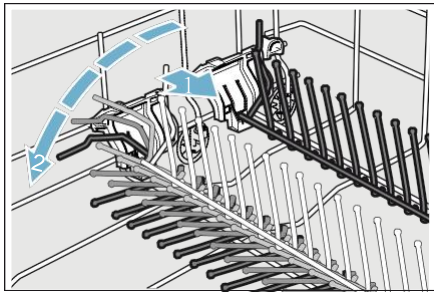

**Upper rack flip tines:** To fold down, push flip tines downward with gentle pressure to the desired position. To fold up, push flip tines into an upright position until the holder engages in the notch.

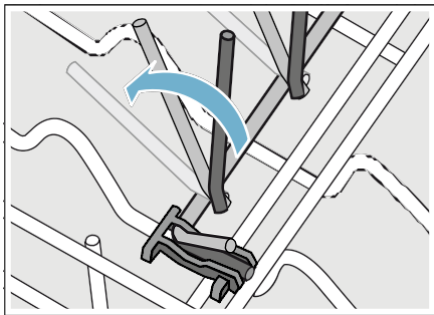


\* optional feature which may or may not be included with your dishwasher

### RackMatic®\*

The height of the upper rack **1 2** can be adjusted in 3 steps to create more space.

1. Pull the upper rack out of the dishwasher until it stops.
2. To lower the rack, push the RackMatic® lever inward.
3. To raise the rack, hold the basket on the sides of the upper rack and lift it up.

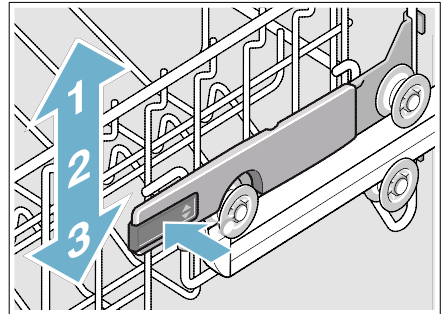


**Note:** Check spray arm for clearance after adjustment.

\* optional feature which may or may not be included with your dishwasher

### 3rd rack\*

The 3rd rack **1 \*** horizontally positions knives, spatulas and other oversized tools for improved cleaning and easier loading and unloading. Arrange cutlery in 3rd rack **1 \*** as illustrated.

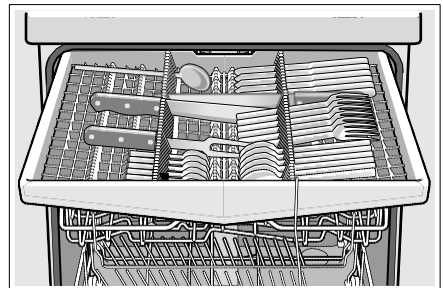


\* optional feature which may or may not be included with your dishwasher

## en-us Loading the Dishwasher

### Plastic item clips\*

Light-weight plastic accessories (cups, lids, etc.) can be held securely by the plastic item clips.


Press the plastic item clip against the rack as shown until it clicks.

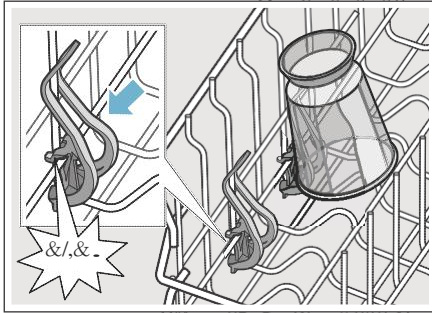

\* optional feature which may or may not be included with your dishwasher

### Vase holder\*


The vase holder can be placed anywhere in the lower rack to hold and thoroughly clean vases, bottles, and other containers.

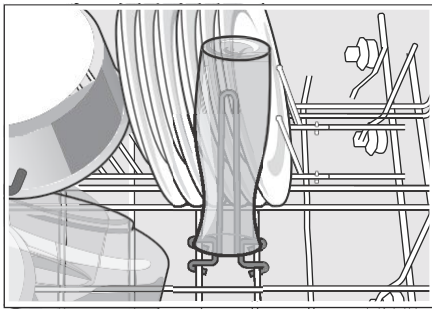

\* optional feature which may or may not be included with your dishwasher

### Cup shelves\*

The cup shelves and the space underneath can be used for small cups or for larger serving utensils.

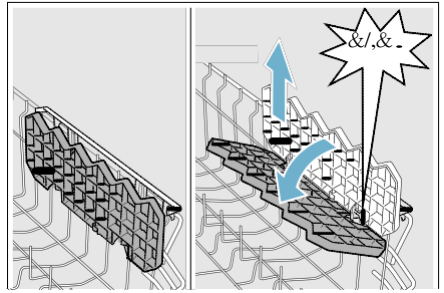



\* optional feature which may or may not be included with your dishwasher

### Extra tall item sprinkler\*

If an item is too tall to be placed in the lower rack **1 j** even with the upper rack **1 2** in the raised position, remove the empty upper rack **1 2** by pulling it out of the dishwasher until it stops. Pull the front of the rack upward and outward until the rack will not slide out anymore. Then lift it up and away from the dishwasher, until the rollers are completely free of the roller guides **(A)**.

Set the upper rack **1 2** aside and push the roller guides **(A)** back into the dishwasher. Insert the extra tall item sprinkler **(B)** into the upper rack spray outlet **(C)** and turn the sprinkler clockwise to lock into position.

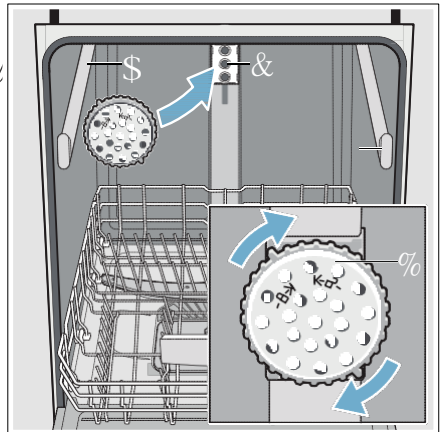

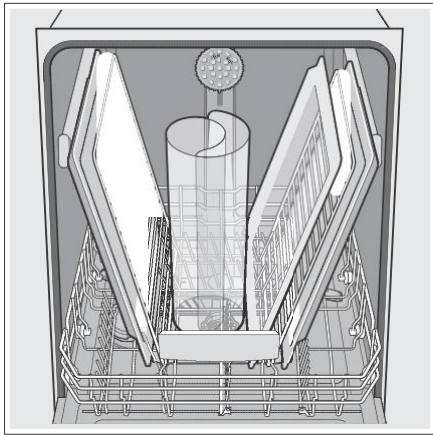

**Note:** Keep the vent hole on the tub's left side clear by placing tall items such as plastic cutting boards and tall baking sheets on the lower rack's right side or center.

---


**NOTICE:**

To avoid dishwasher damage, do not reinstall the upper rack **12** without removing the extra tall item sprinkler **(B)**.

---


\* optional feature which may or may not be included with your dishwasher

## Removing/Installing third rack

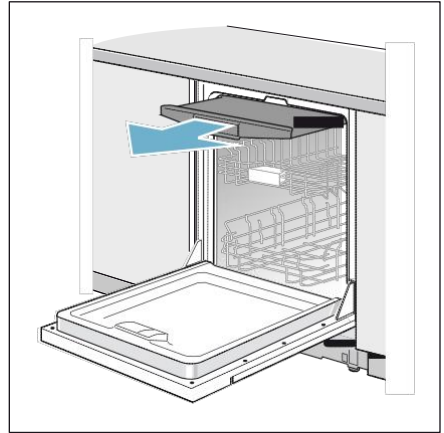


### Removing third rack 1 \*

1. Pull out third rack all the way (1).
2. Lift upper rollers over the stopper hooks of both rails (2).
3. Pull third rack out forward and upward so the the holding hooks and the lower rollers of the rack slide over the stopper hooks of both rails (3).

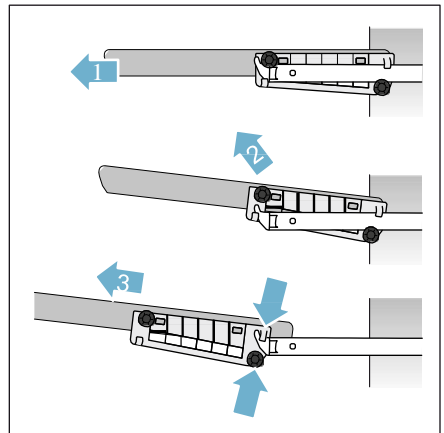


### Installing third rack 1 \*

1. Pull out third rack rails all the way (1).
2. Insert third rack at an angle. Make sure that the stopper hooks of both rails slide in between the holding rails hooks and the lower rollers of the third rack (2).
3. Slide third rack in and lift the upper rollers over the front stopper hooks of both rails (3).
4. Push in third rack (4).

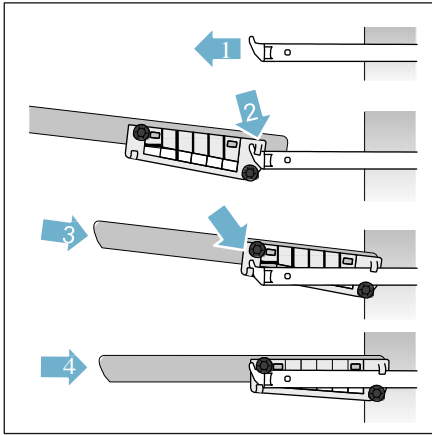


### Removing/Installing upper rack

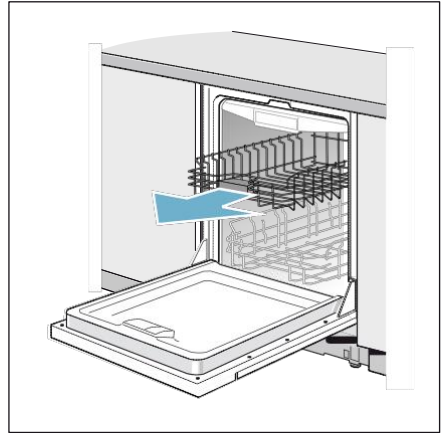


### Removing upper rack 1 2

1. Pull out upper rack all the way (1).
2. Lift front rollers over the stopper hook of the rail (2).
3. Pull out upper rack forwards and upwards so that the upper and lower rollers of the rack slide over the stopper hooks of both rails (3).

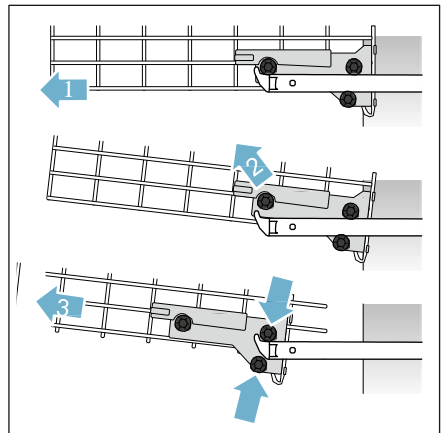

## Installing upper rack 1 2

1. Pull out upper rack rails all the way (1).
2. Insert upper rack at an angle. Make sure that the stopper hooks of both rails slide in between the upper and lower rollers on the rear side of the rack (2).
3. Slide upper rack in and lift the upper rollers over the front stopper hooks of both rails (3).
4. Push in upper rack (4).

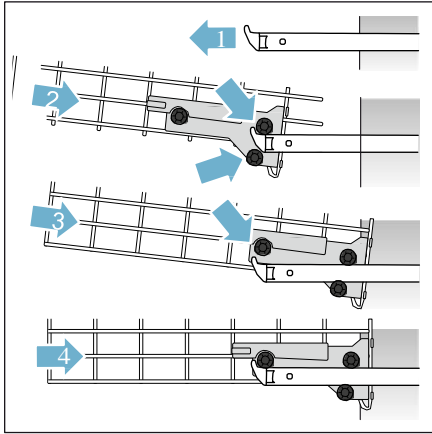

## - Detergent

Use only detergent specifically designed for dishwashers. For best results, use fresh powdered dishwashing detergent or detergent tabs.


### NOTICE:

To avoid dishwasher damage:

- Do not use hand dishwashing products in your dishwasher.
- Do not use too much detergent if your water is soft. Using too much detergent with soft water may cause etching in glassware and fine china.


## Adding detergent

1. If the detergent dispenser 9\* is still closed, actuate the locking bar 92 to open it.

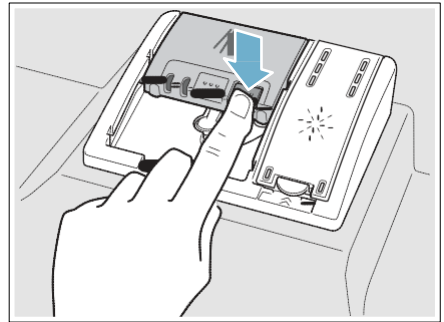


en-us Detergent

- 2. Pour detergent into the dry detergent dispenser 9\* only. Add detergent. Do not overfill the detergent dispenser.

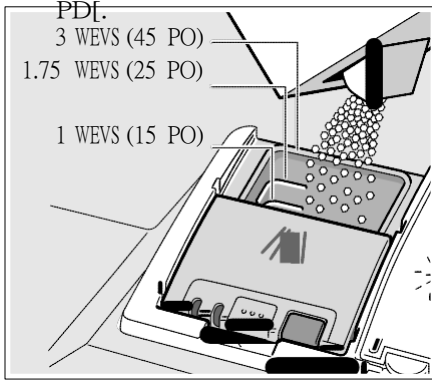


When using detergent tabs, lay them such that they do not come in contact with the cover, insert a detergent tab flat, not on its side.

**Note:** Do not place detergent tabs in the detergent tab tray 1B. Place tabs or other detergent forms directly in the detergent dispenser 9\*.

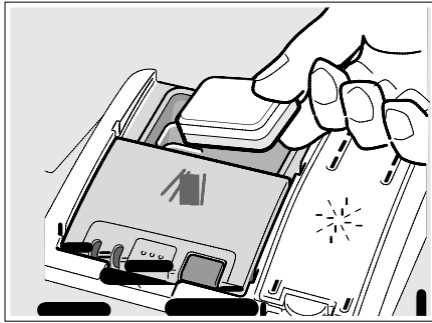

Dosage: see manufacturer's instructions on the packaging.

- 3. Close the lid by placing the finger on the lid as shown. Slide the lid closed and press down firmly until it clicks.

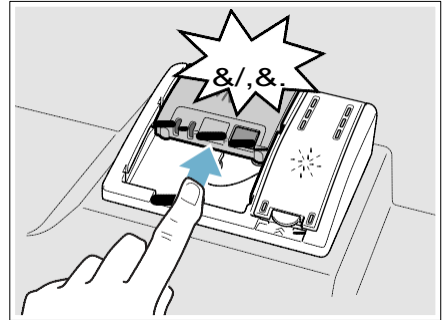

The detergent dispenser will open automatically at the ideal time for the set cycle. The powder or liquid detergent is distributed in the appliance and is dissolved, detergent tabs will fall into the detergent tab tray 1B where it dissolves during the cycle.

**Tip:** If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate.



## Dishwasher Cycles

**Note:** In order to save energy, it is recommended to set the **Auto Power Off** feature to  $\sim$ :< ,.

Wash cycle	Recommended use	Possible wash cycle option
<b>Heavy</b>	Best for cleaning items with baked-on food or grease. These dishes would normally require soaking or hand scouring.	all
<b>Auto</b>	Smartest cycle, with most flexible soil sensing capability. This cycle is optimal for use with mixed dishware and food soils.	all
<b>Delicate</b>	Best for delicate dishes and glasses. This cycle lowers temperature and cycle length to decrease energy usage.	<b>Delay</b> <b>Speed Perfect</b> <b>Eco</b> <b>Extra Dry</b>
<b>Normal</b> (see note at bottom of table)	Recommended for daily, regular or typical use to completely wash a full load of normally soiled dishes.	all <b>Note:</b> In order to obtain optimal performance with minimum energy consumption, it is recommended to disable all available options and settings, except <b>Auto Power Off</b>
<b>Speed60</b>	Cleans freshly soiled dishes with easy to remove soils. This cycle reduces cycle time while still including drying.	all
<b>Express</b>	Cleans lightly soiled dishes and reduces overall wash time. Use this cycle to clean glasses and dessert dishware that may need to be reused at the same event.	<b>Delay</b> <b>Extra Dry</b>
<b>Half Load</b>	Use this cycle if you have only a few items to wash (e.g. glasses, cups, plates). Saves water, energy and time. It is recommended to put a little less detergent in the detergent dispenser than for a full load.	all
<b>Rinse</b>	Use this cycle if you need to pre-rinse dishes to avoid odors. Place unrinsed dishes inside the dishwasher and select the <b>Rinse</b> cycle. Uses less water than hand rinsing and very low energy.	<b>Delay</b>

**Note:** The Energy Guide label was based on the **Normal** soil sensing cycle as follows: The unit was tested without any rinse aid (liquid) in the rinse aid dispenser  $\text{9}''$ . A single dose of detergent was inserted into the detergent

**en-us** Dishwasher Cycles

dispenser CITJ, with no detergent being used in the prewash. The unit was not subjected to truncated testing per the definitions in the test procedure. We recommend that dish loads such as the one in the energy certification test have the rack position set in the highest position.

## Dishwasher Cycle Options

### Delay

Allows you to delay the start time of your dishwasher up to 24 hours.

### Speed Perfect

Speed Perfect is an option that allows saving time without sacrificing wash and dry performance. Selecting this option ensures the same final temperatures as the underlying cycle, while heating up the dishes more quickly. Selecting this option also increases energy consumption while reducing cycle time.

### Delicate

By increasing the amount of water during the rinse cycle and extending the drying phase, stains are prevented and the drying result is improved. There is a slight increase in the energy consumption. Rinse aid is recommended for the high gloss drying function (even when using combination detergents).

### Sanitize

This function increases the temperatures and retains them for an extra long time to obtain a defined disinfection performance. Continuous use of this function increases the hygiene status. This additional option is ideal for cleaning e.g. chopping boards and baby bottles.

The sanitize LED will light when sanitation requirements are met. The technical sanitation measures may also improve the drying results.

### Eco

The “Eco” function can be used to reduce water and energy consumption. The running time is extended for optimum cleaning and drying results.

### Extra Dry

An increased temperature during the final rinse and an extended drying phase ensure that even plastic parts dry better. There is a slight increase in the energy consumption.

### Wash Cycle Information

To save energy, this dishwasher has EcoSense where the sensors in the dishwasher automatically adjust the cycle length, temperature and water changes based on the amount of food soil and the incoming water temperature. The “Smart Control” makes decisions that can cause the cycle time and water usage to adjust intermittently. **Wash cycle times are based on 120°F (49° C) water supply.** If your household water supply is different than 120°F (49° C), your dishwasher’s cycle times may be impacted.

**en-us** Dishwasher Cycle Options

	Heavy	Auto	Delicate	Normal	Speed 60	Express	Half Load	Rinse
Cycle time in min.	110 - 135	105 - 130	80 - 85	130 - 135	60	30	95-105	9
Water cons. in gal/L	4.9-6.4/ 18.6-24.2	3.5-6.5/ 13.1-24.5	2.5-3.8/ 9.3-14.5	2.2-5.3/ 8.3-20.3	3.7/ 14.1	2.8/ 10.5	2.7-4.4/ 10.2-16.5	1.1/ 4.1
Wash temp. in °F/°C	150-160/ 66-71	127-150/ 53-66	113-122/ 45-50	113-131/ 45-55	122/ 50	113/ 45	113/ 45	in-coming
Rinse temp. in °F/°C	162/ 72	158/ 70	144/ 62	144-156/ 62-69	158/ 70	122/ 50	120/ 50	in-coming
<b>Speed Perfect</b>								
Cycle time in min.	95-110	75-90	60-70	95-105	N/A	N/A	75-90	N/A
Water cons. in gal/L	4.3-5.5/ 16.3-20.5	4.3-5.3/ 16.1-20.0	2.4-3.3/ 9.2-12.5	4.4-5.6/ 16.6-21.1	N/A	N/A	4.3-5.3/ 16.1-20.0	N/A
Rinse temp. in °F/°C	162/ 72	158/ 70	144/ 62	162/ 72	N/A	N/A	140/ 60	N/A
<b>Delicate</b>								
Cycle time in min.	105-110	90-105	N/A	105-120	N/A	N/A	70-80	N/A
Water cons. in gal/L	4.9-6.4/ 16.3-20.5	3.5-6.5/ 13.1-24.5	N/A	2.2-5.3/ 8.3-20.3	N/A	N/A	2.7-4.4/ 10.2-16.5	N/A
Rinse temp. in °F/°C	162/ 72	162/ 72	N/A	162/ 72	N/A	N/A	140/ 60	N/A

	Heavy	Auto	Delicate	Normal	Speed 60	Express	Half Load	Rinse
<b>Sanitize</b>								
Cycle time in min.	130-150	125-150	N/A	140-155	N/A	N/A	115-125	N/A
Water cons. in gal/L	4.9-6.4/ 16.3-20.5	3.5-6.5/ 13.1-24.5	N/A	2.2-5.3/ 8.3-20.3	N/A	N/A	2.7-4.4/ 10.2-16.5	N/A
Rinse temp. in °F/°C	162/ 72	158/ 70	N/A	140/ 60	N/A	N/A	140/ 60	N/A
<b>Eco</b>								
Cycle time in min.	105-120	100-114	75-80	110-120	N/A	N/A	85-90	N/A
Water cons. in gal/L	4.9-6.4/ 16.3-20.5	3.5-6.5/ 13.1-24.5	2.5-3.8/ 9.3-14.5	2.2-5.3/ 8.3-20.3	N/A	N/A	2.7-4.4/ 10.2-16.5	N/A
Rinse temp. in °F/°C	162/ 72	162/72	162/ 72	162/ 72	N/A	N/A	140/ 60	N/A
<b>Extra Dry</b>								
Cycle time in min.	135-150	125-150	115-125	140-155	70	50	1125-125	N/A
Water cons. in gal/L	4.9-6.4/ 16.3-20.5	3.5-6.5/ 13.1-24.5	2.5-3.8/ 9.3-14.5	2.2-5.3/ 8.3-20.3	3.7/14. 1	2.8/ 10.5	2.7-4.4/ 10.2-16.5	N/A
Rinse temp. in °F/°C	162/ 72	162/ 72	162/ 72	162/ 72	162/ 72	162/ 72	162/ 72	N/A

**Note:** Only sanitizing cycles have been designed to meet the requirements of Section 6 of the NSF/ANSI Standard for Residential Equipment for soil removal and sanitization efficacy. There is no intention, either directly or indirectly, to imply that all cycles have passed sanitization performance tests.

# 1 Operating the Dishwasher

**Note:** With hidden controls, the door must be opened before changing settings and closed after changing settings.

## 9 WARNING

**RISK OF INJURY!**  
To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.

## Protection against unintentional operation

Your dishwasher is equipped with a function that helps to prevent unintentional operation, for example by children.

After setting the dishwasher the appliance door has to be closed within 4 seconds, otherwise the operation will be paused. There will be a signal on the control panel advising you to press the Start button again and close the door.

This function will be activated when:

- pressing Start to begin a wash cycle
- setting Delay time and pressing Start
- opening the door while Delay time is active
- opening the door during a wash cycle.

**Note:** This function cannot be deactivated.

## Operating the touch buttons

Buttons are sensitive and should be touched gently. Avoid any grease or food particles resting on the buttons as they could activate the dishwasher.

Wiping and cleaning can also activate the dishwasher. For best results, use bare, clean hands when touching the buttons.

To clean the touch buttons wipe them with a dry or slightly damp cloth.

## Opening the door



 
 

To open the door, press the upper middle part of the door. The appliance opens automatically.

If you have activated the child-proof lock, press twice in quick succession at the upper middle part of the door.


## Changing the settings

The dishwasher has been preset with certain settings for your convenience. You can change these factory settings.

### Change the setting as follows:

1. Open the door.
2. Switch on ON/OFF button .
3. Press Info button  for 3 seconds until the following text is indicated in the digital display @:  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**
4. Keep pressing button  until the required setting is indicated in the display window at the top @.
5. Make the selection with setting buttons .
6. Press and hold the Info button  for 3 seconds.

The chosen setting has now been stored.

**Tip:** If you change several settings, first make all changes in succession. Now press the Info button  for 3 seconds. This saves all set values in the appliance.

## AquaSensor \*

The AquaSensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water.

The AquaSensor is used according to the wash cycle. If the AquaSensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 3–6 litres. If the turbidity is greater, the water is drained and is replaced with fresh water. In the automatic wash cycles the temperature and running time can also be adjusted to the degree of soiling.

\* optional feature which may or may not be included with your dishwasher

## Time display

The wash cycle time is determined during the wash cycle by the water temperature, the amount of dishes, as well as the degree of soiling and may vary (depending on the selected wash cycle). You can change the time display into time of day or hours/minutes so that the remaining cycle time of the wash cycle appears in the display window "Finish at" (for example 15:20 o'clock) or "Finish in" (for example 3:25 hours).

## Sensor setting

The wash cycle sequence is optimised in Auto wash cycles with the aid of sensors. The sensors adjust the wash cycle strength of Auto wash cycles depending on the amount and type of soiling. You can adjust the sensitivity of the sensors in 3 stages.

**Standard:** This setting is ideal for a mixed load and heavily soiled utensils, but also saves energy and water.


**Sensitive:** This setting adjusts the wash cycle strength for the effective removal of food remnants, even if the amount of soiling is low. The energy and water consumption is adjusted accordingly.

**Very sensitive:** This setting adjusts the wash cycle strength for difficult conditions of use, for example firmly dried on food remnants. This setting is recommended if using biological or eco detergents which contain lower amounts of active agents. The energy and water consumption is adjusted accordingly.

## extraDry

The final rinse uses a higher temperature which improves the drying result. The cycle time may increase slightly. (Caution if utensils are delicate!) You can switch the extraDry function on or off.

## Eco forecast

When Eco forecast is activated, the average water and energy consumption of the selected wash cycle is briefly displayed in the digital display .


## AutoPowerOff (Switching off automatically after the end of the wash cycle)

To save energy, the dishwasher is switched off 1 minute after the wash cycle ends. You can also change this setting.

### Possible settings are:

- **off:** The appliance does not switch off automatically.
- **After one minute:** The appliance switches off after 1 minute.
- **After two hours:** The appliance switches off after 2 hours.

## EmotionLight \*

The EmotionLight **1** " is on when the door is open irrespective of whether the ON/OFF switch  is switched on or off. When the door is closed, the EmotionLight is off. You can switch the EmotionLight on or off.

**Note:** Note that when the door is open the EmotionLight is automatically switched off after 1 hour.

\* optional feature which may or may not be included with your dishwasher

## Remaining time projection (Optical display while the wash cycle is running) \*

While wash cycle is running, an optical display (additional cycle information) is indicated on the floor under the appliance door. If the base panel is pulled forwards or if the appliance is installed at eye-level with flush furniture front, the display is not visible.

You can switch the optical display on or off.

\* optional feature which may or may not be included with your dishwasher

## Infolight \*

While the wash cycle is running, a light spot shines on the floor under the appliance door. Do not open the appliance door until the light point is no longer visible on the floor. If the appliance door is not completely closed, the light spot flashes \*. If the appliance is installed at eye-level, with flush furniture front, the light point is not visible. You can switch the Infolight on or off.

\* optional feature which may or may not be included with your dishwasher

## Changing start wash cycle

You can change the "Start wash cycle" setting.

## Tone volume

The end of the wash cycle is indicated by a buzzer. You can also change this setting.

## Button volume

When you are operating the dishwasher, a signal sounds whenever a button is pressed. You can control the volume of the signal. If you do not like the button volume, you can switch it off.

## Child-proof lock \*

The dishwasher features an electronic child-proof lock. The child-proof lock protects children from potential hazards which the dishwasher poses.

You can switch the child-proof lock on or off. When the child-proof lock is on, it is difficult to open the door.

\* optional feature which may or may not be included with your dishwasher




 

## Greeting

When you switch on the dishwasher, the brand logo appears. You can switch off the brand logo.

## Factory setting

You can reset all settings to the factory setting.

## Switching the appliance on



 
 
1. Turn on tap fully.
2. Open the door.
3. Switch on ON/OFF switch  .  
The AUTO 130 - 150° F wash cycle has been preset as a default whenever the appliance starts. This wash cycle remains selected if no other wash cycle button  is pressed.
4. Press START button  \*.
5. Close the door.



Wash cycle sequence starts.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button the operation will be paused. Press the Start button again and close the appliance door.

## Delay start time


You can delay the start of the wash cycle by up to 24 hours. Depending on the setting of the time display, the end of cycle is indicated with “Finish in” (for example 3h 25m) or “Finish at” (for example 15:20 hours).

 1. Open the door.
2. Switch on ON/OFF switch  .
3. Select wash cycle  .
4. Press Delay start button  .
5. Keep pressing the setting buttons  until the displayed time corresponds with your requirements.

6. Press START button  \*, timer programming is activated.
7. To delete the delayed start time, press START button  \* for approx. 3 seconds.  
Delayed start time is terminated.
8. Close the door.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button the operation will be paused. Press the Start button again and close the appliance door.

## Wash cycle end

 
\* The wash cycle has ended when “Finished” is indicated on the digital display  .

\* The end of the wash cycle is displayed on the floor – provided the optical display is switched on and is visible.

\* optional feature which may or may not be included with your dishwasher

## Switching off the appliance

**Short time after the end of the wash cycle:**

1. Open the door.
2. Switch off ON/OFF button  .
3. Turn off tap.
4. Remove the utensils when they have cooled down.

---

## ⚠ WARNING

---

### RISK OF INJURY!

To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.

---

## Interrupting the wash cycle



---

### 9 CAUTION!

---





Expansion (overpressure) may cause the appliance door to jump open and/or water to escape! If the door was opened on an appliance which has a hot water connection or is heated, always leave the door ajar for several minutes and then close.

---


1. Open the door.
2. Switch off ON/OFF switch . The LEDs go out. The wash cycle is saved.
3. To continue the wash cycle, switch on the ON/OFF switch  again.
4. Close the door.

**Note:** Your dishwasher is protected against unintentional operation. If the appliance door remains open for more than 4 seconds after pressing the Start button the operation will be paused. Press the Start button again and close the appliance door.

## Terminating the wash cycle (Reset)

1. Open the door.
2. Press the START button \* and hold for 3 seconds  
The digital display  shows: "Program was terminated".
3. Close the door.  
The wash cycle sequence lasts approx. 1 min. The digital display  shows: "Finished".
4. Open the door.
5. Switch off ON/OFF switch .
6. Close the door.

## Changing the wash cycle

When the START button  has been pressed, the wash cycle cannot be changed. The only way a wash cycle can be changed is by terminating the wash cycle (Reset).

---

## 2 Care and Maintenance

A regular inspection and maintenance of your machine will help to prevent faults. This saves time and prevents future problems.

## Overall condition of the dishwasher

---

### NOTICES

---

- Never use a steam cleaner to clean your dishwasher. The manufacturer is not liable for any resulting damage.
- Regularly wipe the front of the appliance with a damp cloth - water and a small amount of liquid soap is adequate. Do not use sponges as they could scratch the surfaces.
- Stainless steel appliances: To prevent corrosion, do not use sponges or chlorine based cleaners. Use a stainless steel polish to seal and protect the surface. Do not use chlorine based cleaners or wipes.
- Clean the outer edges of the inside door panel regularly to remove debris that may collect from normal loading. If spots begin to appear on the stainless steel, make sure the rinse agent is full and functioning properly.

- Clean the door seal regularly with a damp cloth to remove food particles that may collect from normal loading and cause odor. A soiled door seal may not seal properly.

**9 WARNING**

Use caution when removing parts for cleaning as some debris may be sharp.


## Filters

The Bosch® filter system is designed to prevent the need to pre-rinse normally attached food soils from your dishes. Simply scrape leftover food soils off of dishware before loading. This process will conserve time, water and the energy require to heat your household water supply.

Your dishwasher filter system is designed to filter 100% of the water entering the spray arms to provide a continuous supply of clean water to remove food soils from your dishware.

### Filter components

The filter system consists of three parts.

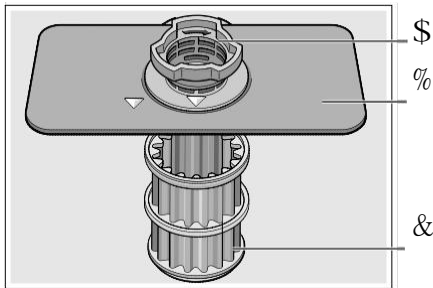

### A Large Object Trap

Prevents objects that should not be placed in your dishwasher from damaging the dishwasher pump system or clogging your household drain.

### B Flat Fine Filter

Prevents food particles from entering the wash chamber and directs particles toward the micro filter.

### C Micro Filter

Directs the smallest of particles to the household plumbing drain.

## Cleaning intervals

The filter system is designed to minimize maintenance and reduce noise while providing premium cleaning performance and minimum energy consumption.

Depending on use habits and water hardness, the filter system will require some maintenance to sustain premium cleaning performance.

Your filter system may need to be cleaned when:

- You notice food soils remaining on the filter system or objects trapped in the Large Object Trap.
- A drop in cleaning performance or a gritty film forms on the dishware.


When washing normally attached food soils that have been scraped before loading, in a household that runs the dishwasher every other day, your filter should be cleaned:

Cleaning interval	Use this setting,
3 times a year	if you rinse before loading
4 times a year	if you only scrape before loading
6 times a year	if you do not rinse or scrape before loading
12 times a year	if you have hard water

**Note:** Clean the filter after washing loads with large amounts of food soils or loads with a heavy starch content to maintain optimal performance.

**To check or clean the filter system:**

1. Unscrew the Large Object Trap as illustrated and remove the entire filter system.

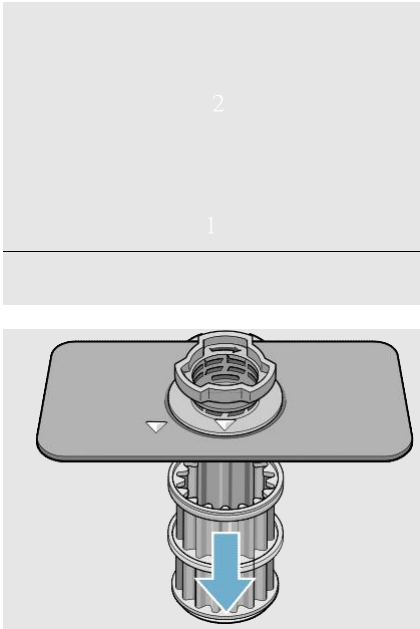


2. Remove any residue and clean filters by rinsing under running water. Note: do not use abrasive brushes or steel wool, etc., as they may damage the filter.
3. Reinstall the filter system in reverse sequence and lock into place by screwing the Large Object Trap until the marking arrows align.

## Spray arms

Check spray arms **1** :, **1J** for grease and limescale deposits. If you find such deposits:



- Fill detergent dispenser **9\*** with detergent and start the appliance without utensils in the cycle with the highest rinsing temperature. ~ "Wash Cycle Information" on page 33
- Clean the appliance with detergents/appliance cleaners which are particularly suitable for use with dishwashers.
- Unscrew the spray arms and inspect as shown.

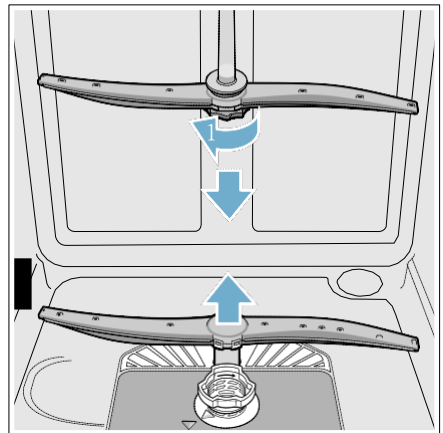

## Drain pump

Large food remnants in the rinsing water not retained by the filters may block the waste water pump. In this case:

- Disconnect the appliance from the power supply.
- Remove the filters. ~ "Filters" on page 41
- Scoop out standing water - use a sponge if necessary.
- Using a spoon, pry off the pump cover until it clicks, then grip the cover and pull upward until it resists and then pull forward.

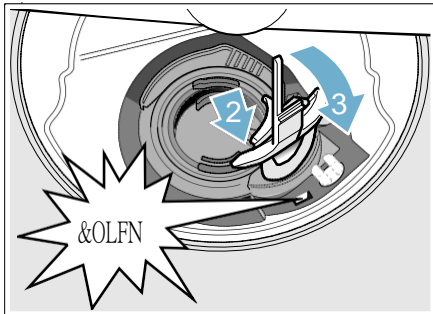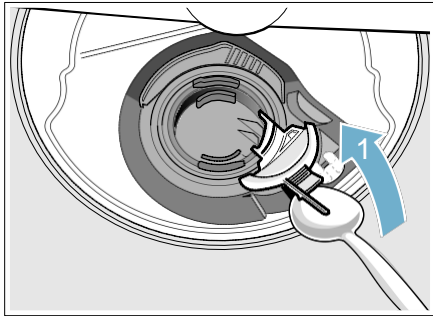

- Check inner compartment and remove any foreign objects.

### ⓘ WARNING

Use caution when removing parts for cleaning as some debris may be sharp.

- Place cover in the original position, press down and engage.
- Reinstall filters.

**Note:** The drain pump will not work properly if drain pump cover is not snapped in completely until it click.

## Preparing your unit for vacation

### NOTICE:

Before leaving for vacation during warmer weather, besides turning off the main valve, also turn off water supply at the nearest point to the dishwasher. During colder weather, please follow the instructions for winterizing your unit below.

## Winterizing your unit


### NOTICE:




If your dishwasher will be unused for a period of time in a location that experiences freezing temperatures (holiday home or through a vacation period), have your dishwasher winterized by a professional service.


### 3 Troubleshooting

Dishwashers may occasionally exhibit problems that are unrelated to

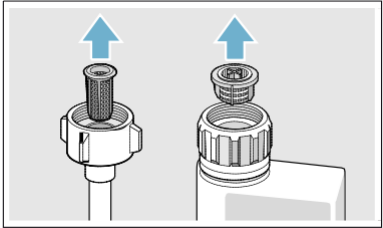a malfunction of the dishwasher itself. The following information may help you with a dishwasher problem without involving a repair professional.

Fault	Cause	Remedial action
Error code “:,%o is lit.	Supply hose kinked.	Install supply hose without kinks.
	Tap turned off.	Turn on the tap.
	Tap jammed or calcified.	Turn on the tap. Flow rate must be min. 10 l/min. when water supply is open.
	Filter in the water supply blocked.	Switch off the appliance and pull out the mains plug. Turn off the tap. Unscrew water connection.
		 <p>Clean filter in the supply hose. Screw water connection on again. Check for leaks. Reconnect power supply. Switch on the appliance.</p>
Error code “: < ^ is lit.	Intake opening (on right inside of appliance) covered by dishes.	Arrange dishes so that the intake opening is not obstructed.
Error code “: , f is lit.	Heating element calcified or soiled.	Clean appliance with dishwasher cleaning agent or descaler. Operate the dishwasher with water softening system and check the setting.
Error code “: f f is lit.	Filters <b>1 Z</b> are soiled or blocked.	Clean filters.
Error code “: f ... is lit.	Waste-water hose kinked or blocked.	Install hose without kinks, remove any residue.
	Siphon connection still sealed.	Check connection to siphon and open if required.
	Cover on the drain pump loose.	Lock cover correctly.
Error code “: f † is lit.	Drain pump blocked or cover on the drain pump is not locked in position.	Clean pump and lock cover correctly.
Error code “: f ^ is lit.	Mains voltage too low.	Not an appliance fault, have the mains voltage and electrical installation checked.

Fault	Cause	Remedial action
A different error code is indicated on the digital display. (“: < > to “: >> <)	A technical fault has probably occurred.	Switch off appliances with the ON/OFF switch  . After a short time restart the appliance. If the problem recurs, turn off the tap and pull out the mains plug. Call customer service and mention the error code.
Home network is not loading.	WLAN is not active on the router.	Check the wireless network connection of your router.
WLAN display flashes	Connection to the home network is not available.	Activate the wireless network on your router.
Home Connect cannot be implemented correctly.	Possible setting errors or a technical fault.	Observe the supplied documents and support information for Home Connect.
Refill indicator for salt <b>P</b> and/or rinse-aid <b>H</b> is lit.	No rinse aid.	Refill rinse aid.
	No salt.	Refill with special salt.
	Sensor does not detect salt tablets.	Use different special salt.
Refill indicator for salt <b>P</b> and/or rinse-aid <b>H</b> is not lit.	Refill indicator switched off.	Activation/deactivation *** '  Rinse Aid' on page 19 ***; *** '  Water softening system / special salt' on page 17 ***
	There is still enough special salt/rinse aid available.	Check refill indicator, levels.
Water is left in the appliance at the end of the wash cycle.	Filter system or area under the filters <b>1 Z</b> is blocked.	Clean filters and area underneath.
	Wash cycle has not ended yet.	Wait until wash cycle ends or reset.

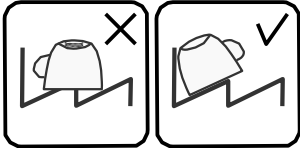Fault	Cause	Remedial action
Dishes not dry.	No or too little rinse aid in the dispenser.	Refill rinse aid.
	Wash cycle selected without drying.	Select wash cycle with drying.
	Water collecting in depressions on the dishes and silverware.	Arrange dishes in a sloping position, arrange affected dishes as sloping as possible. <div style="text-align: center;">  </div>
	The combined detergent used has a poor drying performance	Use different combination detergent with better drying performance. Use of rinse aid also increases the drying performance.
	extraDry to increase drying not activated.	Activate extraDry.
	Dishes were removed too early or drying process had not ended yet.	Wait until wash cycle ends or wait until 30 min after wash cycle ends before removing dishes.
	The eco rinse aid used has a limited drying performance.	Use a proprietary rinse aid. Eco products may have limited effectiveness.
Plastic dishes not dry.	Special properties of plastic.	Plastic has a lower heat storage capacity and therefore dries less well.
Silverware not dry.	Silverware not arranged properly in the silverware basket.	Separate silverware if possible, prevent contact points.
	Silverware not arranged properly in the third rack.	Arrange silverware properly and separate if possible.
Appliance interior wet after rinse cycle.	No appliance fault.	On account of the "Condensation drying" principle, water droplets are physically induced and required in the container. The humidity in the air condenses on the inner walls of the dishwasher, drains and is pumped out.



Fault	Cause	Remedial action
Food soils on the dishes.	Dishes placed too closely together, racks overfilled.	Arrange dishes with adequate clearance between them ensuring that the spray jets can reach the surface of the dishes. Prevent contact points.
	Spray arm rotation obstructed.	Arrange dishes so that the spray arm can rotate without obstruction.
	Spray arm nozzles are blocked.	Clean the spray arm nozzles.
	Filters <b>1 Z</b> dirty.	Clean filters.
	Filters <b>1 Z</b> inserted incorrectly and/or not engaged.	Insert and engage filters correctly.
	Rinse wash cycle too weak.	Select a more intensive rinse cycle. Increase sensitivity of the sensors.
	Dishes precleaned too intensely; sensors therefore decide on weak wash cycle sequence. Stubborn soiling cannot be completely removed.	Do not prerinse dishes. Remove only large food soils. Increase sensitivity of the sensors. Recommended wash cycle "Regular" or Intensive.
	Tall narrow containers in corner areas are not rinsed adequately.	Do not place hollow containers too obliquely and do not place in the corner area.
	Upper rack <b>1 Z</b> on right and left not set to same height.	Set upper rack to same height using side levers.
Dishwasher seems to run a long time	Incoming water is not warm enough.	Before starting a cycle, run hot water faucet at the sink closest to the dishwasher.
	Cycle time can vary due to soil and water conditions.	Sensors in the dishwasher automatically increase the cycle time to ensure a good wash when heavy soil is detected.
	Rinse aid dispenser <b>9"</b> is empty.	Add rinse aid.
	Dishwasher connected to cold water supply. <b>Note:</b> Check the typical wash cycle length.	Verify dishwasher is connected to hot water supply plumbing.


Fault	Cause	Remedial action
Detergent residue.	Detergent dispenser cover <b>9*</b> blocked by dishes and therefore does not open fully.	Dishes must not be placed above the detergent tab tray <b>1 B</b> . These may block the lid of the detergent dispenser and prevent it from opening fully. Do not place dishes or fragrance dispenser in the detergent tab tray.
	Detergent dispenser cover <b>9*</b> blocked by the detergent tab.	Detergent tab must be inserted flat and not upright.
	Detergent tab used in the quick or short wash cycle. Dissolving time of the detergent is not reached in the selected short wash cycle.	Dissolving time of detergent tab too long for a quick or short wash cycle. Use a detergent powder or select a more intensive wash cycle.
	Washing effect and dissolving performance are reduced after a prolonged storage time or detergent is very lumpy.	Change detergent.
Water stains on plastic parts.	Droplet formation on plastic surface is physically unavoidable. After drying, water stains are visible.	Use a more intensive wash cycle (more water changes). Arrange dishes in a sloping position. Use rinse aid. If required, increase softening setting.
Washable or water-soluble coatings in the container or on the door.	Detergent substances are deposited. These coatings cannot usually be removed with chemicals (appliance cleaner, ...).	Change detergent brand. Clean appliance mechanically.
	If there is a "white coating" on the container floor, the water softening system has been set very low.	Increase softening setting and change detergent if required.
	Salt dispenser cover <b>1 R</b> not closed.	Close salt dispenser cover correctly.
	Only for glasses: Initial glass corrosion – can only apparently be wiped off.	See "Glass and silverware damage".

Fault	Cause	Remedial action
<p>White, stubborn coatings; limescale on the dishes, container or door.</p>	<p>Detergent substances are deposited. These coatings cannot usually be removed with chemicals (appliance cleaner, ...).</p>	<p>Change detergent brand. Clean appliance mechanically.</p>
	<p>Hardness range incorrectly set or water hardness greater than 8.9 mmol/l.</p>	<p>Set water softening system according to instructions for use or top up salt.</p>
	<p>3 in 1 detergent or bio/eco detergent not effective enough.</p>	<p>Set water softening system according to instructions for use or use separate detergents (proprietary detergent, salt, rinse aid).</p>
	<p>Underdosing of detergent.</p>	<p>Increase detergent dosage or change detergent.</p>
	<p>Too weak rinse cycle selected.</p>	<p>Select a more intensive rinse cycle.</p>
<p>Tea or lipstick residue on the dishes.</p>	<p>Too low rinsing temperature.</p>	<p>Select wash cycle with higher washing temperature.</p>
	<p>Too little or unsuitable detergent.</p>	<p>Use suitable detergent at correct dosage.</p>
	<p>Dishes precleaned too intensely; sensors therefore decide on weak wash cycle sequence. Stubborn soiling cannot be completely removed.</p>	<p>Do not prerinse dishes. Remove only large food soils. Increase sensitivity of the sensors. Recommended wash cycle "Regular"</p>
<p>Colored (blue, yellow, brown), difficult to remove to non-removable coatings in the appliance or on stainless steel dishes.</p>	<p>Film formation consisting of ingredients from vegetables (e.g. cabbage, celery, potatoes, noodles, ...) or the tap water (e.g. manganese).</p>	<p>Can be partly removed with machine cleaner or by mechanical cleaning. Coatings are harmless.</p>
	<p>Film formation caused by metallic components on silver or aluminum silverware.</p>	<p>Can be partly removed with machine cleaner or by mechanical cleaning.</p>
<p>Colored (yellow, orange, brown), easily removable deposits inside the appliance (mainly in the floor area)</p>	<p>Film formation consisting of ingredients from food soils and substances from the tap water (limescale), "soapy"</p>	<p>Check function of the water softening system (refill with salt) or, if using combined detergents (tablets), activate water softening system.</p>
<p>Discoloration of the plastic parts inside the appliance.</p>	<p>Plastic parts inside the appliance may become discolored during the service life of the dishwasher.</p>	<p>Discoloration is normal and will not impair the function of the dishwasher.</p>

**en-us** Troubleshooting

Fault	Cause	Remedial action
Plastic parts discolored.	Too low rinsing temperature.	Select wash cycle with higher washing temperature.
	Dishes precleaned too intensely; sensors therefore decide on weak wash cycle sequence. Stubborn soiling cannot be completely removed.	Do not prerinse dishes. Remove only large food soils. Increase sensitivity of the sensors. Recommended wash cycle "Regular"
Removable streaks on glasses, glasses with metallic appearance and silverware.	Too much rinse aid.	Set rinse aid amount to lower setting.
	No rinse aid added or setting too low.	Add rinse aid and check dosage (recommended setting 4–5).
	Detergent residue in the final rinse wash cycle section. Detergent dispenser cover blocked by dishes (cover does not open fully).	Detergent dispenser cover must not be obstructed by dishes. Do not place dishes or fragrance dispenser in the detergent tab tray.
	Dishes precleaned too intensely; sensors therefore decide on weak wash cycle sequence. Stubborn soiling cannot be completely removed.	Do not prerinse dishes. Remove only large food soils. Increase sensitivity of the sensors. Recommended wash cycle "Regular"
Initial or existing, irreversible clouding of glass.	Glasses not dishwasher-proof, only suitable for dishwasher.	Use dishwasher-proof glasses. Avoid long steam phase (standing time after wash cycle ends). Use wash cycle at lower temperature. Set water softening system according to the water hardness (if required one setting lower). Use detergent with glass protection component.
Rust spots on the silverware.	Silverware not adequately rust-resistant. Knife blades are frequently more severely affected.	Use corrosion-resistant silverware.
	Silverware will also rust if rusting parts are rinsed at the same time (pan handles, damaged utensil baskets, etc.).	Do not wash rusting parts.
	Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled.	Fasten salt dispenser lock firmly or remove spilled salt.
Appliance cannot be switched on or operated.	Malfunction.	Disconnect appliance from the power supply; pull out the mains plug or switch off the fuse. Wait at least 5 seconds, then connect the appliance to the power supply.

Fault	Cause	Remedial action
Appliance does not start.	Mains fuse may have been blown or circuit breaker tripped.	Check mains fuse or circuit breaker.
	Door may not be properly latched.	Press the main power switch to turn unit on.
	Unit may not be turned on.	Shut door completely.
	Delay start may be engaged.	To reset, refer to “Delay start” section in this manual.
	Child lock is activated.	Deactivate the child lock. Refer to “Child Lock” section in this manual if applicable.
	The door may have been closed without first selecting a cycle.	Select a cycle and close the door.
	Power cord not inserted.	Ensure that the power cord is plugged all the way into the back of the appliance and into the socket. Check that the socket functions.
	The water supply may not be connected.	Check and turn on water supply.
	The appliance door has not been shut properly.	Close the door.
	The door has been open for more than 4 seconds after pressing the START button.	Press the START button again and close the appliance door within 4 seconds (see “Protection against unintentional operation”).
Wash cycle starts automatically.	You did not wait until wash cycle ended.	Perform reset. (see “Canceling the wash cycle”).

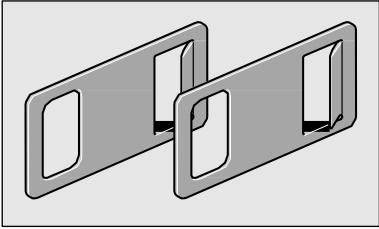Fault	Cause	Remedial action
Door does not open.	Door is not set correctly.	Set the door correctly with the aid of the installation instructions.
	Child lock is activated.	Press twice in quick succession at the top of the door in the middle.
	Appliance is disconnected from the mains.	Check mains plug and fuses. Attach supplied emergency release to upper right and left of the furniture panel and open the door by gently pulling the emergency release.
		
	Door and door seal dirty.	Clean door and door seal with a damp cloth and a little washing-up liquid.
	Automatic door opening system not in home position.	After closing the door, wait one second until it can be opened again.
Door does not close.	Automatic door opening system not in home position.	After opening the door, wait one second until it can be closed again.
Cover on the detergent dispenser cannot be closed.	Detergent dispenser or cover guide blocked by sticky detergent residue.	Remove detergent residue.
Detergent residue in the detergent dispenser <b>9*</b> or in the detergent tab tray <b>1B</b> .	Spray arms blocked by dishes, therefore detergent is not rinsed out.	Ensure that the spray arms can rotate freely.
	The detergent dispenser was damp when filled.	Pour detergent into the dry detergent dispenser only.
Appliance stops in the wash cycle or wash cycle is interrupted.	Door not closed properly.	Close the door.
	Do not place dishes or fragrance dispenser in the detergent tab tray. Upper rack presses against the door and prevents door from being closed securely.	Check whether rear panel is being pressed in, e.g. by socket or by hose holder which has not been removed.
	Power and/or water supply interrupted.	Restore power and/or water supply.

Fault	Cause	Remedial action
Filling valves making striking noises.	Depends on domestic installation, as appliance is not defective. No effect on appliance function.	No remedial action possible.
Knocking or rattling noise.	Spray arm strikes the dishes, dishes not positioned correctly.	Position dishes so that the spray arms do not strike the dishes.
	If there is a low load, the water jets strike the washing tank directly.	Load the appliance with more dishes or distribute the dishes more evenly in the dishwasher.
	Light dishes move during the wash cycle.	Arrange light dishes securely.
Unusual foam formation.	Handwash liquid in the rinse aid dispenser.	Immediately refill rinse aid dispenser with rinse aid.
	Rinse aid spilled.	Remove rinse aid with a cloth.

## 4 Customer Service


Your Bosch® dishwasher requires no special care other than that described in the Care and Maintenance section of this manual. If you are having a problem with your dishwasher, before calling for service please refer to the Troubleshooting Guide section of the manual. If service is necessary, contact your dealer or installer or an authorized service center. Do not attempt to repair the appliance yourself. Any work performed by unauthorized personnel may void the warranty.

If you are having a problem with your Bosch® dishwasher and are not pleased with the service you have received, please take the following steps until the problem is corrected to your satisfaction:

1. Call us at 1-800-944-2904
2. Contact Customer Service from our web site:  
**[www.bosch-home.com/us](http://www.bosch-home.com/us)** or  
**[www.bosch-home.ca](http://www.bosch-home.ca)**
3. Contact your installer or the Bosch Authorized Service Contractor in your area.
4. Write us:

BSH Home Appliances Corporation  
1901 Main Street  
Irvine, CA 92614

Please be sure to include your model information as well as an explanation of the problem and the date it started. You will find the model and serial number information on the label located on the edge of the dishwasher door. Please make a copy of your invoice and keep it with this manual. The customer may be required to show proof of purchase to obtain warranty service.

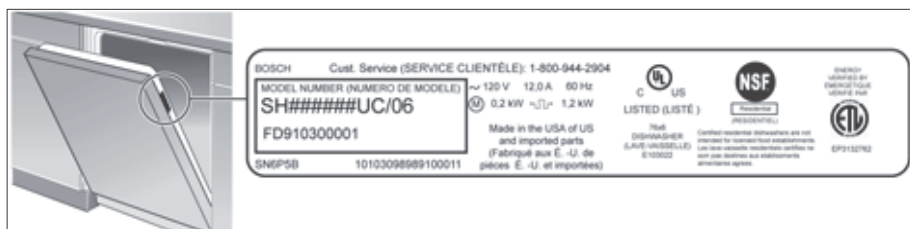

**Please note that Customer Service employees would never ask for your Home Connect password.**



## FCC COMPLIANCE STATEMENT

---

### 9 CAUTION!

Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with Part 15 of the FCC Rules.

### Operation to the following two conditions:

- e. This device may not cause harmful interference, and
  - f. this device must accept any interference received, including interference that may cause undesired operation.
- 

## INDUSTRY CANADA STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s).

### Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

## 4 Statement of Limited Product Warranty

### What this Warranty Covers & Who it Applies to:

The limited warranty provided by BSH Home Appliances Corporation (BSH) in this Statement of Limited Product Warranty applies only to Bosch® dishwashers ("Product") sold to you, the first using purchaser, provided that the Product was purchased:

- for your normal, household (non-commercial) use, and has in fact at all times only been used for normal household purposes;
- new at retail (not a display, "as is", or previously returned model), and not for resale, or commercial use; and
- within the United States or Canada, and has at all times remained within the country of original purchase. The warranties stated herein apply only to the first purchaser of the Product and are not transferable.

Please make sure to return your registration card; while not necessary to effectuate warranty coverage, it is the best way for BSH to notify you in the unlikely event of a safety notice or product recall.

### How Long the Warranty Lasts

BSH warrants that the Product is free from defects in materials and workmanship for a period of three hundred sixty five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. Labor and

shipping costs are included in this basic coverage.

This Product is also warranted to be free from **cosmetic** defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage to the finish of the Product), for a period of thirty (30) days from the date of purchase or closing date for new construction. This **cosmetic** warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This **cosmetic** warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.

### Extended Limited Warranty

BSH also provides these additional limited warranties:

- 5 year limited warranty on electronics: BSH will repair or replace any BSH microprocessor or printed circuit board if it proves to be defective in materials or workmanship (excludes labor charges).
- 5 year limited warranty on dish racks: BSH will replace the upper or lower dish rack (excluding rack components), if the rack proves defective in materials or workmanship (excludes labor charges).
- Lifetime warranty against stainless steel rust through: BSH will replace your dishwasher with the same model or a current model that is substantially equivalent or better in functionality, if the inner liner should rust through (excludes labor charges).

- BSH will replace the stainless steel door if the door should rust through (excludes labor charges). The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever.

### Repair/Replace as Your Exclusive Remedy

During this warranty period, BSH or one of its authorized service providers will repair your Product without charge to you (subject to certain limitations stated herein) if your Product proves to have been manufactured with a defect in materials or workmanship. If reasonable attempts to repair the Product have been made without success, then BSH will replace your Product (upgraded models may be available to you, in the sole discretion of BSH, for an additional charge). All removed parts and components shall become the property of BSH at its sole option. All replaced and/or repaired parts shall assume the identity of the original part for purposes of this warranty and this warranty shall not be extended with respect to such parts. BSH's sole liability and responsibility hereunder is to repair manufacturer-defective Product only, using a BSH-authorized service provider during normal business hours. For safety and property damage concerns, BSH highly recommends that you do not attempt to repair the Product yourself, or use an unauthorized servicer; BSH will have no responsibility or liability for repairs or work performed by a non-authorized servicer. If you choose to have someone other than an authorized service provider work on your Product, **THIS WARRANTY WILL AUTOMATICALLY BECOME NULL**

**AND VOID.** Authorized service providers are those persons or companies that have been specially trained on BSH products, and who possess, in the opinion of BSH, a superior reputation for customer service and technical ability (note that they are independent entities and are not agents, partners, affiliates or representatives of BSH). Notwithstanding the foregoing, BSH will not incur any liability, or have responsibility, for the Product if it is located in a remote area (more than 100 miles from an authorized service provider) or is reasonably inaccessible, hazardous, threatening, or treacherous locale, surroundings, or environment; in any such event, if you request, BSH would still pay for labor and parts and ship the parts to the nearest authorized service provider, but you would still be fully liable and responsible for any travel time or other special charges by the service company, assuming they agree to make the service call.

## Out of Warranty Product

BSH is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, pro-rates, or Product replacement, once this warranty has expired.

## Warranty Exclusions

The warranty coverage described herein excludes all defects or damage that are not the direct fault of BSH, including without limitation, one or more of the following:

- Use of the Product in anything other than its normal, customary and intended manner (including without limitation, any form of commercial use, use or storage of an indoor product outdoors, use of the Product in conjunction with air or water-going vessels);

- Any party's willful misconduct, negligence, misuse, abuse, accidents, neglect, improper operation, failure to maintain, improper or negligent installation, tampering, failure to follow operating instructions, mishandling, unauthorized service (including self-performed "fixing" or exploration of the appliance's internal workings);
- Adjustment, alteration or modification of any kind;
- A failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations;
- Ordinary wear and tear, spills of food, liquid, grease accumulations, or other substances that accumulate on, in, or around the Product;
- Any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God.

In no event shall BSH have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures or objects around the Product. Also excluded from this warranty are Products on which the serial numbers have been altered, defaced, or removed; service visits to teach you how to use the Product, or visits where there is nothing wrong with the Product; correction of installation problems (you are solely responsible for any structure and setting for the Product,

including all electrical, plumbing or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving, etc.); and resetting of breakers or fuses.

TO THE EXTENT ALLOWED BY LAW, THIS WARRANTY SETS OUT YOUR EXCLUSIVE REMEDIES WITH RESPECT TO PRODUCT, WHETHER THE CLAIM ARISES IN CONTRACT OR TORT (INCLUDING STRICT LIABILITY, OR NEGLIGENCE) OR OTHERWISE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESS LIMITED WARRANTY IS EFFECTIVE. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR CONSEQUENTIAL, SPECIAL, INCIDENTAL, INDIRECT, "BUSINESS LOSS", AND/OR PUNITIVE DAMAGES, LOSSES, OR EXPENSES, INCLUDING WITHOUT LIMITATION TIME AWAY FROM WORK, HOTELS AND/OR RESTAURANT MEALS, REMODELLING EXPENSES IN EXCESS OF DIRECT DAMAGES WHICH ARE DEFINITELY CAUSED EXCLUSIVELY BY BSH, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. No attempt to alter, modify or amend this warranty

shall be effective unless authorized in writing by an officer of BSH Home Appliances Corporation.

## **How to Obtain Warranty Service**

TO OBTAIN WARRANTY SERVICE FOR YOUR PRODUCT, YOU SHOULD CONTACT THE NEAREST BSH AUTHORIZED SERVICE CENTER, OR CALL 1-800-944-2904

## 5 Installation and connection

The dishwasher must be connected correctly, otherwise it will not function properly. The specifications for the inlet and outlet as well as the electrical connected loads must correspond with the required criteria as specified in the following paragraphs or in the installation instructions.

### Install the appliance in the correct sequence:

1. Checking appliance on delivery
2. Installation
3. Drainage connection
4. Tap water connection
5. Electrical connection

### Parts included

If you have any complaints, contact the dealer from whom you purchased the appliance or our customer services department.

- Dishwasher
- User manual
- Installation instructions
- Quick reference guide\*
- Warranty\*
- Installation materials
- Steam guard plate\*
- Rubber apron\*
- Power cord

\* depending on the features of your dishwasher

### Safety instructions

Please refer to the Important Safety Instructions for installation that are included in the separate Installation Instructions for your appliance.

## Delivery

Your dishwasher has been checked thoroughly in the factory to ensure that it is in working order. This may cause small water stains. These will disappear after the first wash cycle.

## Technical specifications

- **Weight:**  
up to 132 lbs (60 kg)
- **Voltage:**  
120 V, 60 Hz
- **Connected load:**  
1,300 W.
- **Circuit breaker:**  
12 A
- **Power input:**  
off mode (Po)\* 0.50 W.  
left on mode (PI)\* 50 W.  
in networked standby mode 2.00 W.  
\*according to regulations (EU) nos. 1016/2010 and 1059/2010. Additional functions and settings may increase the power input.
- **Water pressure:**  
at least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar).  
At a higher water pressure: connect pressure-reducing valve ahead.
- **Inlet rate:**  
minimum 10 litres/minute
- **Water temperature:**  
Cold water.  
Hot water:  
Maximum temperature 140° F (60 °C).
- **Capacity:**  
12–15 place settings (depending on the features of your dishwasher).

## Installation

The required installation dimensions can be found in the installation instructions. Level the appliance with the aid of the height-adjustable feet. Ensure that the appliance is situated securely on the floor.

- A built-under or integrated appliance which is installed subsequently as a free-standing appliance must be secured to prevent it from overturning, e.g. by screwing it to the wall or by installing it under a continuous worktop which is screwed to adjacent cupboards.
- The appliance can easily be installed in a fitted kitchen between wooden and plastic walls.

## Drain connection

1. The required work sequence can be found in the installation instructions. If required, fit a siphon with a drain connection.
2. Connect the drain hose to the drain connection of the siphon with the enclosed parts. Ensure that the drain hose is not kinked, crushed or twisted and that there is no cover plate in the drainage to prevent the drain water from flowing out!

## Water supply connection

1. Fasten the water supply connection to the tap according to the installation instructions using the enclosed parts. Ensure that the water supply connection is not kinked, crushed or twisted.
2. When replacing the appliance, always use a new water supply hose.

## Water pressure:

At least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar).  
At a higher water pressure: connect pressure-reducing valve ahead.

## Inlet rate:

Minimum 10 litres/minute

## Water temperature:

Cold water.




 
 
Hot water:

Maximum temperature 140° F (60 °C).

## Hot water connection \*

The dishwasher can be connected to cold or hot water up to max. 140° F (60 °C). Connection to hot water is recommended if the hot water can be supplied by energetically favourable means and from a suitable installation, e.g. solar heating system with circulation line. This will save energy and time. The “Hot water” setting allows you to adjust your dishwasher optimally to operation with hot water. It is recommended to have a water temperature (temperature of the incoming water) of at least 104° F (40 °C) and no more than 140° F (60 °C). It is not recommended to connect the appliance to hot water if the water is supplied from an electric boiler.

 
**To change the setting:**


1. Open the door.
2. Switch on ON/OFF switch .
3. Press Info button  for 3 seconds until the following text is indicated on the display window at the top @:  
**Scroll with < >**  
**Set with - +**  
**Leave with Setup 3 sec.**
4. Keep pressing the button  until water connection appears of the display window at the top @.
5. Make the selection with setting buttons .
6. Press and hold the Info button  for 3 seconds.

The chosen setting has now been stored.

\* optional feature which may or may not be included with your dishwasher

**Electrical connection**

- Connect the appliance to an 120 V, 60 Hz alternating current only, via a correctly installed outlet with protective grounding conductor. See rating plate for required fusing .
- The outlet must be near the appliance and freely accessible after the installation. If the plug is not freely accessible, an allpole disconnector with a contact opening of at least 3 mm must be fitted on the installation side to satisfy the relevant safety instructions.
- The connection may be modified by technicians only.
- A power cord extension may be purchased from customer service only.

 - Use only a residual current operated circuit-breaker which features the symbol . Only this extension guarantees compliance with the currently valid regulations.
- The appliance features a water damage protection system. Please note the system will function **only** when the power supply is connected.



**Removing the appliance****Also observe the sequence of worksteps here.**

1. Disconnect the appliance from the power supply.
2. Turn off the tap.
3. Undo the drain water and water supply connection.
4. Loosen fastening screws for the cabinet parts.
5. If fitted, remove the base panel.
6. Pull out the appliance, carefully pulling the hose behind.





**Transporting the appliance**

Empty the dishwasher and secure loose parts.

**Drain the appliance according to the following steps:**

1. Turn on the tap.
2. Open the door.
3. Switch on ON/OFF button .
4. Select wash cycle with the highest temperature. The estimated wash cycle duration is indicated on the digital display @.
5. Press START button \*.
6. Close the door. Wash cycle sequence starts.
7. Open the door after approx. 4 minutes.

## en-us Installation and connection

8. Press START button  until "Program was terminated"/"Ready in one minute." is indicated at the digital display .
9. Close the door.
10. Open the door after approx. 1 minute.  
The digital display  indicates; "Finished".
11. Switch off ON/OFF switch .
12. Turn off the tap, disconnect supply hose and drain water.

**Note:** Transport appliance upright only. This prevents residual water from running into the machine control and damaging the wash cycle sequence.

## Securing the appliance against frost

If the appliance is in a room where there is a risk of frost (e.g. holiday home), empty the appliance completely (see "Transporting the appliance").



**Wi-Fi® Module  
FCC/IC  
Statements**

**Model: COM1  
FCC ID: 2AHES-COMGEN1  
IC: 21152-COMGEN1**

The Home Connect module is a communication device designed to provide communication between appliances and smart devices.

This module is integrated at the factory, under direct control of B/S/H Home Appliances Corporation, and is not user serviceable or upgradable.

At least 20cm separation distance should be maintained from device to user.

**FCC COMPLIANCE STATEMENT**

**CAUTION:** Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with Part 15 of the FCC Rules. Operation to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**INDUSTRY CANADA STATEMENT**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#4) SFTFSWFT UIF SJHIU UP DIBOHF TQFDJGJDBUJPO PS EFTJHO XJUIPVU OPUJDF.  
4PNF NPEFMT BSF DFSWJGJFE GPS VTF JO \$BOBEB. #4) JT OPU SFTQPOTJCMF GPS  
QSPEVDUT XIJDI BSF USBOTQPSUFE GSPN UIF 6OJUFE 4UBUFT GPS VTF JO \$BOBEB.  
\$IFDL XJUI ZPVS MPDBM \$BOBEJBO EJTUSJCVUPS PS EFBMFS.

#4) TF SÎTFSWF MF ESPJU EF NPEJGJFS MFT EPOOÎFT UFDIOJRVFT PV MF EFTJHO TBOT  
QSÎBWJT. \$FSUBJOT NPEŃMFT TPOU DFSWJGJÎT QPVS VOF VUJMJTBUJPO BV \$BOBEB.  
#4) O'FTU QBT SFTQPOTBCMF QPVS MFT QSPEVJUT USBOTQPSUÎT EFT ±UBUT-6OJT QPVS  
VOF VUJMJTBUJPO BV \$BOBEB. 7ÎSJGJFS BVQSŃT E'VO NBSDIBOE PV EJTUSJCVUFVS DBOBEJFO.

#4) )PNF "QQMJBODFT \$PSQPSBUJPO  
1901 .BJO 4USFFU, 4VJUF 600  
\*SWJOF, \$" 92614  
1-800-944-2904



**9001182490**

(9603)