

 


 
 
 


WIRELESS FM TRANSMITTER WITH REMOTE

Congratulations on purchasing the FM Transmitter
Follow these easy steps to get started

AUDIO DEVICE, SD/ MMC/TF CARD & USB FLASH DISK

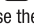- 1) Insert the SD/MMC/TF Card into the SD/MMC/TF Card slot of transmitter
Insert the USB Flash Drive in USB Port of transmitter
*unit can read SD/TF cards up to 16GB
Insert the audio device (MP3 Players or Cell phones) in the audio jack of FM transmitter
- 2) Press the  button once to start playing an MP3 file. Press again to pause.
- 3) Press the  button once to advance to the next file. Press and hold the  button to increase the volume.
- 4) Press the  button once to go to the previous file. Press and hold the  button to decrease the volume.
- 5) For audio device use your device's Play, Pause, Forward & Back Functions.

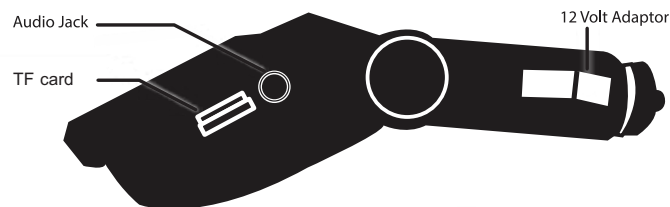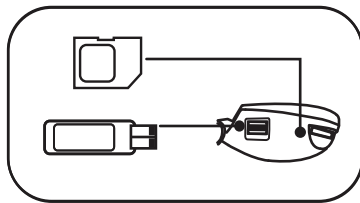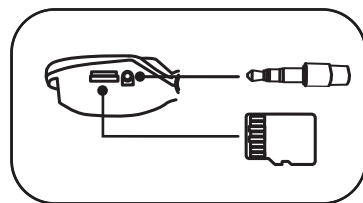

 
Previous Track & Volume Decrease
(USB FLASH DISK & SD/MMC/TF CARD)
Press this button once to return to the previous file. Press and hold to decrease the volume.



Next Track & Volume Increase
(USB FLASH DISK & SD/MMC/TF CARD)
Press this button once to advance to the next file. Press and hold to increase the volume.



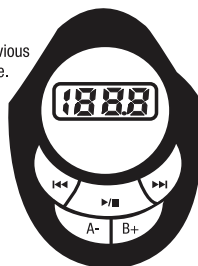


Play/Pause
(USB FLASH DISK & SD/MMC/TF CARD)
Press this button once to start playing an MP3 file. Press it again to pause.

 


Channel Button
(USB FLASH DISK & SD/MMC/TF CARD)
Press the channel button to change the broadcasting frequency.

WIRELESS FM TRANSMITTER WITH REMOTE

REMOTE INSTRUCTION

- 1) When you plug in your USB Flash drive or SD/TF Card it will list your songs in order of the upload to your device. It will also associate a track number to the song. To go to a song, press the track number associated with the song
(Example: To go to the #135 song press the numbers "1", "3", "5" The FM transmitter screen will flash the track number)
- 2) Press the **CH+** or **CH-** to change the frequency or press a frequency number then press **CH**
(Example: To go to FM frequency 107.5 press the numbers "1", "0", "7", "5"
The screen will flash the FM frequency then press **CH**). You can also **switch music between two folders by pressing 100+ or 200+**
- 3) To change the volume on the remote press the **-** to decrease or **+** to increase the volume.
- 4) Press the **EQ** button to change the mode of the transmitter from: NORMAL, POP, ROCK, COUNTRY, CLASSIC, JAZZ etc. The mode will cycle through the types individually with each push of the button
- 5) Press  to Play/ Pause your music. and press  to go to the next song, or press  to go back.

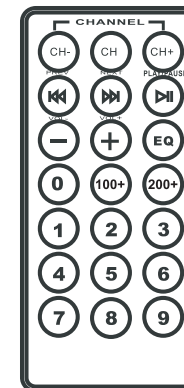

1500061 FM TRANSMITTER

FCC Information FCC ID: 2AHFC-1500061

It is a violation of FCC rules for you to change or modify this product with express approval of the manufacturer. Altering this product could void your authority to operate it.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.