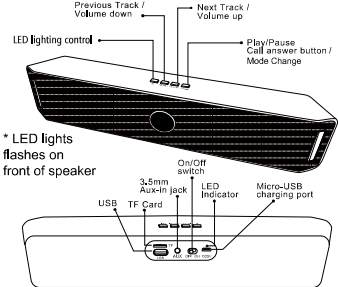
	<p><b>Table of contents</b></p> <p>1 Introduction..... 1</p> <p>2 Package includes..... 2</p> <p>3 Connection Diagram..... 2</p> <p>4 How to use..... 3</p> <p>4.1 General functions..... 3</p> <p>4.2 Pairing to mobile phone..... 4</p> <p>4.3 Charging your speaker..... 6</p> <p>5 Technology specification..... 7</p> <p>6 FAQ..... 8</p> <p><b>FCC Information</b>      <b>FCC ID# 2AHFC-BB871</b></p> <p>This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Federal Communications Commission (FCC) Statement</p> <p>This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>- Reorient or relocate the receiving antenna.</li> <li>- Increase the separation between the equipment and receiver.</li> <li>- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.</li> <li>- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.</p> <p><b>Warning:</b></p> <p>This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.</p>	<p><b>1.Introduction</b></p> <p>Congratulations, and thank you for choosing the Billboard® Bluetooth Wireless Speaker.</p> <p>This manual will help you operate the Bluetooth Wireless Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Bluetooth Wireless Speaker.</p> <p><b>PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR WIRELESS SPEAKER, KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE</b></p> <p>Your Wireless Speaker has an internal rechargeable battery. Improper usage may result in the Wireless Speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:</p> <ol style="list-style-type: none"> <li>1. Do not disassemble, throw away or damage the Wireless Speaker.</li> <li>2. Store the Wireless Speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.</li> <li>3. Keep the Wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember a closed car acts as a green house allowing the inside temperature to possibly reach over 200F.</li> <li>4. The Wireless Speaker is not a toy. Please keep it out of the reach of young children.</li> <li>5. Please do not discard the Wireless Speaker. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.</li> </ol>	<p><b>2. Package includes</b></p> <ul style="list-style-type: none"> <li>1 X Bluetooth Wireless Speaker</li> <li>1 X Micro USB Charging Cable.</li> <li>1 X 3,5mm Aux-in Cable</li> <li>1 X User Manual</li> </ul> <p><b>3.Connection Diagram</b></p> 	<p><b>4.How to use</b></p> <p><b>4.1.General Functions</b></p> <table border="1"> <thead> <tr> <th>Desired Result</th> <th>Required Action</th> </tr> </thead> <tbody> <tr> <td>Turn on &amp; Enter the pairing mode</td> <td>Switch the On/Off button at the back.</td> </tr> <tr> <td>Pairing</td> <td>You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)</td> </tr> <tr> <td>Play / pause</td> <td>Press <b>▶/⏸/◀</b> to play when the device is paused and press <b>▶/⏸/◀</b> to pause when the device is playing.</td> </tr> <tr> <td>Next</td> <td>Press <b>VOL+ / ▶</b> is for next music.</td> </tr> <tr> <td>Previous</td> <td>Press <b>◀ / VOL-</b> is for previous music.</td> </tr> <tr> <td>Volume up</td> <td>Long press the <b>VOL+ / ▶</b> for volume up .</td> </tr> <tr> <td>Volume down</td> <td>Long press the <b>◀ / VOL-</b> for volume down .</td> </tr> <tr> <td>Charging</td> <td>Plug the charger to micro-USB port at the back of the device. (Red LED is on)</td> </tr> <tr> <td>About call</td> <td>Short Press <b>▶/⏸/◀</b> can answer a call. Press twice to reject a call.</td> </tr> <tr> <td>Input Mode change</td> <td>First insert aux-in cable, then can change the Aux in mode.</td> </tr> <tr> <td>TF (micro SD card) playback</td> <td>Can insert TF card to TF card slot either before or after switch on the speaker.</td> </tr> <tr> <td>USB flash drive playback</td> <td>Can insert USB to USB slot either before or after switch on the speaker.</td> </tr> <tr> <td>FM Mode</td> <td>Long press <b>▶/⏸/◀</b> button to change, insert charging cable in the speaker, short press <b>▶/⏸/◀</b> button will search through and preset all available frequencies, press "next" &amp; "previous" button to search through the preset frequencies.</td> </tr> <tr> <td>Light up LED effect change</td> <td>Press the <b>▶/⏸/◀</b> button to change the LED light mode. To turn off the LED light function press the <b>▶/⏸/◀</b> button.</td> </tr> </tbody> </table>	Desired Result	Required Action	Turn on & Enter the pairing mode	Switch the On/Off button at the back.	Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)	Play / pause	Press <b>▶/⏸/◀</b> to play when the device is paused and press <b>▶/⏸/◀</b> to pause when the device is playing.	Next	Press <b>VOL+ / ▶</b> is for next music.	Previous	Press <b>◀ / VOL-</b> is for previous music.	Volume up	Long press the <b>VOL+ / ▶</b> for volume up .	Volume down	Long press the <b>◀ / VOL-</b> for volume down .	Charging	Plug the charger to micro-USB port at the back of the device. (Red LED is on)	About call	Short Press <b>▶/⏸/◀</b> can answer a call. Press twice to reject a call.	Input Mode change	First insert aux-in cable, then can change the Aux in mode.	TF (micro SD card) playback	Can insert TF card to TF card slot either before or after switch on the speaker.	USB flash drive playback	Can insert USB to USB slot either before or after switch on the speaker.	FM Mode	Long press <b>▶/⏸/◀</b> button to change, insert charging cable in the speaker, short press <b>▶/⏸/◀</b> button will search through and preset all available frequencies, press "next" & "previous" button to search through the preset frequencies.	Light up LED effect change	Press the <b>▶/⏸/◀</b> button to change the LED light mode. To turn off the LED light function press the <b>▶/⏸/◀</b> button.
Desired Result	Required Action																																	
Turn on & Enter the pairing mode	Switch the On/Off button at the back.																																	
Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)																																	
Play / pause	Press <b>▶/⏸/◀</b> to play when the device is paused and press <b>▶/⏸/◀</b> to pause when the device is playing.																																	
Next	Press <b>VOL+ / ▶</b> is for next music.																																	
Previous	Press <b>◀ / VOL-</b> is for previous music.																																	
Volume up	Long press the <b>VOL+ / ▶</b> for volume up .																																	
Volume down	Long press the <b>◀ / VOL-</b> for volume down .																																	
Charging	Plug the charger to micro-USB port at the back of the device. (Red LED is on)																																	
About call	Short Press <b>▶/⏸/◀</b> can answer a call. Press twice to reject a call.																																	
Input Mode change	First insert aux-in cable, then can change the Aux in mode.																																	
TF (micro SD card) playback	Can insert TF card to TF card slot either before or after switch on the speaker.																																	
USB flash drive playback	Can insert USB to USB slot either before or after switch on the speaker.																																	
FM Mode	Long press <b>▶/⏸/◀</b> button to change, insert charging cable in the speaker, short press <b>▶/⏸/◀</b> button will search through and preset all available frequencies, press "next" & "previous" button to search through the preset frequencies.																																	
Light up LED effect change	Press the <b>▶/⏸/◀</b> button to change the LED light mode. To turn off the LED light function press the <b>▶/⏸/◀</b> button.																																	

**4.2.Pairing to Mobile phone or other device**

To use your Bluetooth speaker, you must first pair your speaker with a phone or a computer. Once your Bluetooth speaker is paired to a specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.

**Pairing to a phone or Entertainment device:**

- Turn on your phone and ensure its Bluetooth function is activated
- Turn on the speaker to go to the pairing mode.
- Search your Bluetooth devices on your phone by following the phone's instructions. Refer to your phone's user manual for more information.
- After a few seconds the phone will list "BB-BT-SPEAKER" as a discovered device. Select it and follow your phone's to instruction pair.
- Your phone will confirm the pairing, and then press Yes/Ok.
- Finally, select to connect with "BB-BT-SPEAKER" from your phone.

**Pairing to a computer or Entertainment device:**


- If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Connect the adapter to your computer and ensure its Bluetooth function is activated.
- Turn on the speaker to get into the pairing mode.
- Open the Bluetooth software (such as Blue Soleil) installed on your computer, and select "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.
- After a few seconds the "BB-BT-SPEAKER" will be listed in the Bluetooth software of your computer as a discovered device. Select this icon and click right button of your mouse to select "pairing" item, then select "connect with audio device" with the same operation.

**To play music without bluetooth functionality:**

- Use the included AUX in cable to plug one end into wireless speaker and the other end into your music device. Press play on your music device and it will begin playing on the wireless speaker.

**4.3.Charging your speaker**

The speaker is convenient to connect to a USB charger via its Micro-USB port. Make sure that your speaker is fully charged for at least 6 hours before initial use. Insert one terminal of your charger to the USB port of your PC and the other terminal to the Micro-USB port. While charging, the red LED light is constantly on. When charging is completed, the LED turns off.



**Warning:**

- You must select a qualified charger from a reliable source.
- You must charge the Bluetooth speaker if it has not been used for more than 12 months.

**5.Technical specification**

Parameter	Value
Bluetooth Specification	4.1
RF Range	33 feet
Frequency Response	20Hz-20KHz
Loudspeaker Output	6W
Play Time	Up to 2-3 hours
Charging Time	Around 2 hours
Dimension (L×W×H)	320mm x 52mm x 65mm
Weight	1.2 lbs.

**6.FAQ**

**1. Why is there no power even when the Speaker is powered on?**  
**Ans:** Ensure the battery has been charged for at least 6 hours for its first use. The LED turns on when it starts charging.

**2. There is no sound when played.**  
**Ans:** Check the connection between speaker with phone or computer, if the connection is not established, please reconnect again. Make sure the speaker is paired and connected with your phone or other master device.

**LIMITED WARRANTY**

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded items set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive remedies granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send device with the product to:  
ESI Cases and Accessories,  
44 East 32nd Street, 6th floor  
New York, New York 10016  
\* Enclose proof of purchase and \$11.95 for Shipping and Handling.

TECHNICAL SUPPORT: 212 863-8838  
E-MAIL: techsupport@esicellular.com

© 2017 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC. Bluetooth is a registered trademark of Bluetooth SIG