



2. Device Activate & Charge

Make sure power is working normally before initial use. In case device is unc low battery, connect the device to the charger. Device will automatically boot up (please connect the USB in normal DC port (5V-500mA) for charging as below. The host should be separated from the strap when charging).



3. Pair the device Please make sure the Bluetooth is ON and then open app "VeryfitPro" and go to bind. When searching and pairing device, please press on the key of device and activate the device (screen on). App will search the device automatically, choose the device name and connect the device



to the app.



switch ON in the APP.

Key Definitions:

Tap: function switch



Once the device connected to the app successfully, it will record and analyze your activities and sleep automatically, Touch the click toggle, the display order is as follows

1. Normal Mode



Note: alarm mode and find phone will only be displayed on the screen after

2. Remote Camera Shoot Mode

→ >>> → **→** 3

Long press 1S into the Sport stop Notify mode

0 0

end of the movement

4. Notification Mode

Charging notify

Charge full notify

Put the camera shoot ON in the APP, then device enter in remote shoot screen control remote photograph shooting with following actions: distance and calorie consumption in the app; (lift wrist sense / tap screen) to shoot a picture.



Incoming call notify 13523600 Message notify Hello~Hel

Alarming notify 12:45 Am Sedentary notify 4 ···· †

Anti-lost notify \$ Low-power notify

1.Under incoming call, message notify mode, the screen will still display the

2. If there is a call or message come, the device will force into call/message a

mode no matter under whatever other mode, after quit, it returns to previous mode

last time text and sliding, when there is a new notification coming in.

▼ 12.09 km -> ★ 6789 -> 12:45 ± vibrates to remind. Remote Camera Control: Sport Distance Mode Sport Calories Mode

Device Data Storage:

The activity data will be cleared every 0:00am as a cycle, but the device itse could restore 7 days' data, after 7 days, the data will be cleared. We suggest user to sync data with app at least one time within 7 days during use.

Vearing and Maintenance



Our products are designed for you to wear throughout the day. So please follow a few brief instructions when you are wearing and maintaining your smart devices. To keep your wristband clean and your skin comfortable, we put forward the following tips:

Functions Instruction

Activities Record:

Record daily activities, you could check daily activities including steps,

Notification Alerts: Alarm alert, call alert, sedentary alert, etc. by silent vibration;



Regularly clean your wrist and the smart wristband, especially after

sweating in the exercise or being exposed to substances such as soap or

O not wash the wristband with household cleanser. Please use soapless

detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

Please make sure the smart phone Bluetooth is ON and smart phone OS

Please make sure the device is near the smart phone when pairing (normal

Please make sure the device is not under low battery. If there is still problem

Some smart phone Bluetooth service will be abnormal when reboot. Please

reboot the Bluetooth or reboot smart phone for pairing device.

"Mine-SystemSetting" and choose "Reboot Device".

Make sure the device is connected with app, go in the app, enter

0.5m) and among the normal Bluetooth communication distance range

detergent which may attach on the internal side of the wristband.

O Can't find device when pairing device?

Android 4.4 & above and iOS 7.0 & above.

after full charge, please contact us.

How to Restore Factory Defaults

• Can't connect the device with app?

Sleep Monitoring: Device could automatically recognize your state and monitoring the whole

sleep progress with analyzing the deep sleep and light sleep hours; For spots or stains that are not easy to remove, scrub with alcohol and then follow the above steps.

When the smart phone is beyond the Bluetooth range (5m), the device

Operation on the screen could control remote photograph shooting.



· If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a · If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

How to undate the device

Make sure the device is connected with app, go in the app "Device"-" Device update", please wait some minutes before update done.

Basic Specifications

Model: ID115U CPU: Nordic Sensor: kionix

Host Weight: 17g

Battery Type: Polymer Rechargeable Li Battery Battery Capacity: 45mAh

Data Sync: Bluetooth 4.2

Working Temperature: -20C°-45C° Standby: more than 7 days

Frequency bands: 2402-2480MHz

Maximum output power: -3,66dBm(for EU compliance)

This product is applied with professional Bluetooth RF signal and self developed algorithm, the accuracy of step pedometer could be up to 95%.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

Class B digital device, pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This equipment has been tested and found to comply with the limits for a

However, there is no guarantee that interference will not occur in a particula

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

installation

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separatel The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting point or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and the treatment of toxic substances.



名称 材质 ID115U说明书 105g铜板纸 尺寸 备注 60x95mm 四色 双面 编号 4.SM.ID115UXGX0 版本号 20180725V.1.0