
 
R/C Cupcake Car

Instruction Manual (Folding / Black Color Printing) 12.75in. x 4.33in (11cm x 7cm) **FRONT**

OUTPUT_REVISED_17 JUN 2024

7cm

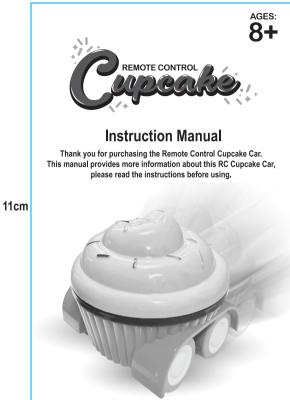







Remote Controller & Batteries Installation

BACK OF REMOTE CONTROLLER

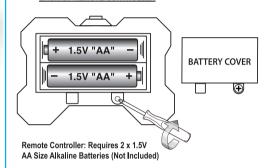

Race Car Power On/Off & Batteries Installation

 
Power On/Off Slide the ON/OFF Switch to ON to turn on the Remote Control Race




RC Cupcake Car: Requires 3 x 1.5V AAA Size Alkaline Batteries (Not Included)


When placing the batteries, you must insert according to the correct polarity, the Remote Control Race Car won't function if batteries are

 Operate Your Car

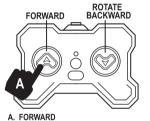



Operate Your Car

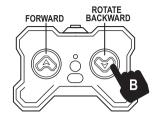

B. ROTATE BACKWARD Press the ROTATE BACKWARD button to move rotate backward the car



Care and Maintenance

- 1. Always use dry and soft cloth to clean this product,
- 2. Avoid this product from being exposed to sunlight or heat.
- 3. Check the product regularly. If any damages are discovered. please stop using immediately, until it is completely repaired in good working condition.

BACK

IMPORTANT: BATTERY INFORMATION

For AAA Batteries:

⚠ WARNING: TO AVOID BATTERY LEAKAGE

 The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222)

2) Always purchase the correct size and grade of battery most suitable for intended

3) Do not mix old and new batteries, alkaline, standard (Carbon -Zinc) or rechargeable

(Nickel-cadmium) patteries.
4) Clean the battery contacts and those of the device prior to battery installation.
5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).

For AA Batteries:

⚠ WARNING: TO AVOID BATTERY LEAKAGE

Be sure to insert the batteries correctly, and alway follow the toy/game and battery manufacturers' instructions.

Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-admium) batteries.

Always remove weak or dead batteries from the product.

Remove the battery if the product is left unused for a long period of time.

WARNING

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing,

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient,

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property. and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio / TV technician for help.

RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate



FCC ID:2AHGJJMRC036-27-1

Distributed By: 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia PA 19106

Keep All Relevant Information for Future Reference