

RADIO CONTROL DRIFT FORMULA CAR INSTRUCTION MANUAL



Thank you for purchasing the Remote Control Drift Formula Car. Before playing the Remote Control Drift Formula Car, please read the instruction manual carefully and keep it for reference.

Product Overview & Package Contents

Remote Control
Drift Formula Car
x 1



Remote
Controller
x1



 
Instruction
Manual



Batteries Installation


For Drift Formula Car

1. Remove the screw and open the battery cover.
 2. Install the Rechargeable 3.7V Lithium battery.
 3. Unscrew the battery cover on the car.
- Connect and install the 3.7V Lithium battery in battery compartment on the bottom of car.
4. Slide the ON/OFF Switch to ON to turn on the Drift Formula Car.

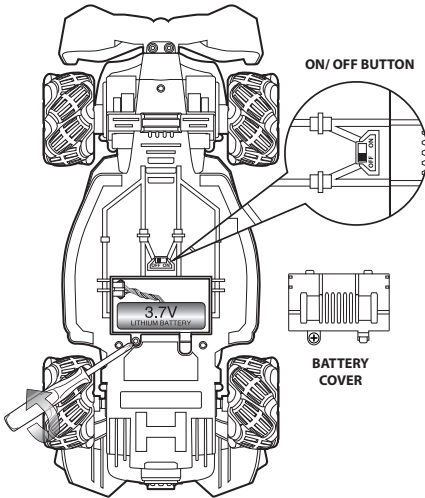

Charging the Lithium Battery

 1. Connect the rechargeable Lithium Battery to USB charger, plug it into computer or USB charging head for charging. The charging time about 2-3 hours before use.

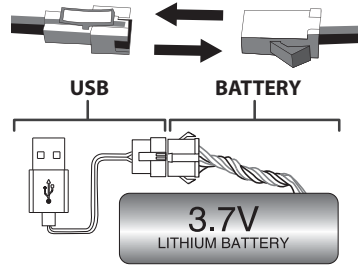

USB Cable Rating
500mA Max Charging Power



RC Drift Car Contains
1 (One) Rechargeable 3.7V Lithium Battery.

For Controller

1. Remove the screw and open the battery cover
2. Install two 1.5V AA size Alkaline batteries
3. Put the screw back to lock the battery cover

 
Notice:

When placing the batteries, you must insert according to the correct polarity, the Drift Formula Car won't function if batteries are reversed.


Remote Controller Requires

2 (Two) x 1.5V AA Alkaline Batteries (Not Included).

Caution: This Product is only used in the 3.7 V output device plug!

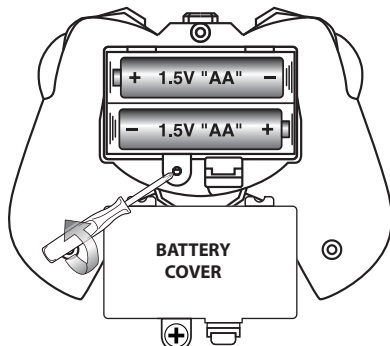

 Functional Description of the Controller

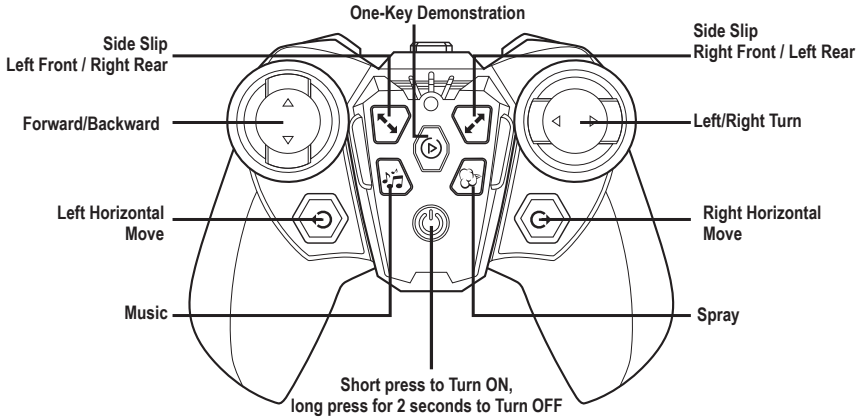

Operate Your Car

	Short press to Turn ON, long press for 2 seconds to Turn OFF		One-Key Demonstration
	<p>Forward</p> <p>Backward</p>		<p>Turn Left</p> <p>Turn Right</p>
 	<p>Left Horizontal Move</p> <p>Right Horizontal Move</p>		<p>Side Slip Right Front</p> <p>Side Slip Left Rear</p>
	<p>Side Slip Left Front</p> <p>Side Slip Right Rear</p>		<p>Music</p>
	<p>Spray</p>	<p>For mist spraying: Open the water filler cover and use water filler to align the hole for water filling. Fill in with clean tap water but leave space to close the cap.</p> <p>water filler cover</p> <p>water filler (included)</p>	

Care and Maintenance

1. Always use dry and soft cloth to clean this product.
2. Avoid this product from being exposed to sunlight or heat.
3. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.
4. Do not play the vehicle in the water or damp environment.
5. Safe disposal of batteries. Do not throw batteries in the fire because the battery will leak and cause an explosion.

⚠ IMPORTANT: BATTERY INFORMATION

TO AVOID BATTERY LEAKAGE

Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.

Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.

Remove exhausted or dead batteries from the product.

Remove batteries if product is not to be played with for a long time.

Do not short-circuit the supply terminals.

Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment.

Reset (switching ON & OFF again or removing and re-inserting batteries) if necessary.

POSSIBLE HEAT HAZARD

If the battery needs to recharge, please wait 10-15 minutes to let the battery cool down before charging.

Do not overcharge the battery. The battery should be removed from charger immediately and cooled down if the battery is in the high temperature. Otherwise, the battery may become damaged. Always pay attention to when you are charging the battery. Do not disassemble or reconstruct the battery. Do not connect the battery with an electrical outlet.

When you are charging the battery, please do not touch the battery or the charger. Do not connect the battery with an electrical outlet.

FOR YOUR SAFETY

The charging cable included with this item is intended for use with this product only.

⚠ WARNING

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or experienced radio / TV technician for help.

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or experienced radio / TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Conforms to ASTM F963-23
CLASS 1 LED PRODUCT

Distributed By 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106
Made in Shantou, China



FCC ID: 2AHGJJMRC044-27-01