 


F I I I®

THE ART OF AUDIO

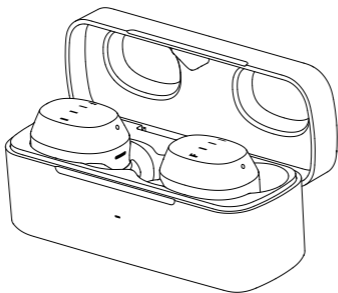 


F I I I T1 XS


TRUE WIRELESS EARBUDS

USER MANUAL

Packaging Content

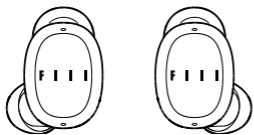

Earbuds X2
(L/R)

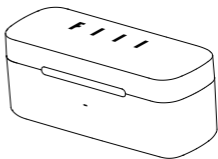 

Charging Case X1



Earwings X3
L/M/S



 
Eartips X4
L/M/S/XS



**Type C Charging
Cable X1**


Main User Interfaces

● Earbud

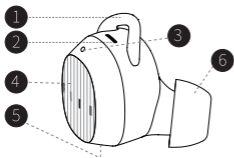


- 1 Earwing
- 2 LED indicator
- 3 ENC microphone
- 4 Touch control
- 5 Call microphone
- 6 Eartip

 ● Charging Case


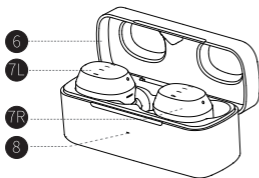


 - 6 Charging Case Cover
- 7L Left earbud
- 7R Right earbud

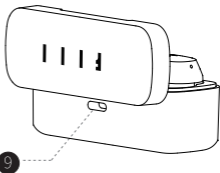


- 8 Charge indicator
- 9 Type-C connector

  Get Started

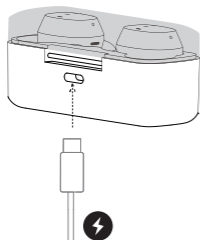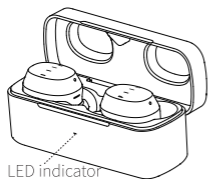

● STEP1

 If charging case's LED does not light on after open the charging case at first, please connect USB cable to charge more than 10min.

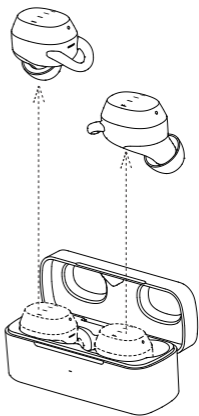

● STEP2

Open the charging case then earbuds will automatically get sync and enter pairing mode without any manual operation.

*Notes : Please charge the charging case via USB adapter in advance.

Bluetooth Pairing

 
 
● Bluetooth pairing

For first usage of brand new FIIL T1 XS, please refer to page5 “Get Started”, the earbud status indicator will continue to blink blue once entered pairing mode.

For a paired FIIL T1 XS , please delete its pairing history in the device list or when the earbuds are turned off, press and hold any one of earbuds until the LED indicator blinks blue

● Search Connection

Enter setup menu of audio source devices, select “search device” in “Bluetooth” then select “FIIL T1 XS” in the device list to connect.

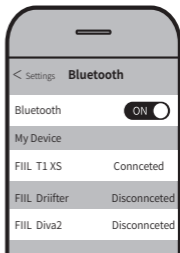


Earbuds Sync

● Auto-Sync


Please refer to page5 “Get Started”, the left and right earbuds will automatically get synced after Step2.

 ● Manual Sync

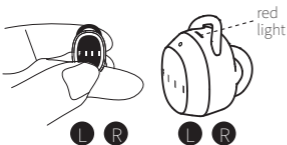


Step 1 - Power Off Earbuds

 Press and hold both earbuds at the same time, do not release your fingers until both red lights are on for 3 seconds.

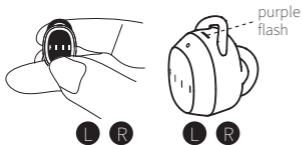

Step 2 - Reset Sync

 Press and hold the earbuds again, do not release your fingers until the purple light is off.
Note: Please hold your finger until purple light and ignore all other lights during above process.

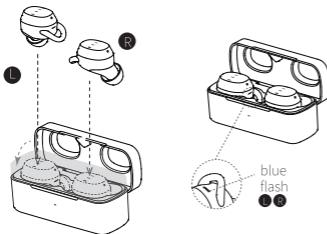


Step 3 - Reconnect Bluetooth

① Put earbuds back in the charging case and close it;
② Delete the "FIIL T1 XS" in your bluetooth device list;
③ Repeat the "Search Connection" in Bluetooth Pairing(Page 6);
*Notes: If a purple light comes on in earbud during ③, please **do not** connect Bluetooth but repeat ① and wait a little longer, or repeat "Step 2 -Reset Sync".

Ear-in Wear Detection

This function is provided by fiil + APP

 - 1 FIIL T1 XS uses capacitance sensor to indicate whether the earbuds is worn or not. Please choose the appropriate size of ear-buds and ear wings to make sure the earbuds is worn correctly.

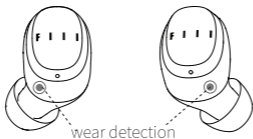

- 2 Please adjust the detection sensitivity from low to high, until it indicates headset is detected as wearing



? Not Detected



Default



✓ Wearing Detected



 
High

- 3 The incorrect sensitivity setting may result in confusion of wearing detection function or some unnecessary misoperation.

TOUCH SENSITIVITY

This function is provided by fiil + APP

If you encounter a touch operation error trigger or self-trigger, it means that the current touch sensitivity is too high and needs to be lowered. If you feel the touch success rate is low, and the effect of adjusting the touch position is not obvious, you need to set the sensitivity to high.

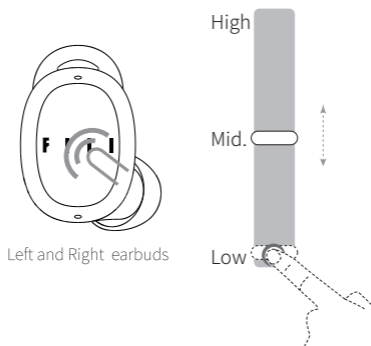


Note: touch sensitivity is set to medium as default

How to Control

● User Interface

 Full Control Mode

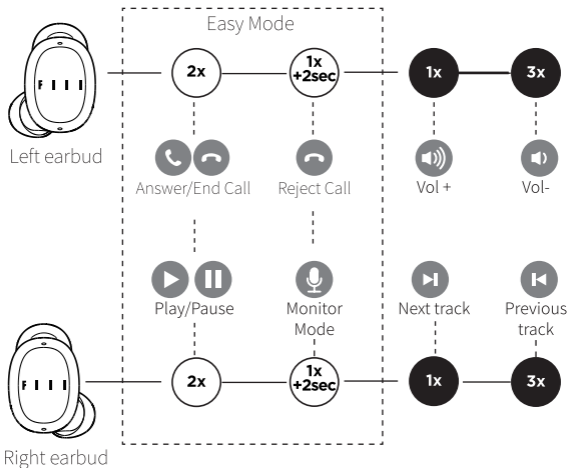


*Notes: full control mode can be activated in the fiil + APP

How to charge

● Charge earbud

- When earbud reminds “recharge headset” or the LED indicator blinks red , that means battery is low and earbud should be charged.
- Place the earbuds into charging case and close, then earbud will be charged.

 *Notes: Earbud will power off during charging.

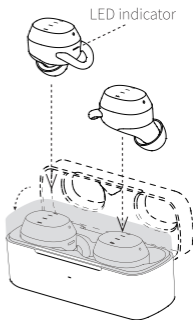


● Charging Case indicator

- When the LED indicator is on, it means the earbuds are being charged .

LED Indicator	status
Red light flash	Low battery
Yellow light on	Charging case battery lowe
Green light on	Trickle charging
LED off	Charge complete

 
- When the LED indicator is off, it means earbuds are fully charged .

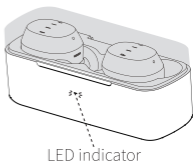

How to charge

● Recharge Charging Case

 - When charging case is unable to charge earbud or its LED indicator blinks red, it means battery low and charging case should be recharged.
- Please connect Type-C cable with USB adapter to recharge charging case.

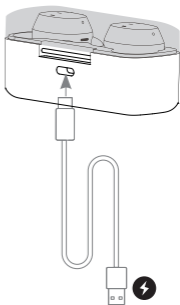


● Charging Case indicator

- When both red LED indicators are light on, it means the charging case is being charged.

LED Indicator	status
Red light flash	Low battery
Yellow light on	Fast charging
Green light on	Trickle charging
LED off	Fully charged

 - When LED indicator is light off, it means the charging case and earbuds are fully charged.

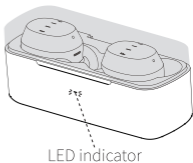

Product Parameters

Item	Specifications
Earbud weight	~4.8g/each
Charging case weight	~30g
User Mode	Bluetooth True Wireless
Bluetooth	V5.0, supported protocols: HSP , HFP , A2DP , AVRCP BT range: up to 30m. Pairing code: 0000. iOS and Android devices are supported.
Audio specification	Supported Code: AAC (for iOS) /SBC; Speaker specifications: ϕ 6.1mm, frequency range: 15Hz-22kHz
Power and battery	Rechargeable lithium-polymer battery; music time: up to 6 Hrs (medium level) on a single charge; Bluetooth standby time: up to 6 days ; charging time: ~ 40 minutes. Charging case: add 3 more charge cycle (18Hrs+)
Operating environment	Operating temperature: 0°C~50°C; storage temperature: -30°C to 70°C; IEC60529-IPX5 Certified(earbuds)
Voice reminder	English
Certification	BQB Bluetooth 5.0,SRRC,RoHS,REACH,FCC,IC,CE,IPX5

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AHGU-F026

IC STATEMENT

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.