

ARWORK INFORMATION PANEL

PRODUCT NAME: SW-03-ULLA, SW-03LORI, SW-03SPLAT, SW-06DISC

ARTWORK TYPE: PRODUCT PACKAGING
 MANUAL STICKER






MATERIAL: 80gsm PAPER

FINISH: matt laminate

CUTTER GUIDE SIZE: H80mm x W60mm (per page)

PRODUCT CODE: SW-03ULLA, SW-03LORI, SW-03SPLAT, SW-03DISC

BARCODE: TYPE: EAN 13, 80%

CMYK	SPECIFIC PANTONE COLOURS	FOLDING GUIDE	CUTTER GUIDE
		 Spot Colour 'Folding'	 Spot Colour 'Cutter guide'
			
			
			

FONT LISTING:

WHERE	WHAT
1. Product Title	XXXX
2. General Text	XXXX
3. TU Details	XXXX
4. Warnings	XXXX

NOTES:

VERSION DATE:


DATE	DESIGNER
20/08/2018	FRANKIE ALBION
28/08/2018	FRANKIE ALBION

WHEN SENDING FINAL ARTWORK TO FACTORY PLEASE MAKE SURE ALL FONTS HAVE BEEN OUTLINED, AND ALL IMAGED EMBEDDED.

EN	DE	ES
<p>Charging your Phone</p> <ol style="list-style-type: none"> 1. Insert the Micro USB cable (supplied) into the charger and connect to a USB charging port. 2. Place your mobile device onto the wireless charger. You may need to move your device slightly to find the most effective charging location 3. Once your phone is fully charged disconnect the wireless charger. <p>Caution Do not attempt to repair or disassemble the wireless charger. Any signs of wear and tear please discard immediately. Do not use if connections are loose. Do not use your wireless charger in humid, dusty or high temperature environments. Do not place your wireless charger near magnets. Wipe clean with a damp cloth only. Do not use detergents.</p>	<p>Laden Ihres Handys</p> <ol style="list-style-type: none"> 1. Das beiliegende Micro-USB-Ladekabel am Ladegerät und an einem USB-Ladeanschluss anschließen. 2. Legen Sie Ihr Handy auf das Wireless-Ladegerät. Möglicherweise müssen Sie Ihr Gerät geringfügig bewegen, um die effektivste Ladeposition zu finden. 3. Trennen Sie das Wireless-Ladegerät ab, wenn Ihr Handy vollständig geladen ist. <p>Warnhinweise Versuchen Sie nicht, das Wireless-Ladegerät zu reparieren oder auseinanderzubauen. Bei jeglichen Verschleißerscheinungen bitte sofort entsorgen. Nicht mit losen Verbindungen verwenden. Verwenden Sie Ihr Wireless-Ladegerät nicht in feuchten, staubigen oder sehr heißen Umgebungen. Bringen Sie Ihr Wireless-Ladegerät nicht in die Nähe von Magneten. Verwenden Sie zum Reinigen nur ein feuchtes Tuch. Verwenden Sie keine Reinigungsmittel.</p>	<p>Carga de tu teléfono</p> <ol style="list-style-type: none"> 1. Introduce el cable Micro USB (incluido) en el cargador y conecta con un puerto de carga USB. 2. Coloca tu dispositivo móvil en el cargador inalámbrico. Puede que tengas que mover tu dispositivo ligeramente para encontrar la ubicación de carga más efectiva. 3. Una vez que el teléfono esté totalmente cargado, desconecta el cargador inalámbrico. <p>Precaución Abstente de reparar o desmontar el cargador inalámbrico. Ante cualquier signo de desgaste, desecha el producto de inmediato. No utilices el producto si las conexiones no son firmes. No utilices el cargador inalámbrico en entornos húmedos, polvorientos o con elevadas temperaturas. No coloques el cargador inalámbrico cerca de imanes. Limpia el producto con una bayeta húmeda exclusivamente. No utilices detergente.</p>

wireless charger



FR	IT	15.19	Head Office
<p>Chargement du téléphone</p> <ol style="list-style-type: none"> 1. Branchez le câble micro-USB inclus sur le chargeur et connectez-le à un port de chargement USB. 2. Placez votre appareil mobile sur le chargeur sans fil. Déplacez légèrement votre appareil pour trouver la position de chargement la plus efficace. 3. Une fois votre téléphone totalement chargé, déconnectez le chargeur sans fil. <p>Attention N'essayez pas de réparer ou démonter le chargeur sans fil. Mettez l'appareil au rebut en cas de signes d'usure ou de dommages. Ne pas utiliser si les connexions ont du jeu. N'utilisez pas votre chargeur sans fil dans des environnements humides, poussiéreux ou à forte température. Ne posez pas votre chargeur sans fil près d'aimants. Nettoyer avec un chiffon humecté uniquement. Ne pas utiliser de détergents.</p>	<p>Carica del telefono</p> <ol style="list-style-type: none"> 1. Inserire il cavo micro-USB (incluso) nel caricatore e collegare l'altra estremità a una porta di carica USB. 2. Posizionare il dispositivo mobile sopra il caricatore wireless. Potrebbe essere necessario spostare leggermente il dispositivo per trovare la posizione di carica più efficace. 3. Quando il dispositivo è completamente carico, scollegare il caricatore wireless. <p>Attenzione Non tentare di riparare o smontare il caricatore wireless. Cessare immediatamente l'utilizzo se si notano segni di usura. Non utilizzare se i collegamenti non sono saldi. Non utilizzare il caricatore wireless in luoghi umidi, polverosi o esposti a temperature elevate. Non mettere il caricatore wireless nelle immediate vicinanze di magneti. Pulire solo con un panno pulito e inumidito. Non usare detersivi.</p>	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>15.21 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>15.105 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.</p> <p>FCC ID: 2AHESW03XXXX</p>	<p>Germany Thumbs Up GmBh, Rudolf-Diesel-Str.14, D-53859 Niederkassel T: +49(0)228 555 236-0. info@thumbsup.de. www.thumbsup.de</p> <p>USA Thumbs Up USA, Unit L, Braintree Industrial Estate, Braintree Road, Ruislip, London, HA4 0EJ, UK. T: 0845 466 8880. info@thumbsupusa.com. www.thumbsupusa.com</p> <p>thumbsUp! PART OF THE MAGNUM BRANDS GROUP</p>  <p>SW-03ULLA SW-03LORI SW-03DISC SW-03SPLAT</p> <p>Designed in London by Thumbs Up (UK) Ltd. Ruislip, HA4 0EJ, UK. © www.thumbsupuk.com</p> <p>Made in China Fatto in Cina Fabricado en China Fabriqué en Chine Gemaakt in China Fabricado na China</p> <p>E&OE images and illustrations may differ from actual product.</p>

60mm

80mm