

CRAIG®

PORTABLE SPEAKER with Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CMA3568

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device

1

Battery Recharge

The unit has a built-in DC=3.7V Lithium-ion rechargeable battery, recharge it before us as follow:


1. Connect the unit to the Personal Computer or any USB Charger by the supplied USB cable as:
 - ~ Insert the Mini USB plug from the supplied Connection Cable to the Mini USB Port on the unit.
 - ~ Insert the full size USB Plug from the Connection Cable to the USB Port on the Personal Computer or any USB Charger (Computer/USB Charger not supplied).
 - ~ **For normal charge, charge it approximate 3 hours. During charging, the Red Indicator will illuminate.**

Notes: Your battery will last longer if you follow these simple guidelines for caring for and storing it:

- A. Recharge and store the device within the temperature range of 5°C-35°C (40°F-95°F).
- B. Do not overcharge (longer than 24 hours), Excessive charging or discharging may shorten the battery's life.
- C. Battery life naturally shortens slowly over time.
- D. During Charging, you can play the music at the same time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

2

Location of Controls:

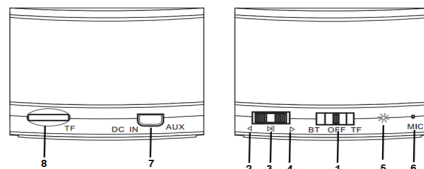

1. BT - OFF - TF Switch
2. ◀ / ▶ : Skip Backward / Volume Down
3. ▶▶ : Play/Pause
4. ▶▶ : Skip Forward / Volume Up
5. Indicators
6. MIC (Built-in Microphone)
7. Mini USB Port (For DC IN and/or AUX In)
8. TF (Micro SD Card Slot)

BT (Bluetooth) Mode

In first time use or re-pairing to new BT device, pairing the unit to external BT device as below:

1. Slide the BT - OFF - TF Switch to BT position to turn on the unit, Blue Indicator will light and blinking.
2. Power on the external BT device and enter to BT searching mode, Start pairing as the on screen instructions on the external BT device. After paired, the Blue Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT device).
3. To power off, slide the BT - OFF - TF Switch to OFF position. The Blue Indicator will not light.

Notes:

- ~ When the external BT device searched the unit, our model number "CMA3568" will appear on the display of external BT device.
- ~ Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

1. Turn on the BT function of the external BT device.
2. Slide the BT - OFF - TF Switch to BT position to power on the unit, Wait until the

3

3. Blue Indicator is light and stop blinking. (It needs take a few seconds).
3. Plays the music in the connected BT device as usual.
4. During playback:
 - Turn the ◀ / ▶ Toggle Switch to Left or Right then release to skip the tracks, Repeat the same procedures until the desired file was found and play.
 - Turn and hold the ◀ / ▶ Toggle Switch to Left or Right to adjust volume level.
 - Press the ▶▶ on the Toggle Switch to pause, press again to resume.
5. If the unit is paired to Cell Phone:

When a call is incoming during listening, press the ▶▶ on the Toggle Switch to hook off then speak to the built-in microphone to answer the phone. When finished, press the ▶▶ on the Toggle Switch to hook on then resume to music play back.
6. When finished listening, slide the BT - OFF - TF Switch to OFF position to shut off the unit.

AUX Mode

To listening from the external Music Player such like ipod, MP3 Player, Discman...etc.

1. Connected the 3.5 mm Jack on the supplied Connection Cable to the phones jack on any external audio player, Connect the Mini USB Plug to the Mini USB Port on the unit.
2. Slide the BT - OFF - TF switch to TF position to power ON the unit. The Blue indicator will turn on.
3. Plays the music in the connected Player as usual.
4. During playback, turn and hold the ◀ / ▶ Toggle Switch to Left or Right to adjust volume level.
5. When finished listening, slide the BT - OFF - TF Switch to OFF position to shut off the unit.

Play the music in the Micro SD card:

Insert the Micro SD card into the TF slot with Contact Fingers face down.

1. Slide BT - OFF - TF switch to TF position to power on the unit. The Blue Indicator will turn on. The unit will start playback automatically.
2. During playback:
 - Turn the ◀ / ▶ Toggle Switch to Left or Right then release repeatedly to skip the tracks, Repeat the same procedures until the desired file was found and play.
 - Turn and hold the ◀ / ▶ Toggle Switch to Left or Right to adjust volume level.
 - Press the ▶▶ on the Toggle Switch to pause, press again to resume.

4

3. When finished, slide the BT - OFF - TF switch to OFF position to power off the unit.
- Notes:
- A. Insert the Micro SD card (Up to 32GB not included) into the TF slot until a click is heard.
 - B. To take out the card, press the card until a "Click" is heard then pull out the card.
 - C. Before replacing the storage card, make sure the unit has been powered off.
 - D. When inserting the Micro SD card, make sure the direction you selected is correct (contact fingers face down). Never insert violently to avoid damaging the card or the unit. If it doesn't work, please check if the direction is correct.
 - E. Download the desired MP3 music into the card before installing into the unit.

Specification:

Power source.....Built-in DC=3.7V, 400 mAh (1.48 WH) Lithium-ion rechargeable battery;
Recharge by DC=5V Through Mini USB Port.
Impedance of Speaker:4 Ohm, 3W
Audio Power.....1.5W RMS

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Accessories:

- 1 x User's Manual
- 1 x USB/AUX Connection Cable

5

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental, b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than an authorized Craig service center, d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer, b) Damage to equipment not properly connected to the product, c) Any cost incurred in shipping the product for repair, d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

CMA3568_WC_EOFF1_B0US

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.