

FUNCTIONS & ACTIONS

FUNCTION	ACTION
MULTIFUNCTION CALLING	CALLER ID ANSWER/ENDING AN ANSWERING CALL: THE NUMBER WILL BE HEARD ALSO.
	ANSWER A CALL (SINGLE MODE) PRESS THE MULTIFUNCTION BUTTON ON EITHER SIDE WHILE HOLDING A CALL.
	ANSWER A CALL (SINGLE MODE) PRESS AND HOLD THE MULTIFUNCTION BUTTON DURING A CALL.
	END A CALL (SINGLE MODE) PRESS EITHER SIDE'S MULTIFUNCTION BUTTON DURING A CALL.
	REJECT/POUND A CALL PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER SIDE FOR 1-2 SECONDS.
LAST CALL (SINGLE MODE) PRESS THE MULTIFUNCTION BUTTON DURING A CALL.	TO REMIND THE LAST NUMBER IN YOUR SMARTPHONE'S CALL HISTORY, DOUBLE-TAP THE MULTIFUNCTION BUTTON ON THE RIGHT OR LEFT EARBUD. THE NUMBER WILL AUTOMATICALLY DIAL.
	LAST NUMBER CALLBACK PRESS THE MULTIFUNCTION BUTTON DURING A CALL.
MUSIC & AUDIO	PLAY OR PAUSE PRESS THE MULTIFUNCTION BUTTON ON EITHER EARBUD TO PAUSE/RESUME.
	VOLUME & PLAYLIST CONTROLS USE YOUR SMARTPHONE (SUCH AS A SMARTPHONE OR TABLET) TO CONTROL.

SAFETY PRECAUTIONS/WARNINGS

IF YOU HAVEN'T USED YOUR EARBUDS IN A WHILE OR PLAN TO GO LONG PERIODS OF TIME WITHOUT USING THEM, BE SURE TO CHARGE THE UNIT FIRST A MONTH TO PREVENT DAMAGE TO THE LITHIUM-ION BATTERIES OVER TIME. DO NOT ATTEMPT TO PIERCE, STRIKE, OR APPLY STRONG PRESSURE WITH SHARP OR HEAVY OBJECTS. STRONG IMPACT OR SHAKES COULD CAUSE IRREVERSIBLE DAMAGE TO THE UNIT.

AVOID PROXIMITY TO HIGH FREQUENCY AND STRONG MAGNETIC DEVICES WHEN POSSIBLE. DROPPING OR MISHANDLING THE EARBUDS MAY CAUSE IRREPARABLE DAMAGE TO THE UNIT AND ITS BATTERIES. DO NOT EXPOSE TO OR SUBMERGE IN WATER.

KEEP EARBUDS AWAY FROM HEATING APPLIANCES AND SOURCES OF ELECTRICAL NOISE, SUCH AS FLUORESCENT LAMPS OR MOTORS. KEEP HANDS DRY AND CLEAN WHEN TOUCHING THE EARBUDS AND BUTTONS.

KEEP THE EARBUDS AWAY FROM SMALL CHILDREN AT ALL TIMES OR UNDER STRICT SUPERVISION BY AN ADULT AT ALL TIMES. THE UNIT CONTAINS SMALL PARTS AND MAY PRESENT A CHOKING HAZARD.

DO NOT EXPOSE THE EARBUDS OR ANY ELECTRICAL PARTS TO EXTREMELY HIGH OR EXTREMELY LOW TEMPERATURES OR HIGH PRESSURE. DO NOT EXPOSE THE EARBUDS OR CASE TO DIRECT SUNLIGHT, BURNING, HIGH LEVELS OF HUMIDITY, OR OTHER HOT LOCATIONS. THIS MAY CAUSE THE BATTERY TO DEGRADE, HEAT, SCORCH, OR EXPLODE. USING THE EARBUDS OR CHARGING CASE IN THIS MANNER MAY ALSO RESULT IN A LOSS OF PERFORMANCE OR A SHORTENED LIFE EXPECTANCY.

DO NOT ATTEMPT TO DISASSEMBLE OR MODIFY THE TWO EARBUDS, EARBUDS OR CASE IN ANY WAY. IMMEDIATELY DISCONTINUE USE IF THE UNIT HAS ANY VISIBLE EXPOSED PARTS OR APPEARS MALFUNCTIONAL IN ANY WAY.

IF THE BUDS BECOME OVERHEAT, THE EARBUDS A SHUT PLUGS AND CONTACT THE SERVICE CUSTOMER SUPPORT TEAM AT HEL@GENTEK.COM.

GEN TEK

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

GEN TEK

FCC E URE

© 2024 GEN TEK. ALL RIGHTS RESERVED. GEN TEK IS A REGISTERED TRADEMARK OF GEN TEK INC. THIS PRODUCT IS A TRADEMARK OF GEN TEK INC. IN THE UNITED STATES AND/OR OTHER COUNTRIES. GEN TEK INC. IS NOT RESPONSIBLE FOR ANY DAMAGE TO PERSONS OR PROPERTY CAUSED BY THE USE OF THIS PRODUCT. GEN TEK INC. IS NOT RESPONSIBLE FOR ANY DAMAGE TO PERSONS OR PROPERTY CAUSED BY THE USE OF THIS PRODUCT. GEN TEK INC. IS NOT RESPONSIBLE FOR ANY DAMAGE TO PERSONS OR PROPERTY CAUSED BY THE USE OF THIS PRODUCT.

GEN TEK

TW2

TWS EARPHONE

Model: EP-014D

 


Bluetooth

Includes: 1x Pair TW2 1x Portable Charging case 1x Micro-USB Charging Cable

TW2 ERGONOMIC IN-EAR DESIGN

1. MULTIFUNCTION BUTTON
2. MICROPHONE
3. CHARGING PORT

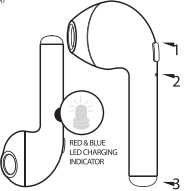

RED & BLUE LED CHARGING INDICATOR

TECHNICAL SPEC

BLUETOOTH 4.2	Playtime: 2 Hours (with the charging case)	Standby Time: Up to 100 Hours	Charges Provided: Case/Power 1/Power 4
Battery Type: Polygraphene Lithium-ion	Input: 500mAh	Earbud/Playtime (L/R): 50mAh (each)	Frequency Response: 20Hz-20KHz

*NOTE: USING YOUR EARBUDS AT LOWER VOLUMES WILL HELP PROLONG THE BATTERY LIFE BETWEEN CHARGES

PAIRING AND POWERING OFF EARBUDS

PAIRING:

- KEEP THE EARBUDS IN THE CHARGING CASE UNTIL THE EARBUDS VIBRATE 3 TIMES FOR PAIRING MODE.
- THE EARBUDS MUST BE POWERED ON BEFORE PAIRING.
- BEFORE ATTEMPTING TO PAIR, MAKE SURE THE "YOUR SMARTPHONE" OR "YOUR BATTERY" FUNCTIONS (CONNECTED UNDER SETTINGS) SPECIFIC PAIRING PROCEDURES WILL BE DIFFERENT DEPENDING ON DIFFERENT BRANDS AND MODELS. FOR DETAILED INFORMATION ON BLUETOOTH PAIRING, PLEASE REFER TO YOUR DEVICE'S USER MANUAL.

STEP 1: PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EACH EARBUD FOR 3 SECONDS. YOU WILL SEE THE LEDS FLASH RED AND BLUE ON EACH SIDE, INDICATING THAT THE POWER IS ON. YOUR EARBUDS ARE NOW IN PAIRING MODE.

STEP 2: OPEN YOUR SMARTPHONE'S SETTINGS MENU AND ACTIVATE BLUETOOTH PAIRING. YOUR SMARTPHONE WILL FIND THE EARBUDS AND SHOW THEM AS AVAILABLE TO PAIR. FOLLOW THE ON-SCREEN INSTRUCTIONS TO COMPLETE THE PAIRING PROCESS.

STEP 3: SELECT THE EARBUDS. ONCE THE EARBUDS HAVE BEEN PAIRED, THE EARBUDS WILL BE READY TO USE.

 
*YOU MAY WANT TO TRY USING ONE EARBUD SINGLE MODE INSTEAD OF USING THE PAIR TO CHECK YOUR BUDS' MODELS WHEN THEY'RE IN THE CASE. Simply turn on the EARBUDS and follow the same steps while keeping the OTHER EARBUD TURNED OFF. YOU WILL HAVE THE SAME PAIRING EXPERIENCE.

TO TURN YOUR EARBUDS OFF: PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUD IS POWERED OFF. TO STOP THE PROCESS FOR THE SECOND EARBUD TO POWER OFF AT ALL TIMES.

POWERING OFF:

IF YOU HAVE SUCCESSFULLY PAIRED YOUR EARBUDS TO A BLUETOOTH EARBUDS DEVICE, THAT DEVICE WILL REMEMBER AND PRESELECTION YOUR EARBUDS FOR AUTOMATIC RE-PAIRING. THIS MEANS THAT THE NEXT TIME YOU WISH TO USE YOUR EARBUDS WITH THAT SMART DEVICE, PAIRING WILL HAPPEN AUTOMATICALLY AND YOU WON'T NEED THE NEED FOR YOU TO REPEAT PERFORMANCE IN BLUETOOTH PAIRING AGAIN.

400mAh CHARGING CASE

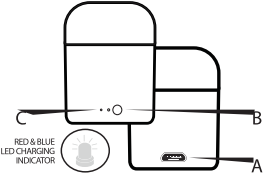


RED & BLUE LED CHARGING INDICATOR

A MICRO-USB CHARGING PORT
B POWER BUTTON
C LED INDICATOR

Battery Type: Rechargeable Lithium-ion	Charges Provided: Case/Power 1/Power 4	Charging Case/Battery Output: 500mAh (each)	Impedance: 32Ω
----------------------------------------	----------------------------------------	---------------------------------------------	----------------

 CHARGING YOUR EARBUDS & CASE*

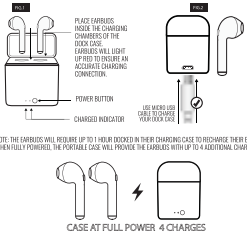

NOTE: THE EARBUDS WILL CHARGE UP TO 10% AND BE LOCKED IN THEIR CHARGING CASE TO RECHARGE THEIR BATTERIES. WHEN FULLY POWERED, THE CHARGING CASE WILL PROVIDE THE EARBUDS WITH UP TO 4 ADDITIONAL CHARGES.

CASE AT FULL POWER 4 CHARGES

1. INSERT THE EARBUDS INTO THEIR CORRESPONDING CHARGING PORTS IN THE CASE, RESPECTIVELY MARKED L AND R PLUGS.
2. PRESS EACH EARBUD'S POWER BUTTON UNTIL YOU FEEL A "CLICK" TO INDICATE THAT IT IS SECURE. CLOSE THE CASE.
3. INSERT THE MICRO-USB CABLE INTO THE CHARGING CASE AND CONNECT IT TO A POWER SOURCE (SUCH AS A POWER BANK, A WALL ADAPTER, ETC.) TO CHARGE.
4. YOU WILL SEE THE EARBUDS FLASH RED TO INDICATE THAT AUTOMATIC CHARGING HAS BEGUN. THE CASE'S EXTERIOR LED WILL FLASH A STRONG BLUE.
5. WHEN THEY HAVE FINISHED CHARGING, ALL LEDS WILL TURN OFF TO INDICATE THAT THE EARBUDS AND CASE ARE FULLY CHARGED.