cover pages 3 & 4

 
Operation Guide



Package Contents


- XT-42 True Wireless Earbuds
- Charging Travel Case
- USB Charging Cable
- Instruction Manual


Installing the Earbuds



- 2. Use your other hand to slide the earbud over the top of the ear
- 3. Adjust for comfort.

 Ear Hook Indicator Light Control Surface Microphone



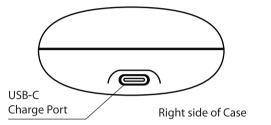

Getting Started

Before using this device, fully charge it. Charging instructions can be found on pg 6.

Open the charging case and take out the earbuds and place them in your ears following the instructions on pg 1. The earbuds will pair to each other automatically.

Pairing

2 3

- 1. Go to Bluetooth® Settings on your mobile device.
- 2. Turn Bluetooth® ON, on your device.
- 3. On your Bluetooth® device, select "iHome XT-42" from the list of available devices.
- 4. The earbud indicator light will flash red and blue while searching for the connection and then just blue when connected to your device.

Using Siri or Google Assistant

On either earbud, tap the control surface three times, in quick succession, to activate your AI assistant.*

*The AI assistant on your device must be activated on your device prior to this operation.

Basic Functions

Right Earbud:

- Double tap the control surface to play or pause the audio.
- Tap and hold one second to skip to the next audio track.
- · Single tap to raise the volume.

Left Farbud:

- Double tap the control surface to play or pause the audio.
- Tap and hold one second to skip to the previous audio track.
- Single tap to lower the volume.

Phone calls:

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. Phone call functions work the same on either of the earbuds.*

To answer an incoming call, single tap the control button of either earbud. To end a call, double tap the control surface. To reject an incoming call, tap and hold the control surface.

*Volume controls may not work during phone calls with some smartphone models.

pages 5 & 6 pages 7 & 8 back

Troubleshooting

Earbuds do not sync with each other:

- 1. Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on.
- 2. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after 3 seconds.
- 3. Replace the earbuds in the charging case.
- 4. Repeat the Getting Started process.

Earbuds do not pair to device:

- 1. Turn the Earbuds OFF by pressing the control surface on each earbud until you hear a two tone sound.
- 2. Place the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then, repeat the pairing process.

Specifications:

Bluetooth® Version: 5.3
Sound Output: 2mw
Speaker Size: 15 mm
Working distance: 33 ft
Charge Connector: USB-C
Frequency Response: 20Hz - 20kHz
Microphone: Dual
Case Battery: 400 mAh
Case Charge time: Up to 1.5 hrs
Battery Type: Li-battery
Earbuds Battery: 2 x 60 mAh
Earbuds Charge time: Less than 1 hr
Standby time: Up to 120 hrs.

Charging

- 1. Replace the earbuds in the case.*
- 2. Connect the USB-C charging cable to the charging port on the right side of the case.
- 3. Plug the cable into a standard USB 5V/1A or higher power output.

When you plug the case into a power source the charge display on the front of the case will show the battery level. Inside the case, there is also a numerical value of the earbud's batteries charge.

The charge display will show 100% when fully the earbuds are fully charged.

4. When fully charged, unplug the charging cable from the power source, and from the charge case.

If you want to charge the earbuds from the charge case internal battery, simply replace them in the case.

*The case must have at least 20% battery life left to fully recharge the earbuds without USB power.

Warnings

6 7

- Do not use this unit for anything other than its intended use.
- Do not puncture, throw, drop, bend, or modify this product
- $\bullet\,$ Do not throw this product into fire or water.
- Do not short-circuit the battery with any metal or metallic objects.
- Do not expose this product to corrosive liquids such as salt water.
 Do not operate the unit if it has been wet or moist
- to prevent against electric shock and/or injury to yourself and damage to the unit.

 Do not allow children to play with this product as
- Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
 Avoid leaving your device in direct sunlight, such
- as on the dashboard, console, or seat of a vehicle.

 Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

closed vehicle on a hot day.

- Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss.
- Use the earbuds with this charging case only.
- To avoid damage to the charging case, please only use a USB 5V/1A or higher charger
- In order to ensure the battery life, charge normally at least once a month.

FCC FCC ID: 2AHN6-AUBE238

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Warranty

8 9

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident. alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

WWW.BYTECHINTL.COM Bytech NY Inc 2585 West 13th Street Brooklyn NY 11223 (718) 449-3700



©2023 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective companies.