



BC-AU-BS-249

Product Name: Bluetooth Speaker
Model : BC-AU-BS-249



Bluetooth
portablespeaker

Notice

Thank you for your choosing our Bluetooth speaker. Please read user manual carefully and keep it for your records.


Package includes:

- 1 Wireless Speaker
- 1 Micro USB charging cable
- 1 User Manual

Precautions

- Please store and use the product in room temperature environment.
- Do not expose this product to rain or wet conditions.
- Do not drop or bump this product.
- Do not disassemble or repair the speaker yourself. Disassembling this product will invalidate the warranty.
- Please use the power change with rated voltage for the speaker.
- It may cause hearing damage if playing music in high volume for a long time. Consider avoiding excessively high volume when playing music for a long time.

Operating Panel

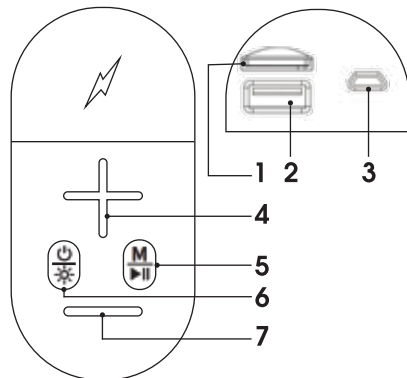

1. TF/SD Card Input Port
2. USB Input Port for U-Disk
3. Micro USB Charging Port
4. Button + . long press for volume up + ; short click for next song
5. Button Pause/Mode (⏸), long press for switching BT, FM mode; short click for pause/play.
6. Button Power/Light (⏻), long press for power ON/OFF; short click for changeable lights.
7. Button - . long press for volume down - ; short click for previous song

Operating Instructions

1. Answer Call: When receiving a call, click the Pause/Mode Button (⏸) to answer the call.

2. Hang Up Call: When call ends, click the Pause/Mode Button (⏸) to hang up the phone. PS: If you don't want to answer an incoming call, double-click the Pause/Mode Button (⏸) to reject the call.

3. Last Number Redial: While on standby or playing music, double-click the Pause/Mode Button (⏸) to dial the last number in your call log.

4. FM Function: The FM function works when the micro USB charging cable is plugged in and used as an antenna. In FM mode, click the Pause/Mode Button (⏸) to search for the radio, the blue lights will flash. After the search is complete, the blue lights will not flash any more. Then press button - for previous radio channel and button + for next radio channel.

5. TWS Function: Two speakers in Bluetooth mode; double-click one of the + buttons, there will be a voice prompt indicating the search for another device; in about 2-3 seconds two speakers will connect automatically with a voice prompt indicating that the TWS connection was successful. PS: Make sure the two speakers aren't connected to any phone device at that moment. Otherwise disconnect from the phone. TWS pairing is not possible with a phone already connected. To disconnect the TWS function, long press one of the + buttons.

Note

(A) Reboot: When the pairing is successful, Bluetooth speaker will automatically connect to your phone.

(B) Low Battery Prompt: When the Bluetooth speaker battery power is low, it will issue a low battery tone.

(C) Short click means press once, long press means press and hold the button for 2-3 seconds.

Bluetooth Connection

1. Once power is ON, blue lights will flash, indicating that the Bluetooth speaker is in search pairing state.
2. Turn on your device's Bluetooth and scan for new devices, look for **BC-BS-249**. Once found, pair with it. After pairing, devices can connect with each other automatically.

Specifications

- BT Version: JL 5,1
- Output Power: 5 W
- Lithium Battery: 400 mAh
- Transmission Distance: 10 M
- Sensitivity: ≤1%
- SNR: ≥85dB
- FM Radio: 87,5-108 MHz
- DC/5V: Input DC 5V/300mA
- Operating Voltage: DC 5V
- Charging Time: 1-1,5 hours
- Play Time: 2 hours around
- Material: ABS Plastic + Fabric
- Dimension: 110*110*93mm
- Functions: Bluetooth,TF/SD card,USB,FM,RGB Lights,TWS

Frequently Asked Questions

Questions	Solutions
Unsuccessful Bluetooth pairing	1. Make sure the speaker is in Bluetooth mode. 2. Make sure the speaker is not connected to any other device. 3. Check if you have several other Bluetooth devices turned on; this may interfere with the Bluetooth connection. 4. Try to reset the Bluetooth of the phone or other device. Reconnect the speaker.
No sound or distortion of sound	1. Check the volume of your phone or the speaker, and adjust the volume. 2. Check if the battery is too low. Recharge it.
Music play interrupted	1. Check if the device is outside of the effective connection distance. 2. Check if there is any obstacle between the speaker and your device.
The indicator not blinking in Bluetooth mode	1. The battery is low. Recharge it. 2. Reboot the speaker.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

WARRANTY- 12 MONTH

Please visit our website Bytechintl.com/warranty

©2022 BYTECH NY INC.

B Iconic™ is a registered trademark of Bytech NY INC.

Bluetooth® is a registered trademark of SIG.Inc

*All Trademarks and copyrights are the property of the respective companies.

*Photos are for illustration purposes only

BICONIC

WWW.BYTECHINTL.COM

Bytech NY Inc.

2585 West 13 street

Brooklyn NY 11223

(718) 449-3700

©2022 BYTECH NY INC.



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

. Increase the separation between the equipment and receiver.

. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

. Consult the dealer or an experienced radio/TV technician for help.

Caution: This device not explicitly approved by manufacturer could

Caution: Any changes or modifications void your authority to operate this equipment.

RF Exposure Information

The device was evaluated to meet general RF exposure requirements.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.