

SHARPER IMAGE®

WIRELESS SPEAKER



SI-AU-BS-102-BK



 
Notice:
Please read user manual carefully and keep it for your records.

- Package includes:
- 1 Speaker
 - 1 Charging cable
 - 1 User Manual

Safety instructions:

- Do not let small children play this product.
- Do not expose the speaker to liquid, moisture or humidity to avoid the product’s internal circuit being affected
- Do not use abrasive cleaning solvents to clean the speaker.
- Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/14°F), as this may shorten the battery life, affect the operation or degrade the performance of your speaker
- Do not dispose of the speaker in a fire to sharp objects as this will cause scratches and damage.
- Do not drop the speaker, This is may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the battery.
- This appliance is for indoor use only, Please do not use or store the unit in high temperature or hazardous locations, Please do not submerge the unit into water, as this will ruin the speaker.
- The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the

products had been damaged, repaired or modified in any way.



Control Panel:

- 1 Short press: Enter Bluetooth mode; Long press: Disconnect the phone; Double-click: Enter FM mode.
- 2 Short press: Raise volume; Long press: Next track.
- 3 Long press 2-3s to power on/off and enter “Bluetooth mode”. Search the pairing name: "SI-BS-102" and connect it to the device. And short press: Play/Pause in the music mode, Answer/ Hang up in the phone mode..
- 4 Short press: Lower volume; Long press: Previous track.
- 5 Short press: choose 40%/70%/100% Long press: Light independent switch

Connect to Bluetooth

- Turn on your smartphone's Bluetooth and search for the device. Then you will find the model's Bluetooth name “SI-BS-102” on your smartphone.
- Connect with Model by clicking the name on the smartphone. “Connected” message will appear to indicate it connected successfully
- The smartphone will connect automatically the next time.

FM Radio Function

- Press “MODE” on the product to switch to FM mode, and then press “PLAY/PAUSE” button to search FM channel automatically. This operation will scan all FM stations and Pre-record them to the memory. The scan procedure will take several minutes to complete and should not be interrupted.
- Once complete, you can short press “NEXT” or “PREVIOUS” button to go to next or previous frequency.

Charging

- Connect the small end of the Type-C USB charging cable (included) to the Type-C port located on the front panel. Connect the larger end of the cable to your computer’s USB port or an AC adapter (not included).
- The LED indicator will turn red while charging.

Note:

- (A) The Bluetooth speaker will only sync with one device at any time, the connection cannot be deleted when matching. It can only be deleted in disconnected mode.
- (B) A Bluetooth connection list cannot have two devices with the same name. This will cause one of the two devices to fail to connect via Bluetooth.
- (C) If Bluetooth pairing fails, delete other Bluetooth devices in the connection list, restart speaker and try again.
- (D) The disconnection of Bluetooth is not immediate and will take a new seconds delay to fully disconnect from the smart phone.

Troubleshooting

- 1. No power: Recharge your speaker using the included USB Type C charging cable. Try using a different cable.
- 2. Music is not playing over Bluetooth: Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect our Bluetooth device.
- 3. Bluetooth device will not reconnect with the speaker: Navigate to your Bluetooth settings menu on your Bluetooth device, tap “SI-BS-102” and select “Forget”. Now follow the steps to pair your device again.

LED LIGHT

- Power on/off:
- Power on: Blue light
- Power off: Red light goes on for 3 seconds and then goes off
- Bluetooth mode:
- Bluetooth search: Blue light flashing
- Bluetooth pairing success: blue light on
- Disconnect Bluetooth: the blue light flashes
- Low battery alarm: Red light flashing
- Charging indicator:
- The charging indicator is steady red and goes off when it is fully charged.

Frequently Asked Questions

Questions	Solutions
Unsuccessful Pairing for Connection	1. Make sure the speaker is in Bluetooth mode. 2. Make sure the speaker has not been connected with another device. 3. Check if there are many Bluetooth devices working around, which may interfere with Bluetooth connection. 4. Try to restart the Bluetooth on your phone or tablet and reconnect the speaker again.
No voice or Distortion of sound	1. Check the volume of your phone or the speaker and adjust the volume. 2. Check if the battery is too low, please recharge it.
Music breaking play	1. Check if the device is beyond the effective connection distance. 2. Check if there is any obstacle between the speaker and your device.

WARRANTY- 12 MONTHS

Please visit our website Bytechintl.com/warranty

Contact Info:
2585 West 13th Street
Brooklyn, NY 11223
www.bytechintl.com
(718) 449-3700

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SHARPER IMAGE®

©2024 BYTECH NY INC. Brooklyn, NY 11223.

The Sharper image trademark. names and logos are owned by ThreeSixty Group

Manufactured, marketed and distributed by

Bytech NY INC, under license Bluetooth® is a registered trademarks of Bluetooth SIG Inc.

All Trademarks and Registered Trademarks are property of their respective owners