## **INSTRUCTION MANUAL GUIDE OUTSIDE PAGES**



Main Features of the App (continue from previous pages) 9. Standard Definition/High Definition switch.
10. Camera Settings that expands the common features.
11. Sound option (Speaker).

12. Vertical Full Screen. 13. Horizontal Full Screen.

13. Horizontal rull Screen,
14. Camera snapshot (save image on phone).
15. Talk button (Press to talk to the camera).
16. Manual recording (record videos on phone).
17. Collapse the menu.
18. Playback saved recordings.

19 Photo album (the snapshots can be viewed here).
20 Theme color (Light mode and dark mode).
21. Private Mode (Camera display turn off on App).
22. Motion detection alarm.

23. Sound Detection.24. Anti-Flicker. (Reduces flicker issues).

25. Camera features page.
26. Message Center (Motion or Sound detected).
27. Cloud Service (Store your videos on the cloud for added protection and security for an additional fee). Baby Monitor Additional Features (access it by touching

Features bottom #25) 28. Sound Detection sensitivity. 29. Temperature Sensor settings. Night Light settings.
 Lullaby music settings (select a music of your choice).

32. Edit (allows to remove unused icons).

Light Control Additional Features (access it by touching Night Light settings bottom #30)
33. Light Brightness settings.
34. Light Switch ON/OFF. . Timing Duration setting.





This product works with Google and Amazon Alexa® devices. In order to use this feature you need to ENABLE this Device/Skill with your device. Please check with your device instructions to enable the Brookstone Smart Home Skill. You will be asked to enter your login information to your app, to sync it correctly. works with
Google Home works with

©2024 BYTECH NY INC. Brooklyn, NY 11223.
The BROOKSTONE® trademarks, names and logos are owned by BKST Brand Holdings LLC.
©2024. All rights reserved.
Manufactured, marketed and distributed by Bytech NY INC. under license.

12 Month Warranty Please Visit our website Bytechintl.com/warranty

Alexa® is a registered trademark of Amazon, Inc., Google Play® and Google Assistant® are registered trademarks of Google, Inc.
App Store® is a registered trademark of Apple, Inc.
WI-FI™ is a trademark of Wi-Fi Alliance®.

Customer service contact information: 2585 West 13th Street, Brooklyn, NY 11223 (718) 449-3700 www.bytechintl.com



### **INSTRUCTION MANUAL GUIDE INSIDE PAGES**

# PLEASE READ ALL INSTRUCTIONS CAREFULLY

FCC compliance statement
This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  Increase the separation between the product and receiver.
  Connect the product into an outlet on a circuit different from that to which the receiver is connected.
  Consult the dealer or an experienced radio/TV technician for help.
- for help.

  The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# The device has been evaluated to meet general RF exposure requirement, This equipment should be installed and operated with a minumum distance of 20 cm between the radiator and your body.

Getting Started
• Remove the Smart Baby Monitor and its accessories from

Please retain all packaging until you have checked and counted all the parts and the contents against the parts list

Key Features

⋅ HD Wi-Fi Smart Baby Monitor makes it simpler to keep an eye on your baby and nursery room

App supports up to 16 Cameras (sold separately)
 Full HD 1920x1080 pixels resolution

Easy to install and set-up

View your baby and nursery room through your phone High-definition video streaming 100° Degree wide-angle view

Supports night-vision view
Motion detection
Support ONVIF & Siren

up to 128GB card, memory card not included) App available on iOS and Android

Package Contents
- HD Wi-Fi Smart Baby Monitor Wall Charger
 Type-C Power Cord with Temperature sensor

Quick Start Guide

Safety Instructions · Do not use the monitor if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the Keep the monitor free from dust, lint, etc. · Do not use this monitor for anything other than its

Keep the monitor out of reach of children.

This product is not a toy

Connect the Type-C power cord to the power port of the monitor and insert the other end into the Wall Charger. It will take about 15 seconds for the monitor to start up.

Compatibility
This HD Smart Baby Monitor is compatible with the Brookstone App, and with the devices using iOS 8.0 and above with Wi-Fi option, or Android 5.0 and above with Wi-Fi option. This device does not currently support 5GHz Wi-Fi bands. Please see that your phone is connected to 2.4GHz Wi-Fi band of your router.

#### Operating Instructions | 同発性機同 Search and download the App, and it will ask you to register your device. Select you country, enter your email, get Verification Code

and input your password to confirm. Adding a new Baby Monitor to your network via App Baby Monitor parts and description 1. Micro SD card slot. Use 128Gb or less Micro SD card to enable recording. The Micro SD card has to be formated in advance as FAT32 file system.

2. Reset slot. Press and hold the Reset key for 5 seconds to Light sensor.
 Microphone. Use the App to converse for 2-way audio. your Baby Monitor should be automatically discovered by

5. Camera lens. Camera activity indicator. Red color: camera system started; Blue blinking: ready to pair; Solid Blue: camera is online. Night lamp ON/OFF function is controlled by App.

# 


8. Type-C USB power port (Input power: 5V DC, Max.1-1.5A).

5 Note: If reset is required, use the Reset Key to press into the Reset slot on the top of the monitor (No.2) for several seconds until the monitor starts beeping.

1. Power the camera by using the supplied Wall Charger and the Charging Cable. The camera will be turned on start flashing rapidly in Blue color. If it's not already flashing, press and hold the Reset slot (2) with the Reset key until you hear an audible tone.

2. Launch the "Brookstone" App and click "Add" icon and

the App. Once connected successfully, the App will show "Done". Click "Done" to enter next step. 5GHz) of your phone or tablet and input your network password, then tap 'Next'. In the event that the monitor Bluetooth™ on your phone is turned on and you gave

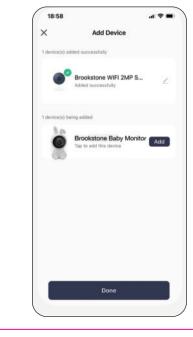

permission for the App to access the Bluetooth™ & Wi-Fi. 4. Wait for about 10 seconds until you hear voice message

'Ding prompt', then 20 - 30 seconds later 'Please configure network'. network: Troubleshooting Monitor connection: Make sure the Camera activity indicator is flashing. If the Wi-Fi signal is not flashing, you will need to press and hold Reset. Make sure the Wi-Fi network is a 2.4GHz network, the device will not connect to a 5GHz network. Test your Wi-Fi network connection with other devices such as your phone or computer to make sure it is operation properly. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. Your Wi-Fi network password is case sensitive, make sure you are entering it correctly. connection (e.g., service disruption). Please try again in a

Make sure your Wi-Fi router is turned On. The Monitor may not have power, make sure the wall switch and breaker is in the ON position. Make sure the Monitor is getting a good signal from your Wi-Fi router. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. The Monitor may have been disconnected from your Wi-Fi network, press and hold

Reset until you hear an audible tone. App Main Functions Location Management.
 Add a New Device. 5. Add new device.
 6. Me, Your Personal Information: Home Management;
 Motion Detection Message Center; FAQ & Feedback. 7. Smart Scene with conditions of other smart devices

