

## Connecting to BT

- Press "MODE" until you hear two beeps. BT Mode is on pair.
- Turn on your smartphone's BT and search for the device. Then you will read "MPD877L" on smartphone.
- Connect with "MPD877L" click the OK on smartphone.
- "Connected" message will appear. Connection is successful.

(play and select music with smartphone when connected through BT).

## MMC Function

- Press "MODE" on remote or "Mode" on back panel to switch to MMC Mode or just insert a MMC card. MMC mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

## USB Function

- Press "MODE" on remote or "Mode" on back panel to switch to USB Mode or just insert a USB flash drive. USB mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

## FM Radio Function

- Press "MODE" on remote or "Mode" on back panel to switch to FM Mode. Radio will start automatically.
- Press "PLAY/PAUSE" to enter into automatic FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

  
MAX POWER


## OPERATING MANUAL

MODEL:MPD877L



Carefully read User Guide to operate this unit properly.  
Keep for future reference.

## REMOTE CONTROL

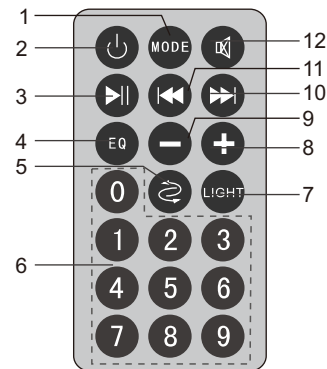

- 1.Mode selection(switch USB, Micro SD, Radio, & AUX)
- 2.Standby
- 3.Play/Pause
- 4.Equalizer
- 5.Repeat
- 6.Number Selector(0-9)
- 7.LED light on/off
- 8.Volume up
- 9.Volume down
- 10.Next
- 11.Previous
- 12.Mute

### Important Notes:




**CAUTION**

1. Do not use the machine while charging. This may cause battery damage.
2. To save battery power, turn off speaker lights when not in-use.
3. Please keep machine away from water and moisture.
4. Do not open the machine or remove the back panel. This machine carries high voltage and could be very dangerous.
5. In case of service needed, please call a certified technician or our customer service department. Do not attempt to fix yourself.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## CONTROL PANEL FUNCTION DECLARATION

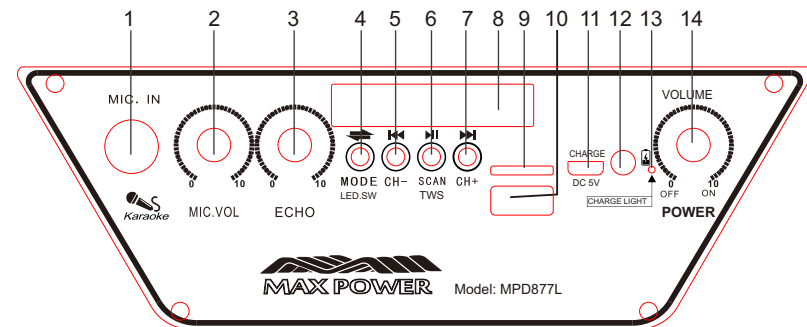

- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. Microphone input</li> <li>2. Microphone volume adjustment</li> <li>3. Echo adjustment</li> <li>4. Mode selection(Single press USB, Micro SD, Radio, &amp; AUX; long press LED light on/off)</li> <li>5. Previous</li> <li>6. Play/Pause(BT: Long press for 3 seconds, BT docking)</li> </ol> | <ol style="list-style-type: none"> <li>7. Next</li> <li>8. LED display</li> <li>9. Micro SD</li> <li>10. USB port</li> <li>11. The DC 5V power input</li> <li>12. Audio input</li> <li>13. The charging light is on, the full light is off</li> <li>14. The main volume adjustment</li> </ol> |
|--|---|

## TWS FUNCTION

1. Turn on two devices of the same model and switch the two devices to Bluetooth mode. The distance between the two devices is less than 50CM.
2. The first time you use the TWS connection, you can select any device as the host and the other as the slave. Press and hold the "Pause playback" ►|| button for 3 seconds, and the USB display flashes to indicate that Bluetooth is connected.
3. Until you hear a "beep" sound, the devices are connected to each other.
4. Turn on the Bluetooth on your device and connect to the MPD877L. the next two speakers will automatically connect to each other.
5. Disconnect TWS: Press and hold the "Pause playback" ►|| button for 3 seconds. Once you hear a beep, the TWS function will be disconnected.
6. In the future use, each time the TWS connection is used, the device connected to the first time is used as the host (the slave can disconnect the TWS and cannot connect to the TWS), and the connection to the TWS must be completed in the host.