

Listening to the FM Radio from the Speaker

- Use "MODE" button on unit main panel to select FM.
- From the unit control panel or from remote control, press |◀◀/▶▶| to manually access the stations up or down.
- "Antenna" to be used for better reception of FM stations

Using Wireless function

- Use "MODE" button to select Wireless function. When wireless function is on, LED light on unit control panel will turn blue
- Use your smartphone to pair wirelessly to speaker, pairing name is "QS-102323"
- Use your smartphone to change track.
- Volume can be controlled from your smartphone, main unit or unit remote control

Using Microphone

- When using the microphone – plug your microphone into the microphone jack on unit main control panel.
- Use the MIC VOL knob to control the voice level of the microphone.
- Use the "ECHO" knob to control microphone echo

Using Guitar Jack

- When using Guitar – plug your Guitar into the Guitar jack on unit main control panel.
- Use the Guitar VOL knob to control the volume level of the Guitar.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR test is not necessary.

Please keep this manual in a safe place for future reference.

3

Multi-function Battery Speakers


Ridgeway

MODEL:QS-102323



Carefully read operating manual to operate this unit properly, and keep this manual for further reference.

Functional specifications

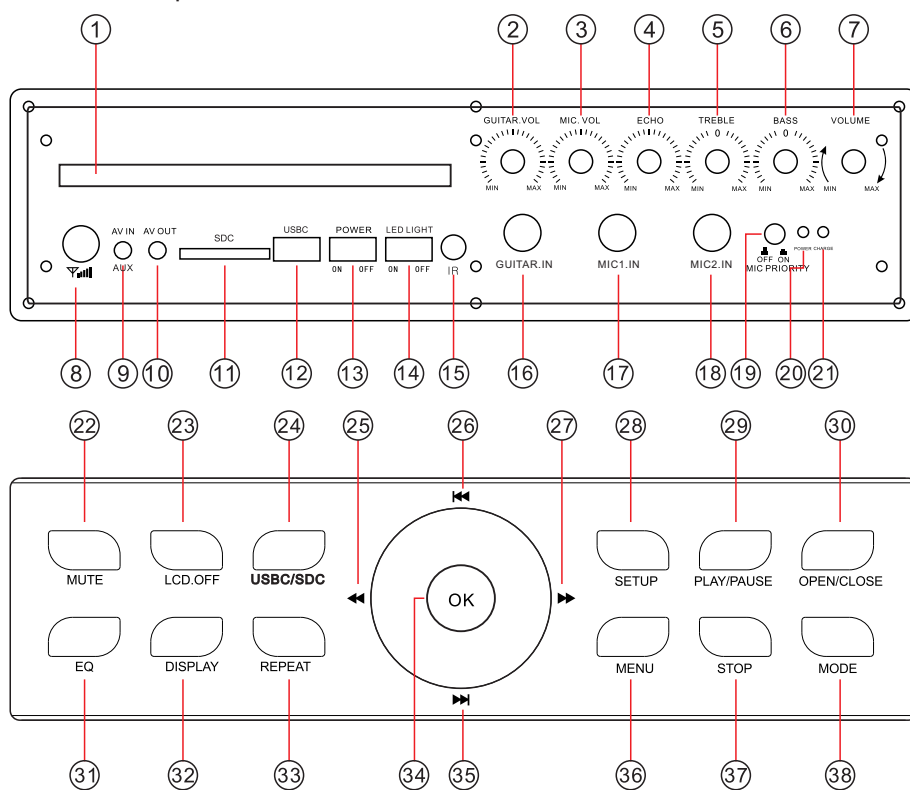

- 1: DVD box 2:Guitar volume control 3: Mic volume control 4: Mic echo control
 5: Treble control 6: Bass control 7: Master volume control 8: Antenna
 9: AV input jack 10: AV output jack 11: sd input jack 12: usb input jack
 13: Power switch 14: LED light switch 15: Infrared receiving 16: Guitar in jack
 17: Mic 1 input jack 18: Mic 2 input jack 19: Prior to Mic key 20: Power lamp
 21: Charge lamp 22: Mute key 23: LCD off key
 24: USB/SD conversion key 25: REWIND 26: Prev key 27: FAST FORWARD
 28: Setup key 29: Play/pause key 30: Open close dvd box key 31: EQ key
 32: Display key 33: Repeat key 34: Confirm key 35: Next key 36: Menu key
 37: Stop key 38: Input mode key

1

Features

- Plays MP3 Files stored in your SD Card or USB Disk Drive or external audio device.
- FM Radio
- Twin Karaoke jacks
- Guitar Jack, to connect Guitar and play through speaker
- With Infrared remote control

Connecting Unit

- Connect one end of the supplied AC power cord to the unit and the other end to the AC socket.
- Switch "ON" the power switch, back side of unit.

Volume Control

- The units volume can be controlled from the unit or from your remote control.
- Maximum volume on remote control will be to the level set on unit through rotary volume control.
- From the remote control press the button Vol- to lower the volume or Vol+ to raise.
- When connected to your smartphone wirelessly, the volume can be controlled from unit and it can also be controlled from your smartphone.
- The output sound quality of the speakers will depend on the quality of the MP3 files stored in your external device. Volume from remote will be maximum to the level set manually through unit volume Knob.

Playing MP3 Files through the Speaker using the SD Card or the USB Stick

- Use the "MODE" button on the unit or on the remote control to switch between MP3(USB/SD) / FM/Wireless functions.
- On the unit, please know when using the MODE for USB or SD, whichever external device is plugged later will play first, to change from USB to SD or SD to USB, Plug in your USB Disk and/or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY. If your media files does not play, press the ▶|| (PLAY/PAUSE) . Please ensure that your media is properly connected and that your files are in MP3 format, or that the MODE button is on the correct source.
- Press the |◀◀ button to listen to the previous track and the ▶▶| button to skip to the next track from unit control panel or Remote Control.
- To Pause a track, press the ▶|| button from the control panel or from the remote control. To remove pause, press button again.
- Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card.

Using AUX (AV IN)

- Use "MODE" button on unit main panel to select AUX (AV IN).
- Use supplied cable to connect your audio device, one end to audio device earphone jack and other end to unit AUX (AV IN) jack.

2