

SENDS THE CUSTOMER

We are greatly appreciate your purchasing our products because of your expert and self-confidence of our products. Be sure to take the maximum advantage of your purchase, Please read this instruction carefully. Your would enjoy after using the set skillfully

UNPACKAGING

Please open the package carefully and collect the parts together to avoid losing. Please check that the package be in good condition or not. You would better keep all the package for reusing in future.

ADVISE FOR SECURITY

- * Please hold the plastic model of power switch while turning off power. Do not pull the cord at will and avoid heavy from pressing the cord.
- * Do not try to repair or refit this set by yourself if you are not professional or not the servicer. Do not take off the cover. It's dangerous to touch the accessories inside, otherwise that would cause serious malfunction.
- * Keep the set away from the places as following:
 1. Take the set from the place so cold to fully heating one, then it would be wet inside.
 2. Nearby the source, such as the bathtub, washbowl, damp basement, swimming poll and other wetly place.
 3. The house which in direct sunlight for long time, or nearby the acute irradiation and high temperature place.
 4. The place in dusty, steam, or extremely hot.
- * Keep the set in a level surface, if in oblique surface it would be damaged.
- * Keep the set in the drafty place. Be careful of air vent away from the surface of the bed, sofa, carpet and so on.
- * Turn off the set in the lightning storm day and unplug the power cord from the electric outlet immediately.
- * Unplug the power cord while nonuse for a period of time, if keep connecting and nonusing, it would reduce of service life and cause all kinds of serious malfunction.
- * Do not use volatility solvent such as alcohol, reactive diluent, naphtha and so on.
- * Do not cover it with heavy.



Caution
Dangerous of electric shock. Do not open



IMPORTANT PRECAUTION



Please keep the set away from rainy and wet, otherwise it would be fire or electric shock.

Notice: It has "dangerous voltage" in the inside of set, the user do not presume to take off the backboard of the amplifier of the set. No user serviceable Parts inside.



The user do not fix the parts inside of set, please ask for the professional service if need to do it.

- * Please refer to the advise above, otherwise you would unplug immed-ately and connect with your dealer if you have any questions.

Multifunctional active speaker

 
Ridgeway

MODEL:QS-104371

Professional Speaker

Carefully read operating manual to operater this unt properly,
and keep this manual for further reference.

REMOTE CONTROL

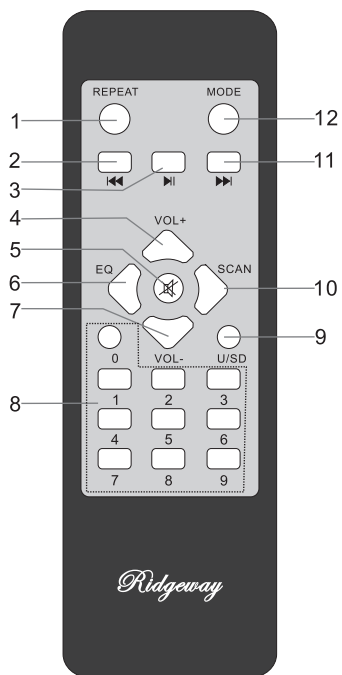


- 1.Repeat play
- 2.Previous
- 3.Play/pause
- 4.Volume up
- 5.Mute
- 6.Equalizer
- 7.Volume down
- 8.Number selection(0-9)
- 9.Selecton Memory Card
- 10.Scan
- 11.Next song
- 12.Mode selection(Memory Card,BT, RADIO,&AUX)

Listening to the FM Radio from the Speaker

- 1.Press the Mode button on the Speaker unit or Remote Control to receive FM Frequency.
- 2.Press PLAY/PAUSE on the unit to auto scan and the unit will store the frequencies with strong signal reception into the preset stations(up to 20).Use PREV VOL -/ NEXT VOL + Buttons to switch between preset stations.
- 3.From the Remote Control, Press |◀◀| or |▶▶| to access the preset stations up or down.
- 4.To Tune into a specific frequency, please use the remote control number pad by directly entering a frequency number.


1

 PANEL FUNCTION DECLARATION

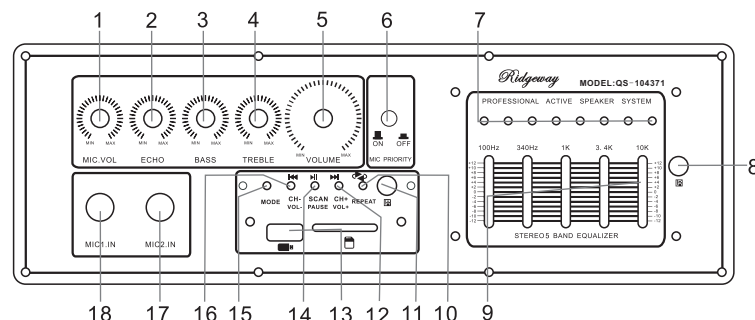

- | | |
|--------------------------------------|---|
| 1.The Microphone volume adjustment | 11.Mp3 Remote control receiving window |
| 2.The echo adjustment | 12.Next song(FM:The next channel) |
| 3.The bass adjustment | 13.Memory Card |
| 4.The high adjustment | 14.Play/pause(FM:Automatic search) |
| 5.The main volume adjustment | 15.Mode selection(Memory Card,BT, RADIO,&AUX) |
| 6.Mic rophone switch priority | 16.Previous(FM:A channel) |
| 7.Output level indicator | 17.Microphone 2 input |
| 8.TV Remote control receiving window | 18.Microphone 1 input |
| 9.Equalizer control | |
| 10.Repeat play | |

 
BACK PANEL FUNCTION DECLARATION

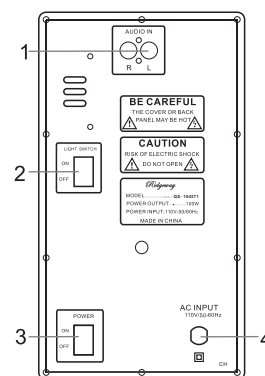

- 1.Audio input
- 2.Lamp switch(ON/OFF)
- 3.power switch(ON/OFF)
- 4.AC 110V~50HZ-60HZ INPUT


2

 DVD PANEL FUNCTION DESCRIPTION

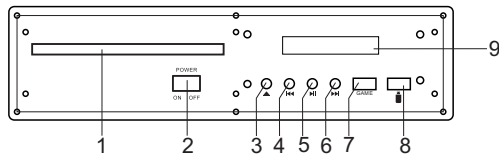

- | | |
|---|--|
| 1. The disc out positions | 5. Play/pause |
| 2. The power supply | 6. The next song |
| 3. Out of the warehouse /into the warehouse | 7. Game input jack(the machine without this feature) |
| 4. Previous | 8. Memory Card input jack |
| | 9. Digital display window |

 
THE DVD REMOTE CONTROL FUNCTION

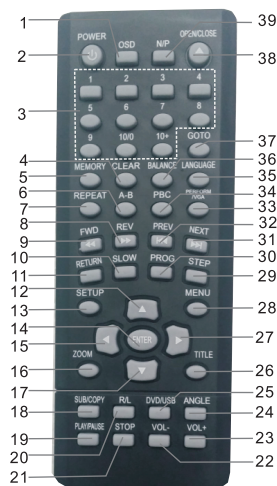


- | | |
|-----------------------------|--|
| 1. Screen display | 12. Upward |
| 2. The power supply | 13. Setup the |
| 3. Digital selections | 14. Confirm |
| 4. Clear | 15. To the left |
| 5. Memory play | 16. Zoom |
| 6. A - B segment repetition | 17. Down |
| 7. Repeat play | 18. Subtitles |
| 8. Fast forward | 19. Play/pause |
| 9. Retreat quickly | 20. Channel switching |
| 10. slow forward | 21. Stop |
| 11. Return | 22. Volume down |
| | 23. Volume up |
| | 24. The Angle |
| | 25. Multimedia Video Player /Memory Card switching |
| | 26. The title |
| | 27. To the right |
| | 28. The menu |
| | 29. Single step |
| | 30. Programming |
| | 31. Next song |
| | 32. Previous |
| | 33. Progressive scan |
| | 34. PBC |
| | 35. language |
| | 36. Equilibrium |
| | 37. When choosing |
| | 38. Into the warehouse/out of warehouse |
| | 39. System switching |

3

 FUNCTION OF TV PANEL

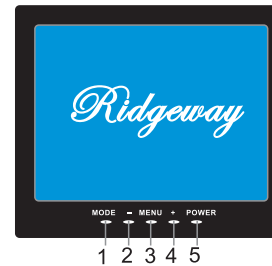


 1. Mode selection(TV,AV,VGA&HDMI)
2. Channel down
3. Menu (The choice of each function, operation)
4. Channel up
5. The power supply

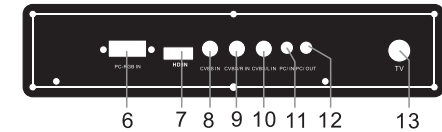

6. The computer video signal input
7. Hd video signal input
8. Video signal input
9. The right sound channel input
10. The left sound channel input
11. Computer audio input
12. Computer audio output
13. TV antenna interface

 DISPLAY THE REMOTE CONTROL FUNCTIONS

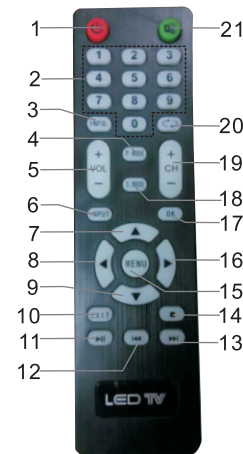

- | | |
|-------------------------|---|
| 1. The power supply | 5. The volume to add and subtract |
| 2. Digital selections | 6. INPUT(TV,AV,VGA&HDMI) |
| 3. Screen display | 7. Move up(Useful menu condition) |
| 4. Image mode selection | 8. Move to the left(Useful menu condition) |
| | 9. Move down the(Useful menu condition) |
| | 10. No role |
| | 11. No role |
| | 12. No role |
| | 13. No role |
| | 14. No role |
| | 15. Menu (The choice of each function, operation) |
| | 16. To the right(Useful menu condition) |
| | 17. Confirm |
| | 18. No role |
| | 19. Channel add and subtract(TV) |
| | 20. Show return (TV) |
| | 21. MUTE |

4

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.