

SENDS THE CUSTOMER

We are greatly appreciate your purchasing our products because of your expert and self-confidence of our products. Be sure to take the maximum advantage of your purchase, Please read this instruction carefully. Your would enjoy after using the set skillfully

UNPACKAGING

Please open the package carefully and collect the parts together to avoid losing. Please check that the package be in good condition or not. You would better keep all the package for reusing in future.

ADVISE FOR SECURITY

- * Please hold the plastic model of power switch while turning off power. Do not pull the cord at will and avoid heavy from pressing the cord.
- * Do not try to repair or refit this set by yourself if you are not professional or not the servicer. Do not take off the cover. It's dangerous to touch the accessories inside, otherwise that would cause serious malfunction.
- * Keep the set away from the places as following:
 1. Take the set from the place so cold to fully heating one, then it would be wet inside.
 2. Nearby the source, such as the bathtub, washbowl, damp basement, swimming pool and other wetly place.
 3. The house which in direct sunlight for long time, or nearby the acute irradiation and high temperature place.
 4. The place in dusty, steam, or extremely hot.
- * Keep the set in a level surface, if in oblique surface it would be damaged.
- * Keep the set in the drafty place. Be careful of air vent away from the surface of the bed, sofa, carpet and so on.
- * Turn off the set in the lightning storm day and unplug the power cord from the electric outlet immediately.
- * Unplug the power cord while nonuse for a period of time, if keep connecting and nonusing, it would reduce of service life and cause all kinds of serious malfunction.
- * Do not use volatility solvent such as alcohol, reactive diluent, naphtha and so on.
- * Do not cover it with heavy.



Caution
Dangerous of electric shock. Do not open



IMPORTANT PRECAUTION

Please keep the set away from rainy and wet, otherwise it would be fire or electric shock.



Notice: It has "dangerous voltage" in the inside of set, the user do not presume to take off the backboard of the amplifier of the set. No user serviceable Parts inside.



The user do not fix the parts inside of set, please ask for the professional service if need to do it.

- * Please refer to the advise above, otherwise you would unplug immed-iatly and connect with your dealer if you have any questions.

Professional Active Speaker

IQ sound®

MODEL: IQ-3925DJ

Professional Speaker

Carefully read operating manual to operater this unt properly, and keep this manual for further reference.

WARRANTY CARD

Thank you for purchasing this product. Please fill in the following time of purchase and keep this card, so that we can provide you perfect service. To ensure that your legal rights are protected, use carefully read the warranty before.

User Name:	
Post Address:	
Telephone:	
Post Code:	
Product Model:	
Product Serial Number:	
Date of Purchasing:	
Invoice Number:	
Dealer Name:	
Company Seal:	

 
WARRANTY REGULATION

1. Matters relating to service your dealer or contact our national service center. Normal use of quality problems, since the date of purchase is free "three guarantees".
2. Purchase to invoice dealers out of purchase or receipt date is accurate.
3. Buys purchase has the artificial damage in one month, replacement failure to provide warranty service only.
4. In the following replacement, warranty void, but to provide maintenance services are available only warranty.
 - a. All human factor damage, including non-work environments, do not follow the instructions to use damage caused by such.
 - b. Customer privately disassemble or repair or modification of their own and without the authorization of unit maintenance.
 - c. Once purchased, damage due to poor transport.
5. The company's products with the warranty card or warranty replacement, and please bring the invoice or purchase receipt.

TECHNICAL PARAMETERS

Frequency Response: 20Hz-20KHz
 Sensitivity: 85dB
 Distortion: ≤0.5%
 Impedance: 4Ω



PANEL FUNCTION DECLARATION

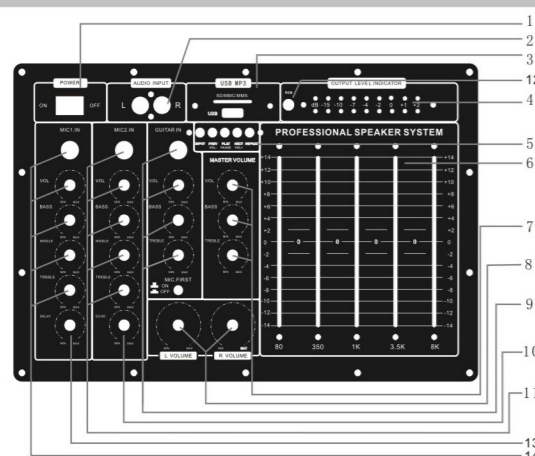

- | | |
|--|---|
| 1. POWER | 7. THE MAIN VOLUME |
| 2. AUDIO INPUT | 8. ABOUT BALANCE VOLUME |
| 3. USB/SD INTER FACE | 9. THE GUITAR INPUT AND HIGH AND LOW ADJUSTMENT |
| 4. FREQUENCY DISPLAY | 10. THEMICROPHONE ECHO ADJUSTING |
| 5. MP3 FUNCTION KEYS. INPUT
DVD/USB BT SPEAKER
(SEARCH WILL FIND BT SPEAKER) | 11. MICROPHONE INPUT AND 2 HIGH BASS ADJUSTMENT |
| 6.5SECTION OF THE EQ TO ADJUST | 12. REM RECEIVING WINDOW |
| | 13. RECEIVER DELAY ADJUSTMENT |
| | 14. MICROPHONE INPUT AND 1 HIGH BASS ADJUSTMENT |

BACK PANEL FUNCTION DECLARATION

  THE REMOTE CONTROL INSTRUCTIONS

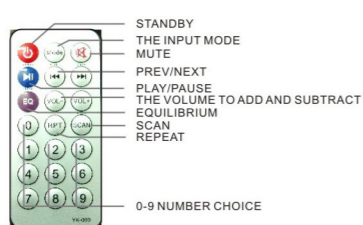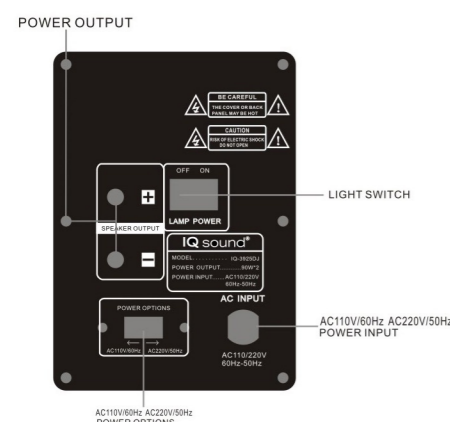

THE INSTRUCTIONS ON THE BT FUNCTION
 Press enter to choose, choose to BT reception mode, this opportunity at this time sends out "beep" two, and then open the mobile phone or other BT devices, search to the BT SPEAKER, then choose the BT SPEAKER connections can broadcast music program.

Connection BT

- Press "CH SET" untl you hear two beeps. BT Mode is on.
- Turn on your smartphone's BT and search for the device. Then you will read "BT SPEAKER" on smartphone.
- Connect with "BT SPEAKER", click the OK on smartphone.
- "Connected" message will appear. Connection is successful.

(play and select music with smartphone when connected through BT).

SD/MMC Function

- Press "CH SET" on remote or "MODE" on back panel to switch to SD Mode or just insert a SD/MMC card. SD mode will start automatcally.
- Press "PLAY/PAUSE" to contnue play/pause music.
- Press "NEXT" buton to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

USB Function

- Press "CH SET" on remote or "MODE" on back panel to switch to USB Mode or just insert a USB flash drive. USB mode will start automatcally.
- Press "PLAY/PAUSE" to contnue play/pause music.
- Press "NEXT" buton to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

FM Radio Function

- Press "CH SET" on remote or "MODE" on back panel to switch to FM Mode. Radio will start automatcally.
- Press "PLAY/PAUSE" to enter into automatc FM channel searching.
- Press "NEXT" buton to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 --Reorient or relocate the receiving antenna.
 --Increase the separation between the equipment and receiver.
 --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 --Consult the dealer or an experienced radio/TV technician for help.
 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR test is not necessary.