

User's Manual of GFIVE Z13

Mobile Phone

TABLE OF CONTENT

1. BASIC INFORMATION 3

1.1. BRIEF INTRODUCTION 3

2. BEFORE USE 5

2.1. NAME AND EXPLANATION OF EACH PART 5

2.1.1. Appearance Sketch Map 5

2.1.2. Description of Keys 5

2.2. INSTALL SIM CARD AND MEMORY CARD 7

2.2.1. SIM Card 7

2.2.2. Memory Card 7

2.3. BATTERY 8

2.3.1. Install the Battery 8

2.3.2. Charging	8
2.4. SECURITY PASSWORD.....	9

3. QUICK USER GUIDE 10

3.1. DIAL A CALL	10
3.2. REJECT A CALL.....	10
3.3. RECEIVE A CALL	10
3.4. END A CALL	11
3.5. EMERGENCY SERVICES.....	11
3.6. EXTENSION SPEED DIAL.....	11
3.7. DIALED CALLS/MISSED CALLS/RECEIVED CALLS/REJECTED CALLS	11
3.8. CALL FORWARD	11
3.9. CALL WAITING	12
3.10. CALL BARRING	12
3.11. POWER OFF THE PHONE	12
3.12. T-FLASH CARD	12

4. FUNCTION MENU 13

4.1. CALL LOGS	13
4.2. CONTACTS.....	14

4.3. INTERNET	14
4.4. MULTIMEDIA	15
4.5. MESSAGE	17
4.6. APPLICATION.....	18
4.7. GAMES	19
4.8. MY FILES.....	19
4.9. SETTINGS	20
4.10. PROFILES.....	22
4.11. CAMERA.....	23
4.12. BLUETOOTH.....	23
5. TEXT INPUT	24
6. CARE AND MAINTENANCE	25

1. Basic Information

1.1. Brief Introduction

Thanks for selecting GFIVE Z13color screen GSM digital mobile phone.

Through reading the manual, you can fully know how to use GFIVE Z13mobile phone, appreciate its complete function and simple operating method.

GFIVE Z13color screen mobile phone is designed aiming at GSM network environment; Besides basic call functions, GFIVE Z13also provides many kinds of practical functions, such as name card holder, scene mode, message, audio and video player, camera and video, alarm clock, calculator, STK, time and date, auto power-on and shut-down and etc. so that convenient for your work and leisure activities. In addition, W5_G5i adopts personalized human-computer interface design, its complete function can meet your different requirements.

GFIVE Z13color screen mobile phone accords with GSM criterion, has obtained the certification of competent authority.

The company reserves the rights to revise the contents of the manual without prior notice.

2. Before Use

2.1. Name and Explanation of Each Part

2.1.1. Appearance Sketch Map

The picture is only for your reference.

2.1.2. Description of Keys

Keys	Function
Left soft key/ Right soft key	1. Execute functions that the left-down/right-down corner indicator shows. 2. In the standby mode, press Left Soft key to access Menu, Right Soft key to access Contacts.
Navigation key	On other interfaces, it equals to navigation key and direction key except for special functions.
Dial key	1. Press this key to dial or receive an incoming

	<p>call.</p> <p>2. When in the standby mode, press this key to access Dialed Calls.</p>
OK key	<p>In the dial panel mode, press this key to show or hide dial panel.</p>
End key	<p>1. Mainly used as power on/off.</p> <p>2. Press to return to standby screen in any interface.</p> <p>3. End calls or reject incoming calls.</p>
Number key	<p>It is used to dial and input numbers or characters. Press and hold Number key 1 or 2 to get through the preset voice inbox.</p>
* Key	<p>On the standby interface, input *; after inputting telephone number, if you want to input extension number, please press twice asterisk key, after the display screen shows “+”, please input your extension number.</p>
# Key	<p>1. In text editing interface, press "#" key to switch text the input method.</p> <p>2. On the standby interface Press and hold "#" key to transfer the profile of Normal/Silent.</p>

2.2. Install SIM Card and Memory Card

2.2.1. SIM Card

Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by network supplier.

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2.2. Memory Card

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

2.3. Battery

2.3.1. Install the Battery

- Take off the rear cover, of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger, and then press the other end to install the battery.

Prompt: Please operate correctly to avoid damaging the battery connector.

2.3.2. Charging

Insert the charger on the charging interface at the side end of the phone.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, it means the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.

2.4. Security Password

■ PIN

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

■ PIN 2

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operations company for more details.

■ PUK

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

■ PUK2

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

3. Quick User Guide

3.1. Dial a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

Press left soft key to access Options.

3.2. Reject a Call

You can press End key to reject an incoming call.

3.3. Receive a Call

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ring tone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

3.4. End a Call

After finishing a call, you can press End key to end a call.

3.5. Emergency Services

You can directly dial an emergency service call without SIM card.

Different network uses different emergency numbers, please consult your network operations company for more details.

3.6. Extension Speed Dial

After inputting telephone number, if you want to input branch number, please press and hold “*”, input your extension number after the display screen shows “P”. After getting through the call, it will directly dial the extension.

3.7. Dialed Calls/Missed Calls/Received Calls/Rejected Calls

You can enter call log to check the relevant details of dialed calls, missed calls, received calls and rejected calls.

Prompt: The record of incoming call from blacklist number will be saved in Rejected Calls.

3.8. Call Forward

After call forward function is started, according to different forward

conditions settings (Call Forward Unconditionally, Forward Busy, Forward No Answer, Forward Can Not Reach), you can select to switch the incoming call to voice inbox or other telephone numbers.

3.9. Call Waiting

After call waiting function is started, when you are calling, the other call can be put through.

3.10. Call Barring

After call barring function is started, according to different restricted conditions settings (all the dialed calls, all the incoming calls, incoming calls when roaming, dialed international calls, outgoing international calls when roaming), you can restrict the call under the corresponding conditions (need to apply to network operator for business).

3.11. Power off the Phone

In the standby mode, press and hold End key to power off the phone.

3.12. T-flash Card

Insert the T-Flash card into phone from the background. This will expand the Flash memory of the phone.

Tap Multimedia menu, you can browse MP3, MP4, picture, video, photograph etc.

4. Function Menu

4.1. Call logs

■ All calls

Display the list of your recent all numbers. The operation is the same as the Dialed.

■ Missed calls

Display the list of your recent missed numbers. The operation is the same as the Dialed.

■ Dialed calls

Display the list of your recent dialed numbers.

■ Received calls

Display the list of your recent answered numbers. The operation is the same as the Dialed.

■ Rejected calls

Display the incoming call records in the blacklist.

■ **Delete all**

You could delete all the records of the Dialed, Received, Missed and Rejected.

■ **Call timers**

Display information details of SIM: Last Call, Received Calls, Dialed Calls, and All Calls. Press left soft key to "Reset".

■ **GPRS counter**

Display information details of SIM: Last sent, Last received, Total sent, and Total received. Press left soft key to "Reset".

4.2. Contacts

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 300.

4.3. Internet

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and are maintained by WAP service supplier.

WAP service requires network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

4.4. Multimedia

■ Albums

Enter into image browser list.

■ DV

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

View video directory: Enter into videos list.

DC/DV mode: Through this function menu, can switch to frame the menu camera.

Effect: The special effect can be classified into: normal, black and white, blue, green, yellow, red, sepia and negative.

Contrast:

Brightness: adjust the exposure to highlight the definition of the image.

Settings: Including size, banding, audio, video format, storage etc.

■ Audio

This phone could play the MP3 stored in the phone memory and support the background play. Press the left soft key or "OK" key to enter and use the

Navigation keys to operate the MP3 player. According to * and adjust the volume # key. Press left soft key to access Options:

Music list: Display all the MP3 or the play list you've saved.

Add: To saved play list, to new play list, to music mark

Set as ring tone: Set the selected MP3 as the call ring or alarm ring of the incoming call.

Shuffle: Selected the play mode shuffle

Repeat: Selected the play mode repeat

Settings: Set the music equalizer or BT stereo output or BT stereo headset.

Open review: You can choose to open or close A-B answer read function

Exit: Return to previous menu.

■ Video player

This phone supports the video format of 3GP、AVI and MP4.

Enter the video play list interface, press left soft key, you could go on the following operations.

■ Recorder

Use this function you can record or listen to your own record. The record file format: AMR, WAV.

■ FM radio

Please plug in the compatible earphone to the device and then turn on the radio. The earphone cable can be used as FM Antenna. Press the left and right navigation key to switch on a channel and a channel. Press the ok keys to

stop/play broadcasting FM radio.

On the interface of the Radio playing, press left soft key you could enter the options menu .

4.5. Message

Message service is actually a network service. This menu works soundly depending on the type of your SIM card and the service provided by the network operator. Therefore, please check it before applying such function.

■ Write message

Please have the service center number from the network operator before applying this function. The storage capacity of SIM card depends on its type.

■ Inbox

Save the received SMS message.

■ Outbox

Save the SMS message not sent out successfully.

■ Drafts

Save the unsent messages.

■ Sentbox

Save the SMS message you sent successfully.

■ Security inbox

■ **Templates**

Directly use the default phrases when writing the messages.

■ **Broadcast message**

■ **Voice mail server**

4.6. Application

■ **Alarm**

You can edit alarm, time, ring and repeated ring mode.

In “alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

■ **Calendar**

You can use this feature to view the year, date and solar term easily. Use up/down/left/right direction key to navigator other date.

■ **Calculator**

The function will make your device a calculator with which you can carry out simple math calculation.

■ **Ebook**

Documents Reader Ebook

■ **World clock**

In the world, and can automatically display the time zone clocks.

4.7. Games

■ Sokoban

This mobile phone provides a Sokoban game, please see the specific operation within the game operating instructions.

■ Gobang

This mobile phone provides a Gobang game, please see the specific operation within the game operating instructions.

■ Facebook

■ Yahoo

■ eBuddy

■ Nimbuzz

■ Twitter

4.8. My files

Files manager can manage the files in the phone and memory card. (make sure the card has been inserted)

4.9. Settings

■ Phone settings

Date & time: You can set up the date and time on the phone as well as their display mode.

Language settings: You can select phone language.

Shortcut settings: You can set the menu when you press navigation button to enter in standby interface.

Auto Power on/off: You can set the time and repeat mode of power-on and power-off.

Power saving mode:

Restore factory settings: You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.

■ Display

Animation effect: Switch machine support pictures and animations

Wallpaper Settings: Supported: Static wallpaper and more pictures.

Idle display settings: After checking the standby screen can display the checked items

Contrast: Adjust the screen backlight.

Backlight: Adjust the backlight time.

Keypad backlight time: Adjust the keypad backlight time.

■ Security

Including:

PIN: Start and close of PIN code and the modification of PIN.

Modify PIN2: Modification of PIN2 code.

Phone locked: Open or close the phone lock. The default password is “9999”.

Modify the cellphone password: Change the phone and privacy password.

Privacy: Set the privacy protection. The default password is “9999”.

Auto keypad lock: Set the time of mobile phone automatically locked.

Lock screen by end-key: Choose open or closed by red key locking function.

Mobile tracker:

Fixed dialing: Start and close of the fixed dialing, and management of the fixed dialing list

Blacklist: Set the Settings of the blacklist and management of the list.

■ Call settings

Including:

Dual-SIM: including Standby mode, Reply by original SIM, Set SIM name and Set dual SIM call divert.

Call Divert: When “call divert” function is started up, you can transfer the incoming call to voice inbox or other phone number according to the tasked “call divert” conditions.

Call waiting: You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

Call Barring: All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are

available.

Hide ID: Set the display mode of the phone number.

Advanced settings: The setting options include Call time minute reminder, Auto redial, Reply SMS after reject, Auto record voice call.

■ Connections

The items are:

Network account: Manage internet account, and support editor and delete.

GPRS Service: Choose turn on or off GPRS service.

Data connection settings: Select to connect as needed or all the time.

Network selection: Select to automatically or manually connect.

4.10. Profiles

The preset modes are Normal mode, Silent mode, Indoor mode. It support custom profiles, define at most 5 profiles, and users can set the parameters of the profiles.

Instruction: The preset profiles do not support delete, while the custom profiles support delete.

More Functions

Choose one mode, to open the option menu:

Rename: Rename the current mode.

Ring settings: Set the SIM call ring and message ring.

Adjust volume: Adjust volume for Caller ring tone, Message ring

tone, Alarm & calendar ring tone, Call volume and Power ring tone.

Ring type: Set the SIM call alert and message alert, alarm & calendar remind.

Other alert rings: Set the other alert rings, such as Key tone, Battery low alert, Power ring tone, Dial tone.

4.11. Camera

The device is equipped with a webcam with high pixels. You can take photo at any time and save the photo in the device or SIM card. Press OK key to get the picture.

Image viewer: Enter into image browser list.

DV/DC mode: Through this function menu, can switch to frame the menu camera.

Effect: The special effect can be classified into: normal, black and white, blue, green, yellow, red, sepia and negative.

Contrast:

Brightness: adjust the exposure to highlight the definition of the image.

White balance: adjust the color balance of the photo

Settings: Including size, quality, banding, shutter sound, auto save, storage etc.

4.12. BlueTooth

Open/Close Bluetooth: You can choose to “open” or “close” Bluetooth.

Bluetooth visibility: You can choose “show phone” or “hidden” Bluetooth. If the Bluetooth is hidden, others cannot search your phone.

Paired device: You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).

Device name: You can change the name of the phone.

Bluetooth file storage: You can choose bluetooth file save to phone or memory card.

Help: You can view the operating instruction of Bluetooth

5. Text Input

The device provides several text input modes so that you can write text or input data in your “contacts”, edit “contacts” record, search English names and write SMS and to-do list.

In “text input” mode, if you want to change the input way, you can press “#” key. The selected input way will appear on the top left of the screen.

Letter (Capital, Normal)

Enter edit page, press “#” and switch the input mode to “letter”, then

press the keys on keypad, selected letters will appear on the screen.

Press the number key can get the first letter marked on the key, press twice quickly can get the second letter marked on the key. Similarly, if the letter you want to input have the same key with the former letter, please wait until the cursor appears again, then input the new letter.

For example, if you want to input “ok”, you need to press the “6” key three times continuously and get “o”, then press the key “5” twice, “k” will appear on the screen. Press right soft key, you can delete the text you input.

Number

Enter “edit” mode, press “#” key you can change the input way to “number”. Then press the keys, number will appear on the screen. The key 0-9 separately represents the figure from 0 to 9. You can press corresponding key to get desired number. Press right soft key can delete the number you input.

6. Care and Maintenance

Maintenance of battery

- Your device is powered by a rechargeable battery. It is necessary to have the battery charged when it is going to wear out. The full performance of a new battery is achieved only when it is fully worn out.
- Unplug the charger from the electrical plug and the device when not in use.

Do not leave fully a charged battery connected to a charger over a week, since overcharging may shorten its lifetime.

· Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of batter exceeds 40°C ,the battery cannot be charged.

· Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) terminals of the battery.

· Do not use damaged battery.

· Leave the battery in hot or cold places will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

· Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Care of maintenance of your device

The suggestions below will help you protect your warranty coverage.

· Keep the device and accessories out of the reach of small children.

· Keep the device dry. All types of liquids or moisture will corrode electronic circuits.

· Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.

· Do not attempt to open the device other than as instructed in this guide.

Non-professional handling may damage the device.

- Do not use harsh chemicals or strong detergents to clean the device.
- Use only the supplied or an approved replacement attachments, for the unauthorized ones could invalidate the warranty of maintenance.

FCC WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.