




©2016 Mattel. All rights reserved. Street Savage is a registered trademark of Mattel. All other trademarks are the property of their respective owners.

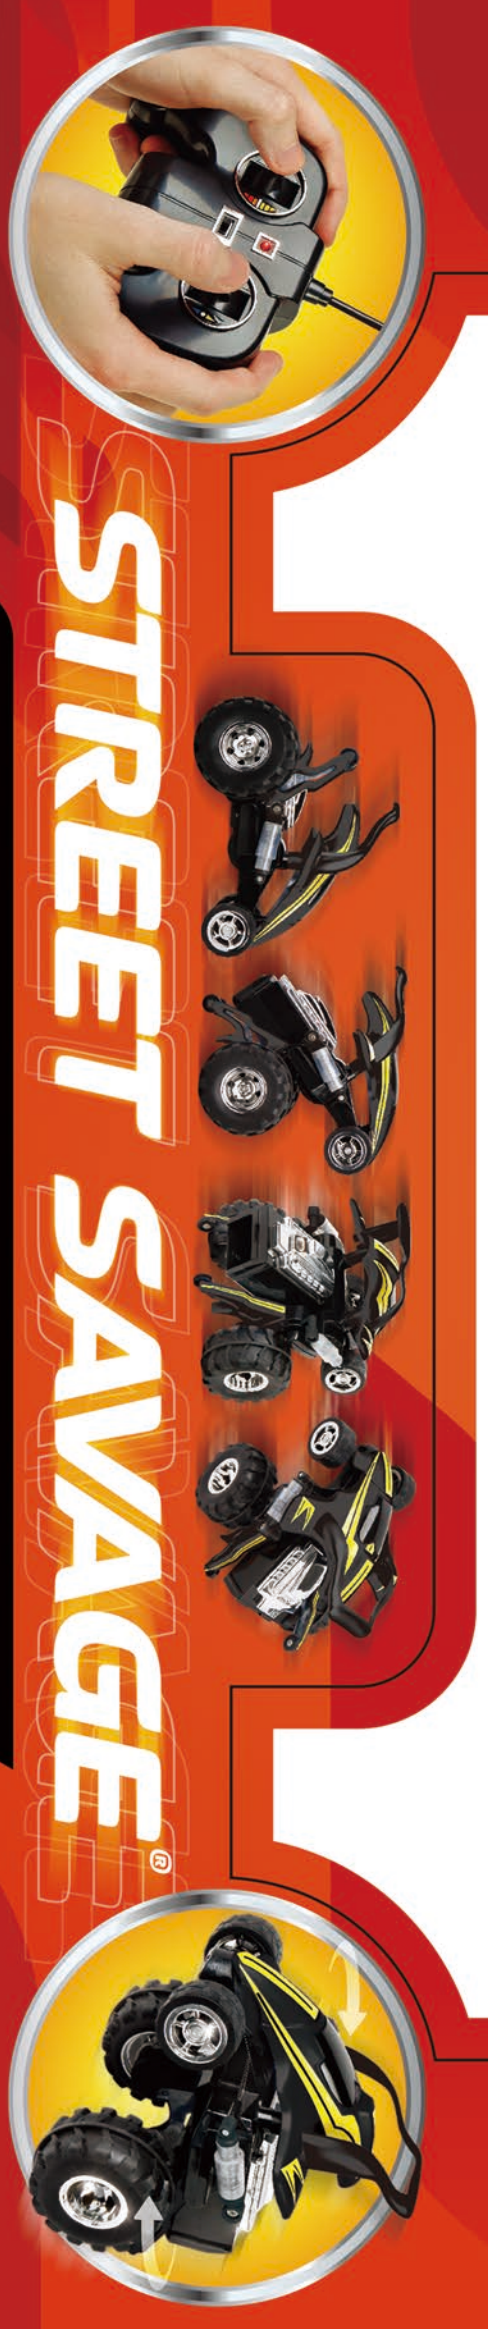

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

### BATTERY INFORMATION

The operation requires 6 "AA" 1.5V (not included) alkaline batteries for car and one 9V battery for remote control (not included).

- Carefully remove items from package.
- Locate the battery compartment on the back of each item.
- Unscrew latch on bottom of car to release battery pack and replace batteries following the correct polarities (Fig. 1).
- Replace the battery compartment door.
- Slide open the battery compartment door of the controller.
- Insert the 9V battery following the correct polarities (Fig. 2).
- Replace the battery compartment door.

### SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

### PERFORMING STUNTS

- 1. SPECTACULAR SPINS.** To spin the Street Savage 360®, run the car and push up the RIGHT joystick and simultaneously push down the LEFT joystick or push up the RIGHT joystick and simultaneously push down the LEFT joystick depending on the chosen spin direction (Fig. 4).
- 2. AWESOME CORNERING.** To take extremely sharp turns or maneuver a 180° or 360° turn, run the car and push the RIGHT and the LEFT joystick then release the RIGHT or the LEFT joystick to steer left or right (Fig. 5).
- 3. WILD WHEELIE.** To make a wheelie, run the car and push BOTH joysticks forward. The car will stand up on two wheels. Release slowly the RIGHT or the LEFT joystick to steer (Fig. 6).
- 4. TWO WHEEL SPINS.** To make a two wheel spin, run the car at full speed to make a wheelie and then suddenly release the RIGHT or the LEFT joystick to spin on two wheels (Fig. 7).

**RECOMMEND USING ALKALINE BATTERIES FOR BEST PERFORMANCE.**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**BATTERY WARNING:**

- Do not mix old and new batteries.
- Do not mix alkaline, recharged (nickel-cadmium), or rechargeable (nickel-cadmium) batteries.
- Do not mix alkaline, recharged (nickel-cadmium), or rechargeable (nickel-cadmium) batteries with other types of batteries.
- Remove batteries when not in use. Replace or replace or uncharged batteries according to the instructions on the batteries.
- Do not dispose of batteries in a fire. Do not throw into a fire or water.
- Only use manufacturer specified batteries, clear marked under caution. If applicable, specified by the manufacturer.
- Always use regular, and recharge if applicable, batteries under adult supervision.

**KEEP THIS MANUAL FOR REFERENCE. PUT IT CONSIDERABLE INFORMATION.**

**WARNING:** Dispose of this product in the way or manner specified in the instructions. Do not use the user's address to use the equipment.

**FCC:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2016 Mattel. All rights reserved. Street Savage is a registered trademark of Mattel. All other trademarks are the property of their respective owners.

US Pat. No. 8,540,583; China Pat. No. 21,203,030/9196.6

For technical support, please visit [www.mattel.com/streetsavage](http://www.mattel.com/streetsavage) or call 1-800-374-2744.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

### PERFORM STUNTS, JUMPS, WHEELIES AND OTHER EXTREME STUNTS

- Full-Function Wireless Remote Control
- Spring-Loaded Shocks and Knobby Tires for All-Terrain Driving
- Available in 2 Frequencies for Competitive Racing!

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

# STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

**360 DEGREE SPINS AND OTHER STUNTS**

**1 TWO FREQUENCIES FOR COMPETITIVE RACING**

**BLUE HAT**

OX18A  
Toy RC Stunt Car

**WIRELESS RC ACTION!**

**BATTERY OPERATED PLAY VEHICLE**  
AGES 6 AND UP

**AGES 6+**

**THIS CONTAINS:**  
1 CAR  
1 REMOTE CONTROL  
1 CHARGER  
1 9V BATTERY  
1 AA BATTERY

**WARNING!**  
Small parts. Not for children under 3 years.

©2016 Mattel. All rights reserved. Street Savage is a registered trademark of Mattel. All other trademarks are the property of their respective owners.