

Thank you for selecting the Wireless earphone from us. The product adopts Wireless 4.1 and provides high grade tone due to the noise cancellation technology with the function of Hands Free. Please carefully read the User's Manual before using the product.



Function	Operation
ON	Hold the Multi-function Button for 3s
OFF	Hold the Multi-function Button for 4s
Enable Pairing Mode	Hold the Multi-function Button for 5s
Answer Telephone	Click the Multi-function Button once
End up Calling	Click the Multi-function Button once
Reject the Incoming Call	Hold the Multi-function Button for 2s
Latest Number Redialing	Double click the Multi-function Button
Stop the Outbound Call	Click the Multi-function Button once
Voice Dialing	Hold the Multi-function Button for 1s
Microphone Mute Switching	Click the Mute Button once
Pause, Play	Click the Multi-function Button once

Micro USB Charging Port

1. 1-2h (full charging); 5.0V, 500mAh.

2. Best performance with full battery.

Microphone Mute Button

1. Press Mute Button once to mute the Microphone.

LED

1. Under charging (red indicator is on; after charging full, the blue indicator is on);
2. Low battery (red indicator flashes twice with voice prompt).

Step to connect Wireless Earphone with the Mobile Phone

1. Under the Earphone OFF state, hold the Multi-function Button (for about 5s) till the earphone indicator flashes in red and blue by turn to enter in the Searching state. (Voice prompt "pairing", under the pairing state, and then it can be found by Mobile Phone);
2. Enable Wireless of the mobile phone, click Search Wireless Device till the mobile phone finds the earphone signal, and then the name of earphone will be displayed;
3. Click the earphone name to connect, after successfully connected, voice prompt "connected", the earphone indicator flashes in blue;
4. Input password: 0000 if needed (default password is 0000).

Here, congratulations, you have successfully connected the Earphone, can listen music and make calling with it.

Step to Connect with Two Mobile Phones

1. Under the Wireless earphone OFF state, hold the Multi-function Button for about 5s till the Earphone indicator flashes in red and blue by turn to enter in the Searching state, voice prompt "pairing";
2. Enable the Wireless function of mobile phone 1, click Search Wireless Device to search the earphone name, and then click Pairing to connect, voice prompt "connected";
3. Turn off the Wireless function of mobile phone 1, hold the earphone Multi-function Button till the red indicator lights on, then turn off the earphone;
4. Enable the Wireless earphone again to enter in the Searching state;
5. Enable the Wireless function of mobile phone 2, click Search Wireless Device to search the earphone name, and then click Pairing to connect;
6. Enable the Wireless function of mobile phone 1 and find the targeted earphone, and then click to connection.

Please use Earphone near your mobile phone.

The straight distance between your mobile phone and earphone reaches 10m without obstacle, if it exceeds 10m, it may possibly cause tone drop and disconnection.

How to Reconnect:

1. Your earphone will try to reconnect the lost connection;
2. If the earphone doesn't try to reconnect, please click the Multi-function Button once or manually connect with the Wireless equipment menu of the mobile phone.

Recover Default Settings

1. When charging, hold the Multi-function Button for 3s till the red and blue indicator flashes by turn to recover default settings.

Troubleshooting

I. The mobile phone can't find the Earphone

Possible Reasons:

1. The earphone is not under ON and standby state;
2. The earphone program is error;
3. The program of the mobile phone is error;

Solutions:

1. After turning off the Earphone, hold the Multi-function Button (red and blue indicator flashes by turn) to enable pairing state;
2. Recover the Wireless earphone to default settings;
3. After restart the mobile phone, remove all pairing data in the Wireless of the mobile phone;

Cautions:

1. After the Wireless earphone has entered in the pairing mode, it will connect within 2min, otherwise, the earphone will automatically turn off;
2. When charging, hold the Multi-function Button for about 3s till the red and blue indicator flashes by turn for 3 times to recover to default settings.

II. No sound from the earphone

Possible Reasons:

1. The volume of the mobile phone is unsuitable;
2. The Wireless earphone and mobile phone are not connected correctly;
3. The Wireless earphone is out of the working range.

Solutions:

1. Adjust the volume in the mobile phone;
2. Operate with the reference of the use steps;
3. Keep the earphone in the range of 10m to the mobile phone without any obstacle.

Cautions:

1. Do not have any other operation when searching Earphone for avoiding program error;
2. Please use Earphone near the mobile phone to assure best effect.

III. Charging red indicator doesn't light on

Possible Reasons:

The Earphone has not been used for a long period.

Solutions:

Charge Earphone for about 30min, and then the red indicator may light on.

Cautions:

It will drop the capacity and service life of the battery if it is over charged or the Wireless earphone is stored in the environment such as closed car.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.