

 
**Control
light &
sound**
from your
mobile device

STREET  HOPPER

User Manual

The Street Hopper Bluetooth Portable Speaker System with rechargeable battery will stream your favorite music for hours, from any Bluetooth device card or the USB. Street Hopper gives you a full Multi-Color LED light show, with a variation of programmed light displays. All controlled via the front panel, remote control or Discolor Dj App.

The Discolor Dj free app is available from Android/Apple App Stores. The Discolor DJ app gives you full control of the Street Hopper features via bluetooth connection. Control the source, volume and EQ levels. Change the LED lighting to any color and light profile to set the mood. Choose and playback music from your music library, or the USB. The Street Hopper portable design and go anywhere with anything feature, like the Microphone input and Guitar input for those plug and play times.

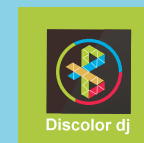


FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 -- Consult the dealer or an experienced radio/TV technician for help
 This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions
 (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

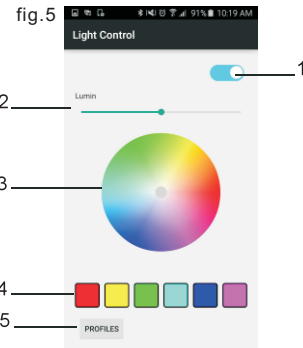

- 1. Active Illumination** You can enable or disable the illumination
- 2. Lumin** controls the intensity of illumination
- 3. Color Wheel** Here you can select colors directly and change the pitch by dragging it to any part
- 4. Fixed Colors** Control 6 different color tones
- 5. Profiles** Access lighting profiles *fig. 5.1*

fig. 5.1

Profiles

- Rainbow** mixes colors of a rainbow
- Rainbow s** mixes colors of a rainbow slowly
- Heartbeat** glows red simulating a heartbeat
- Heartbeat rS** glows red to simulate slow heartbeat
- Heartbeat gS** glows green to simulate a slow heartbeat
- Heartbeat bS** glows blue to simulate a slow heartbeat
- Heartbeat gS** glows green to simulate a slow heartbeat
- Flash** mixes colors to simulate a strobe light
- Alarm** simulates an alarm with red & blue lights
- Breathings** color mixing simulating slow breathing
- Feel Green** mixes colors in different green hues
- Sunset** mixes color in light tones
- Music** combines different colors to the rhythm of your music

fig. 6



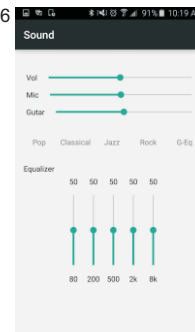 


fig. 7

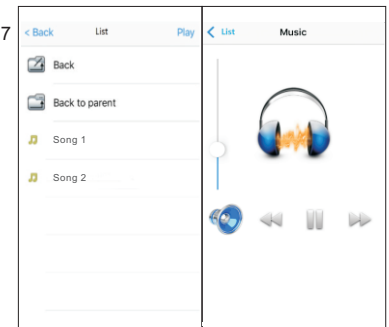 

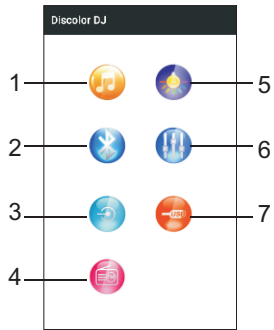 

1. **Music Selection** Choose from songs you have on your device *fig. 1*
2. **Bluetooth** Connect to the Street Hopper unit via Bluetooth *fig. 2*
3. **Line In/AUX Mute** *fig. 3*
4. **FM Radio** *fig. 4*
5. **Light Profiles** Control different lighting profiles & customize your Street Hopper unit *fig. 5*
6. **Equalizer** Control equalizer levels & microphone/guitar volume *fig. 6*
7. **USB** control music from USB Card *fig. 7*

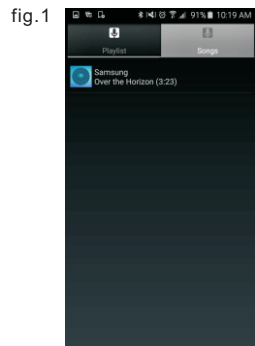 


fig.1


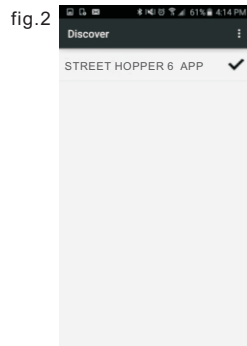 


fig.2

 -Bluetooth
Synchronizing your app with the Street Hopper Unit



NOTE: This is a sample interface, the interfacemay vary depending on your certain device.

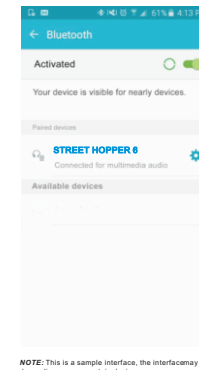

Discolor DJ

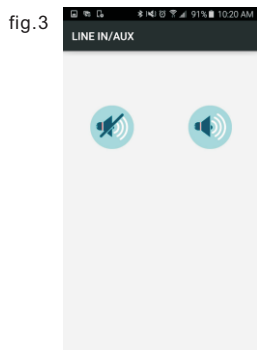 


fig.3

-Mute
Mute line in/aux input when connected


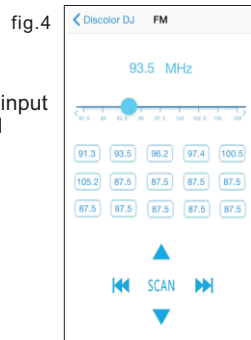 



fig.4

Press enter into FM radio mode, press SCAN to enter into radio program automatic scan. Press <<>> for radio program manual scan, ▲ ▼ Top and bottom trimming, slide around to adjust radio frequency between 87.5MHz~108.0MHz.

 4. Now activate your application and select Bluetooth symbol.

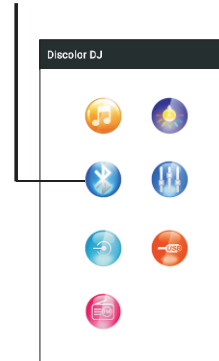

 5. Select STREET HOPPER6 APP to connect via the application.

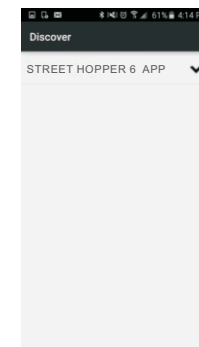


There is two different ways to connect the Bluetooth feature for STREET HOPPER 6. **Bluetooth direct** connect from the STREET HOPPER 6, or **Bluetooth connect** via the Discolor Dj App.
Note: The STREET HOPPER 6 can be connected to both Bluetooth direct and the Discolor Dj App at the same time. **Bluetooth direct** will be used to playback any music media and apps, such as Pandora, You Tube, your music player etc. All control of the music media will be controlled through their prospected app controls. For **Bluetooth connect** from the Discolor Dj App you will have full remote control of the STREET HOPPER 6 features, playback controls, volume & EQ as well as lighting control.

1. Turn on Bluetooth via your device settings, locate and pair to STREET HOPPER 6.

2. Verify that your device is connected to the STREET HOPPER 6 device.

 
3. Download the FREEDiscolor DJ App in your App Store and install it.

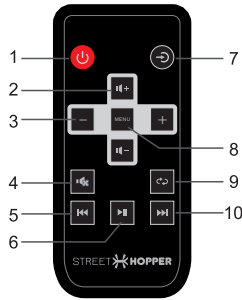


1. **Stand By**(Unit will be put in a sleep mode)
2. **Master Volume + Up / - Down**
3. **Function +/-** (By clicking, you can browse in menu functions. Increase/Decrease bass,treble, volume control and microphone)
4. **Mute Button**
5. **Previous**
6. **Play /Pause**
7. **Input(USB/LINE IN/Bluetooth)**
8. **Menu**(Use +/- to adjust menu selections)
 - TREBLE-9 to +9.....control treble levels
 - MICROPHONE VOLUME 0 to 16.....control microphone volume
 - GUITAR VOLUME 0 to 16.....control guitar volume
 - ECHO 0 to 16.....control echo levels
 - LIGHT MODE 1 to 12.....control different lighting levels
 - BASS -9 to +9.....control bass levels
9. **Repeat Button**
10. **Next Button**

Remote Control Range of Operation

 Note:
There should not be an obstruction between the unit and remote control

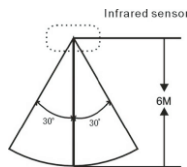

Panel

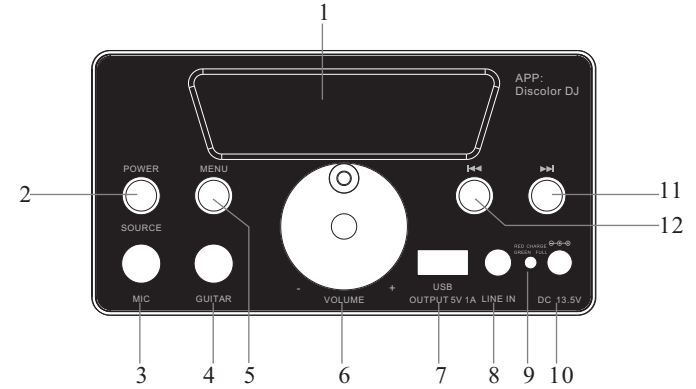 

1. **LED Panel**Function Display
2. **Power/SOURCE:** POWER/USB/LINE IN/BLUETOOTH/FM:Switch functions by pressing button, *Holding this button for 3 seconds will turn off the unit.*
3. **Mic Input**
4. **Guitar Input**
5. **Menu change from one function to another**
 - TREBLE-9 to +9.....control treble levels
 - MICROPHONE VOLUME 0 to 16.....control microphone volume
 - GUITAR VOLUME 0 to 16.....control guitar volume
 - ECHO 0 to 16.....control echo levels
 - LIGHT MODE 1 to 12.....control different lighting levels
 - BASS -9 to +9.....control bass levels
6. **Volume +/-:** Adjusts main volume
7. **USB(USB 5V 1A)**
8. **Line In**
9. **Charge Indicating LED**
Red, indicates Charging
Green indicates charging is complete
10. **DC 13.5V** - Charger Input
11. **Next Song**
12. **Previous Song**

* Note: For optimal performance, charge battery for a period of 8 hours