

**GDI-EXPAS601**

INDEX

OPERATION.....1

IMPORTANT SAFETY INSTRUCTIONS .....2

SPECIFICATIONS.....2

CONTROLS AND CONNECTIONS.....3



- **CAUTION, TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)**
- **THIS PRODUCT MUST BE EARTHED**
- **NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

OPERATION

1. Prior to switching on turn volume down to a minimum.
2. Connect to the audio source to the appropriate input socket.
3. Connect to the mains supply.
4. Switch on the audio source, followed by the active speaker
5. Set the volume with the applicable control
6. Adjust the bass+treble to midpoint



Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.



#### Caution

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.



#### Caution

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



#### Caution

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with

the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

to a MAINS socket outlet with a protective earthing connection.

16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



17. Correct disposal of this product: This symbol indicates that this product must not be disposed of with

household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For

take your waste equipment for recycling, please contact your local city office, or your household waste collection service.

18. Do not install in a confined space, such as a book case or similar unit.
19. Do not place naked flame sources, such as lighted candles, on the apparatus.
20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed of at a battery collection point.
21. Use this apparatus in tropical and/or moderate climates.

---

#### WARNING

Do not ingest the battery, Chemical Burn Hazard  
(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal in just 2 hours and can lead to death . Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

---


## INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- Do not place an open fire(candles etc)on top or next to the box-FIRE HAZARD.
- Only connect to an earthed mains output of AC 115/230V~60/50Hz.
- For indoor use only. If the box is used outdoors,you need to make sure that no humidity can enter the box.
- When not in use,unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- Only use suitable means of transportation if you want to move the box-BEWARE OF YOUR BACK!
- Always unplug the unit during a thunderstorm when it is not in use.
- If the unit has not been used for a long period of time, condensation can be occurred inside the house.
- Please wait the unit reaching room temperature before switching it on.
- Never try to repair the unit by yourself.It does not contain any user repairable parts.
- Run the main lead in a way that nobody can fall over it and nothing can be put onto it.
- Set the unit to the lowest volume before switching it on.
- Keep the unit out of the reach to children.

## SPECIFICATIONS

	<b>15"Speaker box</b>
System	Active 2-way full range
Woofer	15"
Tweeter	1"
Power RMS	180W
Impedance	4 ohm
Frequency Range	40Hz~18KHz
Sensitivity	92dB(+/-2dB)
Connector	XLR/6.35mm/RCA
Mic Input Level	10mV
Line Input/Output Level	700mV

## CONTROLS LOCATION

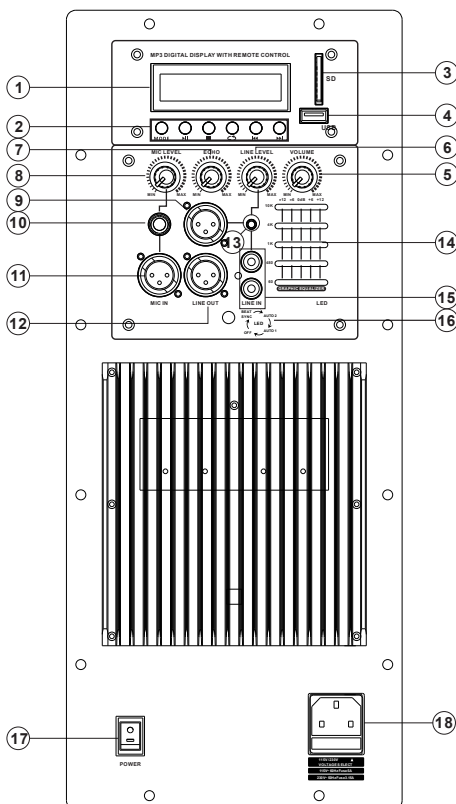

- |                                       |                                 |
|---------------------------------------|---------------------------------|
| 1.LCD screen                          | 7.Echo control                  |
| 2.MP3 control                         | 8.Microphone level control      |
| MODE:USB/SD/BT/Hold to ON/OFF         | 9.XLR input                     |
| BT:Long press to disconnect           | 10.6.35mm microphone input      |
| ▶  :Play / Pause                      | 11.XLR microphone input         |
| ■:Stop                                | 12.Line output                  |
| ↺:Repeat one/Repeat all/Random/Folder | 13.3.5mm line input             |
| ⏮:Previous Song                       | 14.5 band EQ control            |
| ⏭:Next Song                           | 15.RCA line inputs (R + L)      |
| 3.SD card input                       | 16.LED mode selection           |
| 4.USB input                           | 17.Switch ON and oF             |
| 5.Main volume control                 | 18.AC input(AC115/230V 60/50Hz) |
| 6.Online level control                |                                 |