

Search "X Play" on Youtube 

X PLAY

MICRO GOLF SIMULATOR

User Guide


Authorization

STEP 1

Authorizing with provided license key

Access on "<http://e6golf.com/authorization>" and sign up with ID, password, email and provided license key.

* License key was sent by email or included in the package.

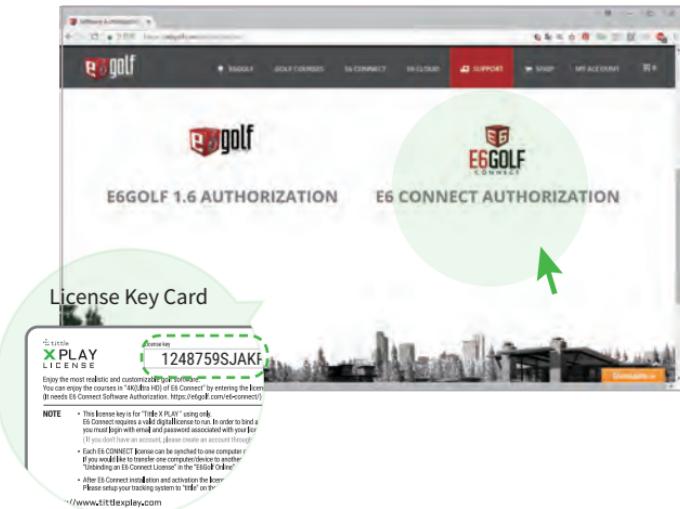


S/W Installation

STEP 2

Downloading the E6 Connect S/W

Please begin by installing the software with the installer that can be downloaded from <http://e6golf.com/update/e6-connect/>(or see email that we sent download address).

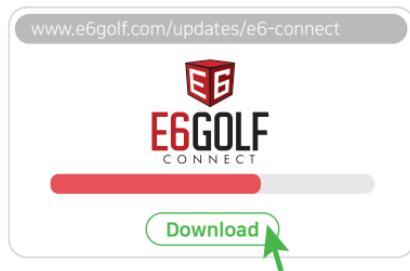

E6 CONNECT SYSTEM REQUIREMENTS

PC	CPU	Intel i5 Processor	HDD	25GB of Hard Drive Space
	RAM	8GB RAM	Video Card	Nvidia 1070 Graphics Card or equivalent (Dedicated GPU with DirectX 11 Support)
	OS	Windows 10 (Required)	Network	Internet Connection (Required)
iPhone & iPad		iOS 11.2 or later		

S/W Installation


STEP 3

Install the E6Golf S/W

Double-click the E6 Connect icon on your desktop to begin the installation.

* During installation, an E6 Connect icon is pinned to your task bar for quick starting.

When installation is complete, start menu and E6Golf icons are created on the screen.

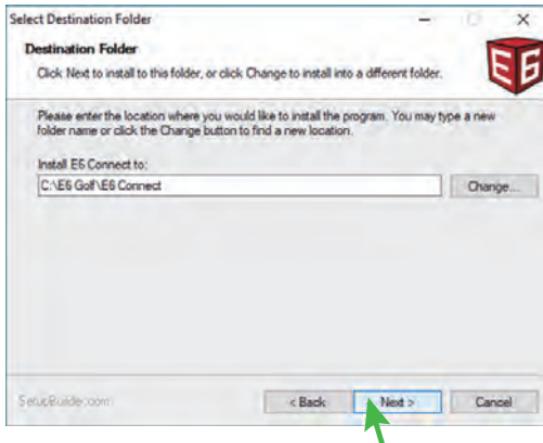

Important!


If you are prompted, agree to install the Microsoft Visual C++ 2015 Redistributable.

Activate E6 Connect license

STEP 4

Run E6 Connect

After installation, the LICENSE ACTIVATION SCREEN (below) is displayed. Click the red LOGIN button under "Activate" and then enter the email and password for your account.

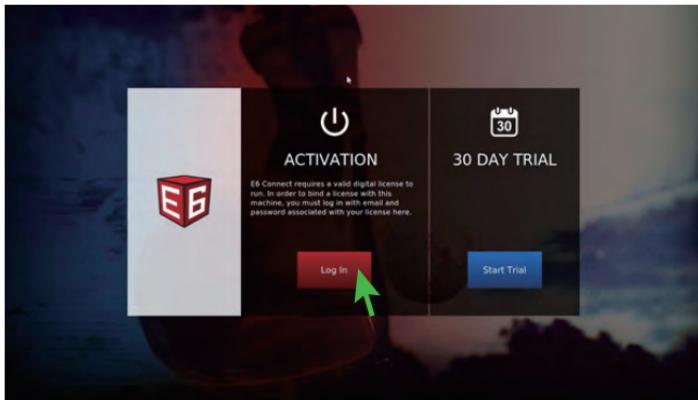

Important!


If you have not yet signed up for your account, click SIGN UP under "Create".

Activate E6 Connect license

STEP 5

Activate your license on your PC

If, like most users, you have a single license for E6 Connect, it will automatically synch (or “bind”) to your computer.

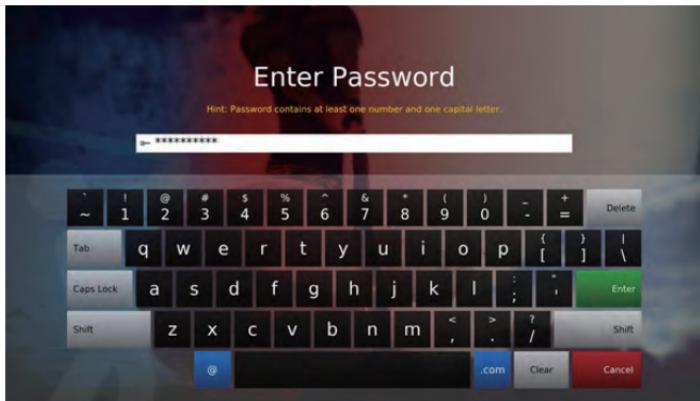

Please Check !


E6 Connect licenses can be easily transferred from one computer to another, if needed. For instructions, see “Unbinding an E6 Connect License” in the “E6Golf Online” section.

Activate E6 Connect license

STEP 6

Select one license if you have multiple licenses

If you have multiple licenses, the Select License screen appears. Select the license you want to use with this computer and then select ACTIVATE.

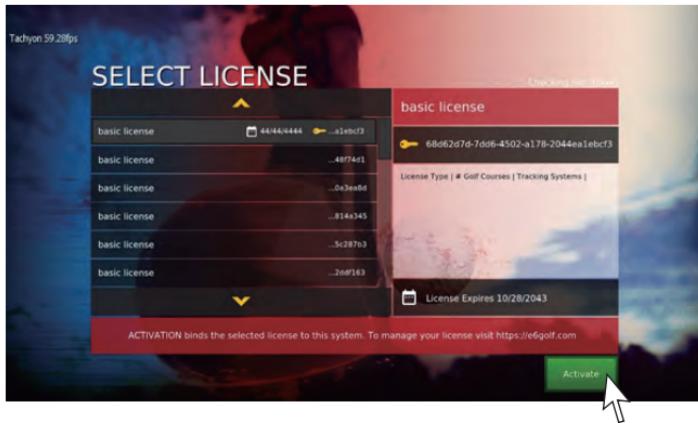


System configuration

STEP 7

Set up the tracking system : Tittle X

To confirm your tracking system and video settings, click the blue SETTINGS button.

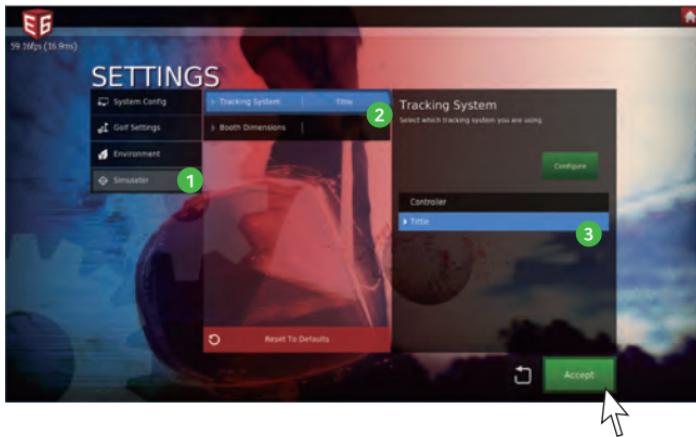

Click the SIMULATOR tab (bottom left), and then click TRACKING SYSTEM and then select Tittle X.

Click ACCEPT to save all changes and return to the MAIN SCREEN.


Preparing Title X

STEP 8

Attach a cradle onto the swing stick or shaft

Attach each cradle to the swing stick

Please attach the cradle on the skinnier part of the shaft and push it upwards into the grip of the club.

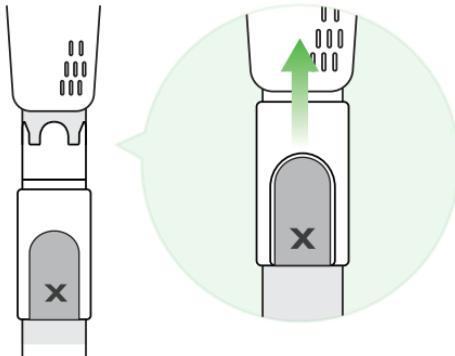


Preparing Tittle X

STEP 9

Insert Tittle X onto the cradle

Align the marked Tittle X symbol to the cradle outline and insert until you hear a clicking sound.

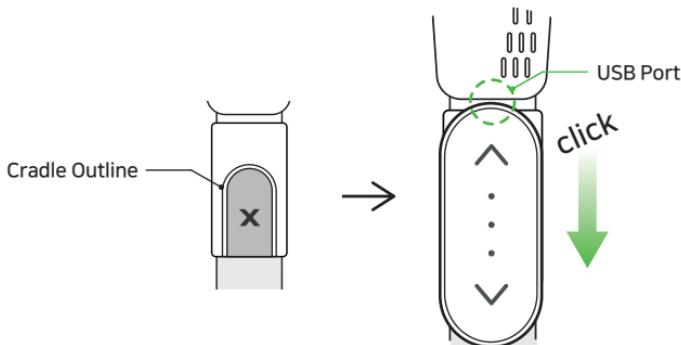

Once you attach and power on the device it will automatically recognize the club and enter the Swing Mode. If Tittle X connects with golf simulator software, 'LED lights ' sign for Swing Mode will be displayed.

* For more details on LED Signs, check the back page.


Getting started with Tittle X

STEP 10

Power up Tittle X

Power up by tapping on the display twice or moving lightly.

When Tittle X is not used for over 10 minutes it will automatically go into the sleep mode.

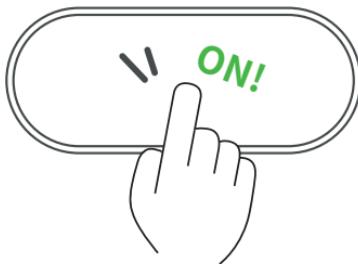

Please Check !

Tittle X is delivered to you in sleep mode.
Wake up Tittle X by connecting it to a power source using the included charging cable.



Set up bluetooth

STEP 11

Check the bluetooth on

Go to Settings > Bluetooth in windows and Make sure your bluetooth is turned on in your PC.

STEP 12

Connect Tittle X with your PC

Tap Tittle X device to wake up the display for being detected.
If E6 Connect is running, it will automatically connect.



Important!

When connected Tittle X with your PC before connecting E6 Connect, sometimes connection may not be made automatically. At this time, disconnect Tittle X from the PC's Bluetooth screen and try again.


Set up bluetooth

STEP 13

Check the pairing status.

If the connection succeeds, the blinking red LED lights of device turns white and you can hear the voice "Device connected"

Once Tittle is paired with E6 Connect, it will automatically be connected.

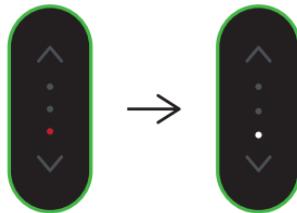

E6 CONNECT VOICE GUIDE

Connection successful! Device connected

Address position Ready

After swing The distance to the pin is ____meters(yards)

Play golf with Tittle X

STEP 14

Select play mode

In the E6 Connect, select “Play Golf” to start a round. And set up the round configuration.




- ① **Play Golf** Play a “local” round (not online or peer-to-peer)
- ② **Profiles** Log in players/guests
- ③ **Practice** Play a practice session
- ④ **Games** Play a Quick Play Game
- ⑤ **Online Play** Play Peer-to-Peer
- ⑥ **Settings** Configure your display, play settings, course conditions and hardware

Play golf with Tittle X

STEP 15

Swing

When you maintain the address position until Tittle X vibrates alerting you, the Ready Mode switches to the Swing Mode. And then begin your swing.

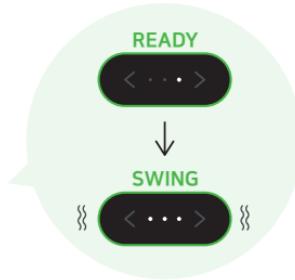

* In swing mode, the three led lights are turned on repeatedly in order.

Please Check !

After entering the Swing Mode, if you waggle or make other movements, a false swing is registered. Therefore, after entering the Swing Mode, try to swing as immediately as possible.

Play golf with Tittle X

STEP 16

Check the swing data on the screen

When you swing, the ball will fly on the screen and Post-Shot dialog is displayed.



In addition to the swing/shot data, there are buttons (along the bottom, left-to-right) for displaying shot trajectories, picking up your ball, re-hitting or taking a mulligan (if allowed).

Important!

For more details on E6 Connect, check the "<https://e6golf.com/e6-connect/manual>"


Tittle X settings

STEP 17

Adjust configurations to optimize your swing

In the Tittle X screen, click the configuration tab.

Here, you can adjust difficulty and sensitivity of swing, and calibrate the swing data according to the golf club personally.

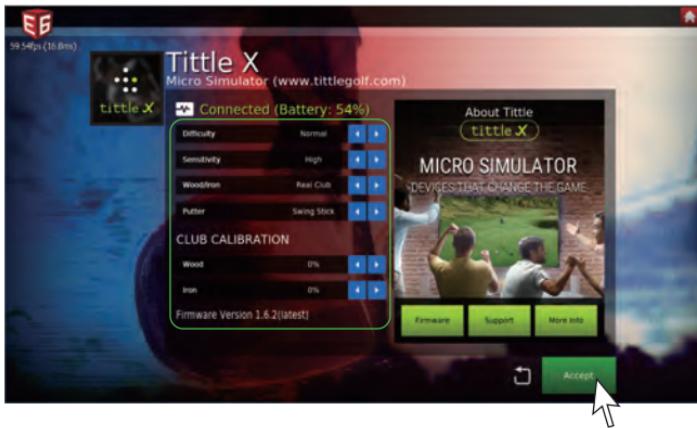

LED light guide



SWING MODE

Three white LED lights are turned on in sequence and repeated until the swing is over.

When entering swing mode, vibration once with LED light animation.



POWER ON

LED lights are animated twice.

The device is ON when it is moved. The device is OFF when it doesn't move for 5 sec.



LOW BATTERY

The third red LED lights flickers 3 times.



FIRMWARE UPDATE

The third red LED lights is on.



DISCONNECT

Red LED lights flickers.




CONNECT

White LED lights flickers.

※ In the figure above, the direction of the charging terminal is at the bottom of the device.

Controller guide

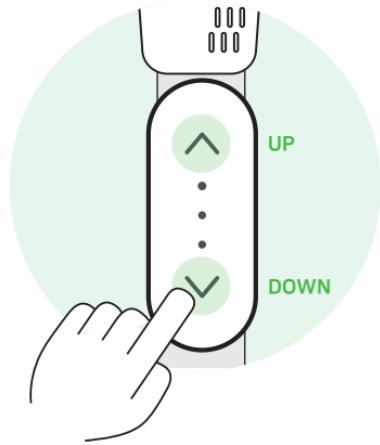

In the tee box & fairway

Club selection

You can change the club with touching the up and down controller. You can see the changed club by the screen and sound of PC.

On the green

Changing direction

You can change the aiming direction for putting.

For further details,
please search "Tittle X Play manual" on website!

License management

Unbinding an E6 Connect license

Each E6 CONNECT license can be synched to one computer or device at a time. This is referred to as “binding”. If you would like to transfer one computer/device to another, E6 CONNECT provides an easy way to do so.



- 1 Log in to <https://beta.e6golf.com>
- 2 Click the PROFILE icon (in the top-right corner) and select SETTINGS from the drop-down menu
- 3 On the Edit Profile screen, click LICENSES (on the left)
- 4 On the Licenses screen, find the license you want to “unbind” (if more than one) and click the DOWN ARROW on the far right
- 5 The drop-down dialog will show the Permissions, Courses and Tracking Systems available with your license
- 6 To unbind your license, click the long, blue UNBIND FROM SIMULATOR button

Trouble shootings

Disconnected symptom between Tittle X and PC

Check the battery. Double tap the Tittle device screen and check if it is powered on and at what level the battery is.

Check if there is other Tittle device around you. (If several Tittle devices are turned on at the same time, it may interfere with the connection.)

If you have a firewall software installed on your PC, be sure to grant permission to use E6Golf software.

Swing not registering on screen

Swing must display on the screen before swinging or Swing after hearing READY Sound from PC or vibrating of device.

“Wagging”, slow back swings or overswings will also affect the system’s swing recognition.

Caution and Warning

Usage & Liabilities

- Before first use, check the battery life status.
- Do not use the product for purposes other than its intended functions.
- Do not separate and disassemble the product.
- Do not subject the product to severe impact, such as one caused by a drop.
- Do not use unauthorized components.
- We hold no liability for information that may leak from Bluetooth communications.
- We hold no liability for damage to clubs such as scratches, spots, etc.
- Do not expose the product to severe temperature or humidity.
- Ensure there are no nearby obstacles or people when you swing.
- Remove device from the cradle after use.
- Do not use on a hard surface such as concrete or asphalt.
- Be careful not to damage your club grip when installing the cradle.

App download

Install Tittle X app on your smartphone.

For updating device firmware and A/S contact, it is required to download the app in your smartphone. Since both iOS and Android OS are supported, it is easy to search and install 'Tittle X' from App Store.

* The application and the download path may differ depending on the region or country.

Free download



Warranty and A/S

- One year warranty from the date of original retail purchase.
*No warranty against damages or loss caused by accident, abuse, or natural disasters.
- For support, please contact the following email : sales@ulike.co.kr
- For more details, check the Website : tittlexplay.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with RF exposure requirement.

X PLAY

Experience real golf anywhere
and keep your golf sense anytime.

www.tittlexplay.com