

Model: 11852

Brand: Disney frozen

Age: over 3 years

Read this manual before using the toy and save it for future reference.

Warning:

Not suitable for children under 36 months. It contains small pieces that can be swallowed or inhaled. Risk of suffocation.

Instructions for use:

1. Remove the toy from the packaging.
2. Locate the area where the batteries are placed and remove the cover from this area.
3. Once the lid is removed, place the batteries with polarity as indicated. This step, like any of the above, must be done by or under the supervision of an adult.
4. Put the lid back on and make sure it is properly closed.
5. Turn on the toy with the power button, you can start playing with it.
6. Once you finish using it be sure to turn it off for longer toy life.

Caution: it is recommended that the change of the batteries and their posture is made by an adult.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

