

Safety Tips for Using Your Device Before using this product, please read the following safety information and communicate it to your children, or to whomever is using it.

For safety, do not use this product while operating a vehicle.

If you are in a location with a medical device, please follow the instructions to turn off the device, if necessary.

Turn off the device or activate the Airplane Mode function when boarding an aircraft, to prevent wireless signals from interfering with aircraft controls.

Turn the device off when you are near high-precision electronic equipment, otherwise it may cause failure of that equipment.

Do not disassemble or remove parts of the device without authorization. Only authorized persons may repair this device.

Keep your device away from magnetic equipment. Radiation from the device may erase information contained in magnetic storage devices.

Do not use this device in high temperatures or in flammable areas, such as gasoline stations.

Keep this device and its accessories out of the reach of children if they are not supervised.

Obey relevant laws and regulations when using this device and respect the rights of others and their privacy.

Follow the specifications in this manual when using a USB cable, otherwise you can rely on this device or your computer.

Do not use this appliance in humid environments, such as bathrooms, steam rooms, etc., and avoid splashing or wetting it.

Use an appropriate volume when using headphones. If you feel uncomfortable, turn down the volume or stop using the device.



Always use a nearby, easily accessible power outlet.

To prevent possible hearing damage, do not listen at high volume levels for extended periods of time.

The memory available to the user may vary depending on the pre-configuration of the device. In the factory preset, the applications to be installed and the operating system version are chosen. Both vary in size and determine the amount of memory available.

Adobe Flash Player

The Adobe Flash Player is not installed on the tablet. If you want to use Flash content in your browser, you can visit the Android application market (Play Store) to search and download the free Adobe Flash Player application.

Maintenance

Keep the device dry. Avoid contact of the battery and the charger with steam, water or wet hands to avoid corrosion, short circuits or failures.

Avoid strong impacts or vibrations on the device, battery and charger. These prevent possible failures, fires or explosions.

Do not knock, pull or drill holes in the device and avoid bending it.


Always use authorized accessories, otherwise you may lose your product warranty in case of failure.

and accessories would not be under our company warranty scope.

Cleaning

Always use special cleaners for LCD pants and to maintain your device.

1. Front camera
2. Screen
3. Rear camera
4. Flash light
5. Type c Port
6. DC port
7. Power button
8. Buttons for volume control +/-
9. Speaker

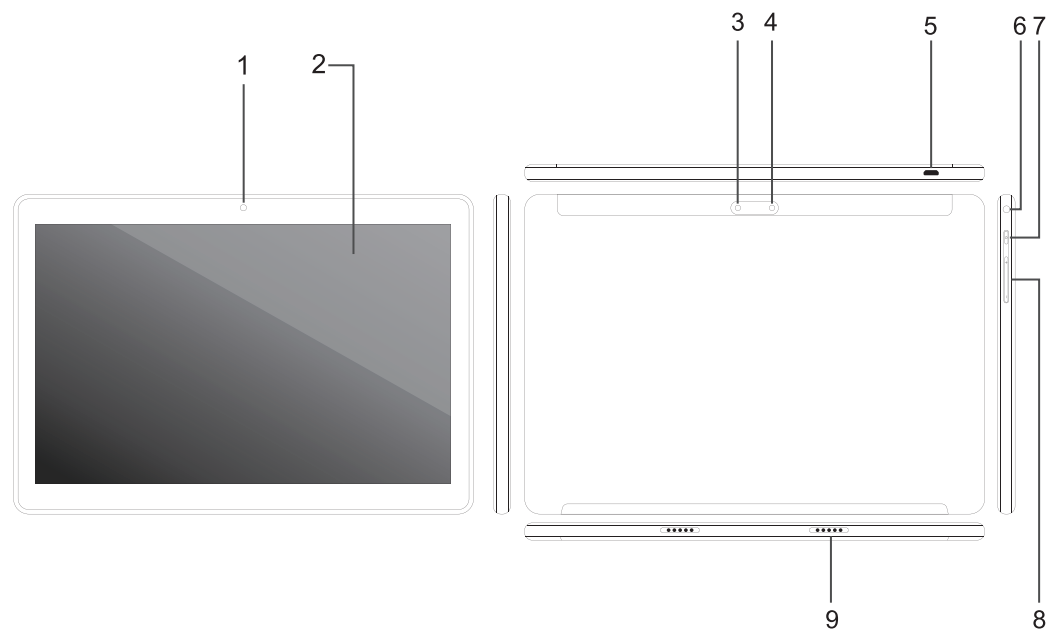

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This Tablet pc meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.