
Content


1. Appearance and Button.....	2
2. Introduction to Desktop.....	3
2.1 Windows start menu	3
2.2 Image slide applications.....	3
2.3 Introduction to app Interface	5
2.4 Action center.....	6
2.5 Running programme.....	7
2.5 Dual-Screen application.....	7
3. Basic Operations.....	8
3.1 Sleep, restart and shut down.....	8
3.2 Recovery.....	8
3.3 Bluetooth.....	9
3.4 Security management.....	9

1. Appearance and Button



- ① MIC: Microphone
- ② Micro SD Card Slot: The built-in storage card reader slot supports Micro SD and MicroSDHC format.
- ③ Volume- / Volume+: Lower / raise volume.
- ④ Power Button: Press it down to start or close the touch screen panel. You can also let the computer enter dormancy through this button or wake from the dormancy mode.
- ⑤ Micro USB Jack: You can use it to connect the computer for data transmission, charging and external USB flash drive.
- ⑥ Earphone Jack: 3.5mm standard earphone jack can transmit the audio signals of Tablet PC to earphone.
- ⑦ Back Camera: Take photos, and record pictures.
- ⑧ Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to link additional device.
- ⑨ Front Camera: Take photos, and record pictures.

2. Introduction to Desktop

2.1 Windows Start Menu: Press Win on the keyboard or click  on the screen, you can see the Start Menu. These application programs are displayed in the form of “magnet” and list. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.



2.2 Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.

Reduce



On the touch screen, narrow two fingers to reduce the image.

Enlarge



On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs.

Slide with finger





 
In start screen, slide finger right and left to move the image.

Slide upward



 
In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

Conversely, if you want to cancel or delete a certain application in the start screen, press and hold the application program magnet for about one second, click  , you can also click  to check more menu, such as resize the magnet you want.

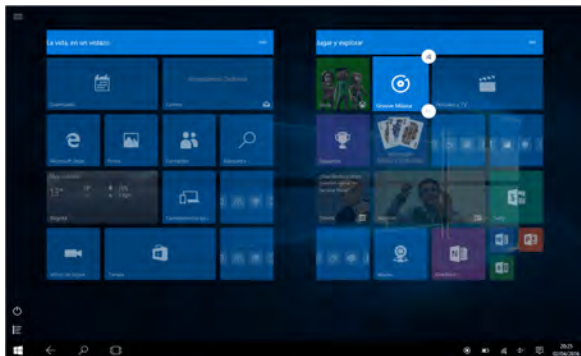


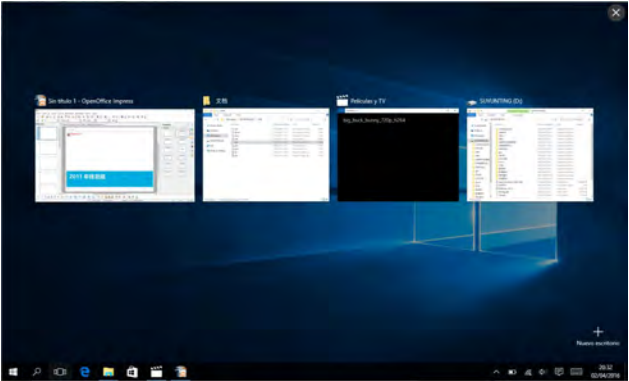 
2.4 Action center

Slide it to the left from the right side of the screen to start Action Center to check the laptop status: Rotation lock, Bluetooth, Brightness, etc.

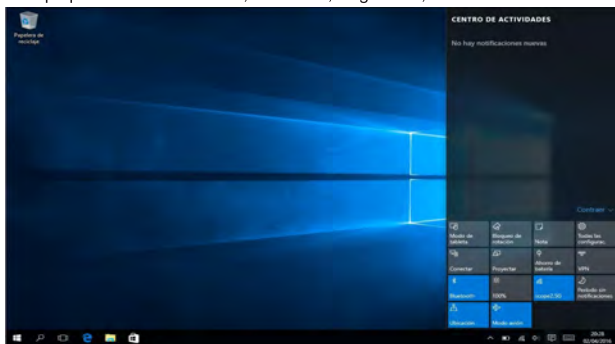

2.5 Running programme

Slide it to the right from the left side of the screen to scan the running program, and you can close it via click .



2.6 Dual-Screen application

On My Computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear. In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.



(Figure 1)



(Figure 2)

3. Basic Operations

 
 
 
3.1 Sleep, restart and shut down



- **Reset / Shutdown forcedly**

If the tablet freezes, you can press and hold the Power button for 8~12 seconds, then the tablet will shutdown.

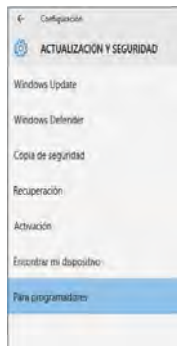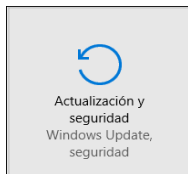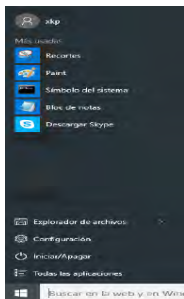

3.2 Recovery





3.3 Bluetooth

 
 
a) Turn on Bluetooth: Start Menu - Settings - Devices - Bluetooth.

After turn on bluetooth, the tablet will auto-search other device, and you can pair with your device.

b) Send a File: Before sending the files, you should open the window "Select where to send your files": Click  at lower right corner of desktop -  - Send a File.

c) Receive a File: Before receiving the files, you should open the window "Waiting for a connection": Click  at lower right corner of desktop -  - Receive a File.

3.4 Security management

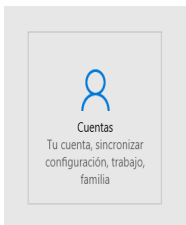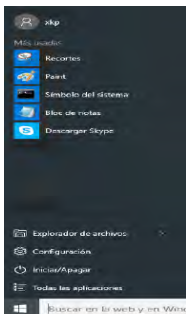

Method for quick setup:

Click the "Win" button in the lower left corner of screen, and select "Settings".

Select "Accounts" on the right and click "Create local account" in "Your account" on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Portable Tablet Computer (FCC ID: 2AHVRW1089EDUH) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification when properly worn on the body is 0.566W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.