

Troubleshooting Guide

Problem	Cause	Solution
The BROADCASTING indicator does not up.	The cordless microphone is not turned on.	Turn on the cordless microphone.
	The microphone receiver is not turned on.	Turn on the microphone receiver and the connected AV equipment.
	The microphone receiver is not connected properly.	See the "connections" in this manual and correct the connections.
No Sound	The battery in the cordless microphone is weak	Replace the battery.
	The microphone receiver is not turned on.	Turn on the microphone receiver and the connected AV equipment.
	The connected AV equipment is not turned on.	Turn up the AV equipment.
	The connected AV equipment is turned down.	Turn up the volume of the AV equipment.
	The speakers/headphones are not connected to the AV equipment.	Connect the speakers/headphones.
The sound is distorted.	The battery in the cordless microphone is weak.	Replace the battery.
	The AUDIO OUT selector switch on the receiver is not set correctly.	See the "parts identification" in this manual and set it correctly.
A howling noise is heard from the speakers	The distance between the cordless microphone and speakers are too close.	Move the cordless microphone away from the speakers or change the direction of the microphone.
A loud hissing noise is heard from the speakers.	The battery in the cordless microphone is weak.	Replace the battery.

If the above mentioned suggestions do not improve the situation, consult your out company.

SPECIFICATIONS: OVERALL SYSTEM

Carrier Frequency Range 203.6MHz
Frequency Stability +/-0.005% with quartz controlled.
Modulation Mode FM
Maximum Deviation Range +/-15KHz, with Limiting compressor.
Frequency Response 40Hz to 20KHz.
S/N Ratio Better than 100dB.(A)
T.H.D Less than 0.5%
Audio Dynamic Range Over 100dB .Over 118dB with Limiting
Service Areas 30 meters.

RECEIVER

Receiving System Dual channels fixed frequency by quartz.
S/N Ratio Over 108dB at 15KHz deviation.
Image and Spurious Rejection 80dB minimum
Power Supply AC 110/220 V,50/60Hz

Technology of U. S. A

Operating Instructions

VHF WIRELESS MICROPHONE SYSTEM

Thank you for buying this VHF WIRELESS MICROPHONE SYSTEM product. Please read through these operation instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place of future reference.

WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.
**To avoid electrical shock, do not open the cabinet.
Refer servicing to qualified personnel only.

PRECAUTIONS

**Do not drop or give any physical shocks to the wireless microphone.

**Do not use the system where it may be subjected to :

--direct or indirect sunlight.

--excessive heat from radiators or other heat sources.

--excessive dust or humidity.

--Mechanical or other vibrations.

**Should any liquid or foreign object fall into the unit, disconnect the unit from the power source and have it checked by qualified personnel before operating it any further.

**If you have any questions or problems concerning this system which are not covered in this manual, please consult the nearest out company.

**Be sure to bring the cordless microphone and the receiver (the whole system) to out company when requiring repair work.