

Ion Pro RT **Ion 200 RT** Flare RT

www.bontrager.com

BT17_IONPRORT__ION200RT_FLARERT_V3 PN 572345

Basic operation (see Table 1)

To turn on, double click (similar to a computer mouse) the power button. To turn off, press and hold the power button. To change mode, quick-press the power button.

NOTE: When turned on Ion Pro RT, Ion 200 RT and the Flare RT will return to the last active mode.

Table 1. Modes, runtimes, and battery life

| Model | Power Button/Status LED | Mode | Max Output (lumens) | Runtime (hours) ² | Power Button/Status LED Color | Battery Life, % |
|------------|-------------------------|----------------------------|------------------------|---------------------------------|----------------------------------|-----------------|
| Ion Pro RT | Power/Status LED Button | High | 1300 | 1.5 | Green Steady | 25 to 100% |
| | | Medium | 800 | 3 | | |
| | | Low | 400 | 6 | Red Steady | 5 to 25% |
| | | Night Flash | 200 | 26 | Red Flashing | Less than 5% |
| | | Day Flash | 300 | 22 | | |
| Ion 200 RT | Power Button Status LED | High | 200 | 1.5 | Green Steady | 25 to 100% |
| | | Medium | 100 | 3 | | |
| | | Low | 5 | 14.5 | Red Steady | 5 to 25% |
| | | Night Flash | 5 | 30 | Red Flashing | Less than 5% |
| | | Day Flash ¹ | 100 | 12 | | |
| Flare RT | Power Button Status LED | Day Flash ¹ | 90 | 6 | Green Steady | 25 to 100% |
| | | All Day Flash ¹ | 45 | 12 | | |
| | | Night Flash | 5 | 15 | Red Steady | 5 to 25% |
| | | Day Steady ¹ | 25 | 4.5 | Red Flashing | Less than 5% |
| | | Night Steady | 5 | 13.5 | | |

¹Supports auto brightness. ²Not including 30 minute low battery feature

Battery charging and care (see Table 2)


Although the light is charged at the factory, it is recommended to charge it before first use.

To charge the battery

IMPORTANT: For best results, charge at room temperature in a dry place. Use a quality CE or UL approved USB charger rated for 500 mA or greater. Avoid extreme conditions including wet, cold, or extremely hot.

- 1. Open the USB port cover.
- 2. Plug the Micro charger cable into the USB port on the light.
- 3. Plug the cable into a computer or wall adapter.
- 4. When the charge is complete, unplug the Micro charger cable and close the USB port cover.

IMPORTANT: Ensure the USB cover is latched before riding in rain or in wet conditions. If the USB cover is not closed, damage to the light may occur.

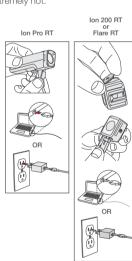

| Model | Power Button/ Status LED Color | Charge, % | Charge Duration (hours) |
|------------|--------------------------------------|------------|-------------------------------|
| | Red Flash ¹ | <25% | |
| lon Dro DT | Yellow Flash ¹ | 25% - 75% | 73 |
| Ion Pro RT | Green Flash ¹ | 75% - 99% | 15 |
| | Green Steady ² | 100% | |
| | Red Flash | 0% - 75% | |
| lon 200 RT | Green Flash | 75% - 99% | 2 |
| | Green Steady ² | 99% - 100% | |
| | Red Flash | 0% - 75% | |
| Flare RT | Green Flash | 75% - 99% | 2 |
| | Green Steady ² | 99% - 100% | |

About this manual

A WARNING

using this light **Specifications**

lithium Ion battery

accidental wireless activation.

This manual is for Bontrager lights Ion Pro RT, Ion 200 RT (headlights) and Flare RT (tail light).

RT indicates light is rechargeable and remote controllable when paired with Bontrager Transmitr remote, PN 502865, another ANT+ compatible device, or through Bluetooth on a phone.

The light may be hot and could cause a burn or damage material it may contact. Do not activate (turn on) light in enclosed area. Avoid

Please read the additional Warning, page 2, before

• Ion Pro RT: 4800 mAh, 3.6 Vdc, 17.3 Wh,

• Ion 200RT and Flare RT: 420mAh, 3.7 Vdc, 1.6 Wh lithium polymer battery For more information

If you need help not offered by this manual, talk to your Bontrager retailer or visit trekbikes.com.

¹Flashes fast (2 Hz) with 4 wire USB cable and a 500mA charger, or slow (1 Hz) with 2 wire USB cable

²When fully charged, status led remains steady for 1 minute then turns off ³Requires a 4 wire USB cable, supplied, and a 500mA charger

List of parts

You may have purchased one or more of the following lights.

Ion Pro RT

| Light | | | |
|---|---|---|--|
| Mount | 25.4 - 35.0mm Adjustable Bar Mount with shim PN W552375 | Front of bike Quick Connect 0° Mounting Bracket PN W527649 *Fits 22.2mm to 35mm bars. | Quick Connect 16° Bracket for tail light PN W533846 Mounts to the seatpost or a rack. |
| Charging Cable | Fast Charge Micro USB Cable PN W559136, (4-wire) | Charger Cable PN W327765, (2-wire) | Charger Cable PN W327765, (2-wire) |
| Accessories (purchase separately) | Head Lights Helmets (Blendr mount system) *Circuit Model 21764 Rally Model 21797 Lithos Model 505969 | 22.2-31.8mm Adjustable Bar Mount PN W530421 | Tail Lights Rack attachment Use an 8mm M5 bolt and washer, PN 537061 with Quick Connect 16° bracket supplied, or with complete rack mount kit, PN 552376 |
| | Bontrager Helmet Bracket PN 428462 | 22.2-35.0mm Adjustable Sync Bracket Model 418921 | Seat Pack Clips Metal, PN 424905 Plastic, PN W528503 |
| | Transmitr Remote Model 502865 *Compatible with all Bontrager RT lights. | Bontrager Garmin Edge 1030 GPS Computer Model 21831 | Speed Concept Attachment Take off the reflector mounting bracket, PN W327560 and replace the end with the Flare Round Mounting Kit interface, PN 418932 |
| Caring for the b | pattery om temperature in a dry place. Avoid moiste | lon Pro RT informa ure, or extreme and special feature | |

Ion 200 RT

C

Store the light in the charged condition. Avoid 'deep discharge'. Battery life will decrease if the battery is stored in a fully discharged condition.

Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on care. After a full life, the battery will continue to charge but with a lower run time. When the run time is unsatisfactory, do not open the case of the light or incinerate; please recycle.

Traveling with the battery

Li-ion batteries cannot be shipped by air due to airline regulations. When

traveling by air, place the light in your carry-on. Recycling Please recycle the battery. In the US, you can find out

where to do this at www.call2recycle.org This symbol on the product(s) and / or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, outside the US, please take this product(s) to designated collection points. Alternatively, in some countries you may be able to

return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

and special features

Flare RT

Installation

- 1. Loosen knob and open.
- 2. Adjust for bar size (31.8mm or 35mm).
- 3. Close and tighten knob.
- 4. Slide light onto mount until it locks in place.

NOTE: Use provided shim to fit 25.4 bars.

Removal

5. Press down.

6. Slide light to remove.

Low battery feature

When the battery charge drops below 5% the light automatically adjusts the output brightness to 50 lumens. This extends the light output for an additional 30 minutes.

Locking/Unlocking the mode Turn on and select the desired mode, then press

and hold the power button 8 seconds to select it. The light will turn off and the main LED will flash once. To unlock, repeat the

Reset

To reset the light to factory default settings, with the light on, press and hold the power button for 15 seconds. The main LED will flash once at 8 seconds, and again at 15 seconds. Release the button after the second flash.

 
Wireless Communication

The light is shipped with ANT+ and Bluetooth wireless connectivity enabled. To disable, with the light off, press and hold the power button for 15 seconds. The main LED will flash once at 8 seconds, and again at 15 seconds. Release the button after the second flash.

NOTE: The status LED flashes blue every 15 seconds when wireless is enabled









Pairing to the Transmitr Remote, Bontrager Garmin Edge® **GPS** computer or select Garmin Edge® computers

The Transmitr Remote (or select Garmin Edge computers, sold separately) allows remote control of the light. This feature is only available on the Ion Pro RT, Ion 200 RT, and the Flare RT as well as other compatible Transmitr lights.

For more complete instructions, refer to the Transmitr manual at bontrager.com. For Garmin related instruction and a complete listing of compatible Edge devices visit support. garmin.com

Before starting, place the remote and all lights within a small area. Move 15 feet from other Transmitr / ANT+ compatible lights to prevent unintentional pairing. If a light is unintentionally paired, restart the pairing process at the beginning.

NOTE: All pairings must be done in a single session. After pairing is finished, pairing any additional lights will require that you repeat the entire

pairing procedure

- 1. Place the light close to the Transmitr Remote (within 15cm / 6in).
- 2. Quick-press the power button on the light to turn it on, then quick-press to

NOTE: After completing this step, do not press the power button on the light again until pairing is complete

- 3. Press-and-hold the center button on the Transmitr Remote for at least 8 seconds. When the corner buttons flash, release the center button.
- 4. While the remote searches for a light, its center button flashes red. When the Transmitr Remote finds a light, the center button on the remote will change from red to green, and the found light will flash.
- 5. While the found light is still flashing, quick-press the button on the Transmitr Remote to which you would like to pair the light. The selected button will glow, and the found (paired) light will stop flashing and turn off. NOTE: After the pairing, the center button on the remote will flash red until the

Transmitr Remote finds another available light. 6. Repeat Step 4 and Step 5 for each additional light to be paired.

To exit pairing

1. When all lights are paired, quick-press the center button on the remote. The button will stop flashing and turn off.

To verify pairing

- 1. Quick-press the center button on the remote to turn on all paired lights
- 2. Press-and-hold the center button to turn off all of them.
- 3. Turn on each light individually. Quick-press each paired button on the remote to turn on the individual light(s)
- 4. Press-and-hold the same button to turn off the light

Using the Transmitr Remote To turn on all lights

ON: Quick-press the center button.

OFF: Press and hold the center button.

To turn on an individual light

ON: Quick-press the corner button that controls the light.

OFF: Press and hold the same button

To change modes of an individual light

To see battery power status on the remote

Each quick-press of a button that controls a light will cycle through the modes.

Seeing battery power status of the light on the remote When a corner button is pressed, the center button will show the battery status

When a corner button is pressed, the center button will show the battery status

| | Center Button Color | Battery Life, % | |
|--|---------------------|------------------|--|
| | Flashing red | Less than 5 | |
| | Red | Between 5 and 25 | |
| | Green | More than 25 | |
| | | | |

Transmitr App

For additional configuration, control, and firmware update capability, download our iOS App from the App Store or Android App from Google Play

Ion 200 RT information, installation, and special features

Installation

To attach with the Quick Connect 0° offset bracket

 
- 1. Place the guick connect on the handlebar with the hook in front
- 2. Stretch the strap under the bar and connect to the hook.

NOTE: Use the second hook to latch excess strap.

3. Slide the Ion 200 RT onto the bracket until it clicks. The power button should be facing up and the lens of the light should be perpendicular to the road.


Removal

Press down on the tab and slide the light away from



Alternatively, you can

 remove the entire quick-connect bracket, with the light attached.



Low battery feature

When the battery charge drops below 5% the light automatically adjusts the output brightness to 5 lumens. This extends the light output for an additional

Locking/Unlocking the mode

Turn on and select the desired mode, then press and hold the power button 8 seconds to select it. The light will turn off and the main LED will flash once. To unlock, repeat the process

Auto brightness

The light is shipped with an ambient light sensor enabled. The light automatically changes modes with ambient light conditions. It changes from Day Flash to High Steady. To disable, with the light off, press and hold the power button 8 seconds. The light will flash once

NOTE: When auto brightness is enabled, all modes are manually accessible. Reset

To reset the light to factory default settings, with the light on, press and hold the power button for 15 seconds. The main LED will flash once at 8 seconds, and again at 15 seconds. Release the button after the second flash.

Wireless Communication

The light is shipped with ANT+ and Bluetooth wireless connectivity enabled. To disable, with the light off, press and hold the power button for 15 seconds. The main LED will flash once at 8 seconds, and again at 15 seconds. Release the button after the second flash

NOTE: The status LED flashes blue every 15 seconds when wireless

Trek Bicycle Corporation contact information:

North America

Trek Bicycle Corporation 801 West Madison Street Waterloo, WI 53594 USA

Tel: 800-313-8735 Europe Bikeurope BV Ceintuurbaan 2-20C 3847 LG Harderwijk

The Netherlands Tel: +31 (0)33 45 09 060

Australia

Trek Bicycle Corp. Au. 8 Townsville Street (Level One) Fvshwick (ACT 2609 AU

Tel: +61 (02) 61 732 400

Statements of Regulatory Compliance

FCC Compliance

Ion Pro RT FCC ID: 2AHXD552373

Ion 200 RT/Flare RT FCC ID: 2AHXD553852

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio / TV technician for help.

NOTES: TREK BICYCLE CORPORATION IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY TREK BICYCLE CORPORATION OF THIS DEVICE COULD VOID THE USER'S AUTHORITY TO OPERATE THE DEVICE.

Industry Canada Compliance

Ion Pro RT - (P/N 552373)

IC ID: 21334-552373 Ion 200 RT (P/N 553853)

IC ID: 21334-553852

Flare RT (P/N 553852)

IC ID: 21334-553852 CAN ICES-3(B)/NMB-3(B)

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device

Leprésent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio. Exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilsateur de l'appareil doit accepter tout brouillage radioélectrque subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

This Ion Pro RT lighting equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. The radiated output power of the Ion Pro RT Wireless Device is below the Industry Canada (IC) radio frequency exposure limits, when used as directed in this manual (Note: attaching this light to a helmet changes the absorption characteristics of the light-body system). This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter. Status of the listing in the Industry Canada's REL (Radio Equipment List) can be found at the following web address

http://www.ic.gc.ca/app/sitt/reltel/srch/ nwRdSrch.do?lang=eng Additional Canadian information on RF exposure also can be found at the following web address: http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08792.

Cet appareil est conforme aux limites d'exposition à la fréquence radio (FR) d'IC et de FCC. La puissance de sortie émise par l'appareil de sans fil lon Pro RT est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Cet appareil est en contact direct avec l'utilisateur dans des conditions s d'utilisation. L'émetteur ne doit pas être co-implér conjointement avec une autre antenne ou un autre émetteur. Ce périphérique est homologué

pour l'utilisation au Canada. Pour consulter l'entrée correspondant à l'appareil dans la liste d'équipement radio (REL - Radio Equipment List) d'Industry Canada rendez-vous sur:

http://www.ic.gc.ca/app/sitt/reltel/srch/nwRdSrch. do?lang=fra

Pour des informations supplémentaires concernant l'exposition aux RF au Canada rendezvous sur:

http://www.ic.gc.ca/eic/site/smt-gst.nsf/fra/sf08792.html

Flare RT information, installation, and special features

Installation

To attach with the Quick Connect 16° offset bracket



(151100 IMPORTANT: The seatpost/saddle icon shows that the lens is oriented perpendicular to the ground to optimize visibility.

NOTE: Use the second hook to latch any excess strap.

To attach to a seat pack

Attach the seat pack clip to the bag loop. To optimize visibility, ensure the light lens is oriented perpendicular to the ground.

To attach to a rack

Remove the quick connect clip from the rubber strap and attach to a rack with a M5 bolt and washer, sold separately, PN 537061.

When the battery charge drops below 5% the light

Low battery feature

automatically adjusts the output brightness and begins to flash. This extends the light output for an additional 30 minutes

Locking/Unlocking the mode

Turn on and select the desired mode, then press and hold the power button 8 seconds to select it. The light will turn off and the main LED will flash once. To unlock, repeat the process.

Auto brightness

will flash once.

The light is shipped with an ambient light sensor enabled. The light automatically changes modes with ambient light conditions. It changes from Day Flash or All Day Flash to Night Flash, **OR** Day Steady to Night Steady. To disable, with the light off, press and hold the power button 8 seconds. The light

NOTE: When auto brightness is enabled, Day Flash, All Day Flash and Day Steady are manually accessible.

To reset the light to factory default settings, with the light on, press and hold the

power button for 15 seconds. The main LED will flash once at 8 seconds, and again at 15 seconds. Release the button after the second flash Wireless Communication

the button after the second flash.

The main LED will flash once at 8 seconds, and again at 15 seconds. Release NOTE: The status LED flashes blue every 15 seconds when wireless

The light is shipped with ANT+ and Bluetooth wireless connectivity enabled.

To disable, with the light off, press and hold the power button for 15 seconds.

is enabled

A WARNING

A bicycle without correct lights and reflectors might be difficult for other people to see, and you might not be able to see. If you cannot see, or other people cannot see you, you could have an accident. Make sure your lights operate correctly and that batteries are charged.

European Union Compliance

Ion Pro RT and Ion 200 RTdo not comply with German StVZO regulations! Trek Bicycle Corporation and Bontrager hereby declare that the wireless device identified as

'Ion Pro RT', 'Ion 200 RT' and 'Flare RT'are in compliance with the following European Directive

- Radio Equipment Directive 2014/53/EU (Ion Pro RT only)
- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU (Ion Pro RT only
- RoHS Directive 2011/65/EU

The full text of the EU declaration of conformity is available from your dealer, or at the following internet address: http://www.bontrager.com/support





