

# Instruction Guide

## -a TouchTunes® compatible jukebox remote- T1

The T1 is a 433 MHz RF remote that is fully compatible with all TouchTunes jukeboxes that are capable of working with the TouchTunes 433.93 MHz blue RF remote. This includes jukeboxes that use the older TouchTunes grey RF remote when the grey remote is in 433.93 MHz mode.

## Instructions:

### Battery Insertion

- Remove battery cover and insert two AA batteries (included) into the remote observing the +/- labeling.
- Prior to closing battery cover, insert included screw through cover and then slide screw retainer over screw. Note: This step is optional as the battery cover will close securely without the optional screw.
- Replace battery cover.

### Setting the ID number

The default 3 digit ID number of the T1 remote is 000. If you wish to use a different ID number follow the below procedure:

- Press and hold the Power and F2 buttons at the same time for 3 seconds to enter programming mode, the red indicator LED will blink THREE times to confirm the AN3801 is in programming mode.
- Using the numeric keypad enter your new 3 digit code. Valid codes are any 3 digit number between 000 and 255.
- If you enter an invalid code or you fail to complete the above step within 10 seconds, the red indicator LED will blink 6 times to indicate an ERROR and your ID code will remain unchanged.
- If your code was accepted the red indicator LED will turn on solid for 3 seconds.



### Teaching the jukebox the remote's new ID

Unless you are using the same ID code as your previous remote, you will need to teach the jukebox your remote's new ID code. To do this you may either follow the instructions in the TouchTunes user manual under "Learning the remote" or follow this generalized procedure:

- Open the jukebox and press the management button usually located on the I/O PCB.
- Navigate to Home > Hardware > Options.
- Press the "Learn" button on the jukebox screen.
- The jukebox will then instruct you to press the "Mic Up" button on the remote. You have approximately 10 seconds to do this.
- The jukebox will indicate "SUCCESS" if it has learned the remote's ID code.
- Confirm your success by trying several of the remotes keys such as power or volume.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.