ASE READ BEFORE OPERATING THIS EQUIPMEN

MODEL: MMA3631

or pulled on, causing injury. Please make sure it is

arranged so that it will not drape over a tabletop, etc.

Where it can be pulled on by children or tripped over

off and on, the user is encouraged to try to corre

technician for help.

transmitter.

FCC WARNING:

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN

WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

1. Read these instructions All the safety and operating instructions should be read before the appliance is operated.

3. Heed all warnings ide reasonable protection against har instructions should be adhered to. ipment generates, uses and can radiate rad frequency energy and, if not installed and used in accordance with the instructions, may cause harn terference to radio communications. Howeve s no guarantee that interference will not occur ticular installation. If this equipment does c narmful interference to radio or television recepti nich can be determined by turning the equipme

terference by one or more of the following 6. Clean only with dry cloth Reorient or relocate the receiving antenna.

 Increase the separation between the equipment Do not block any ventilation openings. Install in Connect the equipment into an outlet on a ordance with the manufacturer's instructions

ircuit different from that to which the receive Consult the dealer or an experienced radio/TV product and to protect it from overheating. These

evice complies with part 15 of the FCC Ru

Operation is subject to the following two conditio ould not be placed in a built-in installation, such as a ookcase or rack unless proper ventilation is provided or

(1) This device may not cause harmful interference

registers, stoves, or other apparatus (including amplifiers) that produce heat. transmitter must be installed to provide separation distance of at least 20 cm from al persons and must not be co-located or operati in conjunction with any other antenna or

To assure continued operation, follow the attached installation instructions and use only shield cable when connecting to other devices. Changes or modifications not expressly approved by the pa responsible for compliance could void the user's

on carefully, please note that these are gener ay not have the capability to be connected to an

2. Keep these instructions

All warnings on the appliance and in the operating

4. Follow all instructions Il operation and use instructions should be followed.

> 5. Do not use this apparatus near water e appliance should not be used near water; for example near a bath tub, washbowl, kitchen sink, laundry tub, in awet basement, or near a swimming pool.

e appliance should be cleaned only as recommended by the manufacturer.

ded for ventilation, to ensure reliable operation

openings must not be blocked or covered. The openings

ld never be blocked by placing the product on a b

fa, rug, or similar surface. This product should never be

ed near or over a radiator or heat source. This produc

this can result in a risk of fire or electric shock. through openings as they may touch dangerou

or electric shock. Never spill or spray any type of

the manufacturer's instructions have been adhered to. 8. Do not install near any heat sources such as radiators, hea

9. Do not defeat the safety purpose of the polarized or ormation with respect to proper grounding of t grounding-type plug. A polarized plug has two blades with one mast and supporting structure, grounding of the lea wider than the other. A grounding type plug has two blades and a wire to an antenna discharge product, size o third grounding prong. The wide or the third prong are provide for your safety. If the provided plug does not fit into your outle grounding conductors, location of antennadischarge product, connection to grounding electrodes and requirements for the grounding onsult an electrician for replacement of the obsolete outlet.

10. Product the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

1. Only use attachments / accessories specified by the

ombination to avoid injury from tip-over. surfaces may cause the appliance and cart

combination to overturn. 13. Unplug this apparatus during lightning storms or when unused for long periods of time.

when it is left unattended and unused for long perio of time, unplug it from the wall outlet and disconne the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges

14. Refer all servicing to qualified service personnel.

ervicing is required when the apparatus has been 23. Wall or ceiling mounting 24. Damage requiring service

does not operate normally, or has been dropped. safety and operating instructions should be kept for

> me, consult your appliance dealer or local power company. For products intended to operate from pattery power, or other source, refer to the operation

other hazards.

22. Safety check

An outside antenna system should not be located in the vicinity of overhead power lines or other electric

light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Do not overload wall outlets and extension cords as

19. Outdoor antenna grounding

POWER SOURCE

the USB Port on the supplied AC/USB Adaptor.

Battery Recharging:

servicing to qualified service personnel.

en replacement parts are required, be sure t rvice technician uses replacement parts specified y the manufacturer or those that have the sam haracteristics as the original parts. Unauthoriz substitutions may result in fire or electric shock o

Upon completion of any service or repairs to this roduct, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 4. During charging, the Red Charging Indicator will illuminate. When finished charging, it will turn off.

only as recommended by the manufacturer. roduct from the wall outlet and refe

A. When the power- supply cord or plug is damaged. . If liquid has been spilled or objects have fallen into duct has been exposed to rain or water.

When the product exhibits a distinct change in

sult in damage and will require extensive by a qualified technician to restore the to its normal operation. the product has been dropped or the cabinet has

performance- this indicates a need for service. 25. Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820- 40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord of ug has been damaged, liquid has been spilled into unit the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

LOCATION OF CONTROLS

CHARGING Indicator

2. BT (Bluetooth) Indicator

5. Play/Pause Button

7. - (Volume down) Button

3. AUX (in) Indicator

4. M (Mode) Button

BT (BLUETOOTH):

BT PAIRING:

6. ◀◀ Button

. Connect the full size plug from the supplied USB Connection Cable to

The unit has a built-in Li-ion rechargeable battery, recharge it before first time use or when it is consumed as follows.

1. Connect the small plug from the supplied USB Connection Cable to the USB Jack on the right of unit.

.Connect the AC/USB Adapter to the wall outlet having AC 100-240V~, 50/60Hz as the illustrated on right.

rvice to qualified service personnel under the

 This AC/USB Adaptor is intended to be correctly orientated in a vertical or floor mount position. • To save energy, unplug the AC/USB Adaptor from the wall outlet if you will not use it for an extended period of time. During charging, you can also play and listen music at the same time.

Your battery will last longer if you following these simple guidelines for charging and storing. A. Before first time use, recharges the unit approximate 4 hours until the unit was fully recharge Recharging and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).

o not overcharge (longer than 24 hours). Excessive charging or running the nit until battery goes empty will damage battery. Battery life will be

 
E. The rechargeable battery incorporated in this product is not user replaceable.

follows illustrates as desire:

AC Outlet

AC/USB Adaptor

Install the carry handle to the unit as the






4. To shut off the unit, press and hold the Φ Button approximately 3 seconds until the Indicator is not light.

To play music from an Audio Player via a 3.5mm audio out jack:

 - 1. Power on the unit by pressing and holding the & Button on the top of unit approximately 1 second. The unit will BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink,
- 2. Connect one end of the supplied Audio Connection Cable to the AUX Out; Line Out; Phone Jack from the external audio player.
- 3. Connect the other end to the AUX IN Jack on the side of unit as the illustrated below:



- 4. Press the M (Mode) Button on the top of unit to enter to AUX (in) mode, the AUX (in) Indicator will illuminate.
- 5. Play the music on the external Audio Player as usual. (Make sure the audio out of the Player was set to high).

To external USB device

- 6. During playback, press the + or Buttons on the unit to adjust the sound level as desire.
- 7. To shut off the unit, press and hold the & Button approximately 3 seconds until the Indicator is not light.

CHARGING THE EXTERNAL USB DEVICE VIA USB PORT

The unit is equipped with a built-in USB Charger. Use it to charge the external USB device as follows:

2. Connect the Full size USB plug to the USB Port of the unit as the illustrated below:

1. Connect the small plug from the supplied USB Connection Cable to the Micro USB Port on the external device you

3. Charging will auto start. Monitoring the charging status by the on screen instruction of the external device as usual.

A. Connect the unit to the AC Power as previously instructed before start charging the external USB Device. If

powerful built-in battery (more than 16.28 WH). It will not allow the external device to receive a full charge.

B. The unit has a built-in overload/overheat protector. If the output of the unit is overloaded (or short circuit).

The built-in charger will auto shut off. Disconnect the external device from the unit.

want to recharge. (If the charging port is NOT Micro USB type, please use or buy the correct Charging Cable for your

- Press the (Play/Pause) Button to pause: press again to resume normal playback.
- 5. If the unit is paired to a Cell Phone and a call is incoming during a music session, press and release the ^Φ Button to pause the music playback then speak to the built-in Microphone to answer the call. When your call is complete, press and releases the & Button to hang up and resume to music playback

6. To shut off the unit, press and hold & Button approximately 3 seconds until the Indicator is not lit.

11. DC OUT (USB Port, for charging external USB devices)

13. DC IN Jack (Micro USB Port, for charging the built-in battery)

(Bluetooth) mode automatically and the Blue Indicator on the top of unit will illuminate and blink.

Side View:

8. + (Volume up) Button

9. Button

12. AUX (in) Jack

Built-in Microphone

1. Power on the unit by pressing and holding the o Button on the top of unit approximate 1 second. The unit will enter to BT

2. Power on the external BT Device and enter the BT search mode. Start pairing following the on screen instructions from

10. ് Button

- When the external BT Device is searching for the unit, our model number "MMA3631" will appear on the display 4. When finished, unplug the USB Connection Cable from the unit.
- Pairing code "0000" or "1234" may need to be entered.

- you are using the power from the built-in battery to recharge the external USB Device. Then: Normal operation after pairing is complete: 1. Power on the unit by pressing and holding the oButton on the top of unit approximately 1 second. The unit will enter to BT Before charge the external device, check the power of the built-in battery. If the power of the unit is too low,
- (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink. it cannot charge the external device. • The power of the built-in battery is 16.28 WH. Do not use it to recharge the external device which has 2. Wait a few seconds until the unit is auto paired to the external BT Device. (The Blue Indicator will stop blinking).
- 3. Play the music on the paired BT Device as usual.

For first time use or re-pairing the unit to a new BT Device, pairing it as below:

the external BT Device. After paired, the Blue Indicator will stop blinking.

3. Play the music in the paired BT Device as usual.

TROUBLESHOOTING

Check the following before requesting service: DOSCIBLE CALISE DOSSIBLE SOLUTION

MPIOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
n't power on	Built in battery consumed	Recharge the battery as page 3
sound or sound ak	Volume of the unit was set to minimum position	Increase the volume by press the + Button
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
ınd distortion	Volume level too high	Reduce the volume level by press the - Button
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
not functioning	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as page 4
	The external BT device too far from the unit	Place the external BT device close to the unit

SPECIFICATIONS

Power source:

BT Operation Distance:

Built-in DC== 7.4V, 2200 mAh (16.28WH) rechargeable Li-ion

Battery, Recharge by DC == 5 V, 1 A, through DC IN Jack (Micro USB Port)

Output from the built-in USB Charger: DC == 5 V. 1 A Impedance of the Speakers: 2 x 10 W; 4 ohm 2 x 5 W (Total 10 W, RMS) Audio power:

32 Feet in open area

BT Version:

PACKAGE INCLUDES:

1x User's Manual 1x AC/USB Adapter (Input: AC 100-240 V~, 50/60 Hz, 0.25 A Max.; Output: DC == 5 V, 1 A)

1x USB Connection Cable (For charging only) 1x Audio Connection Cables with 3.5mm Plugs

2x Assembly screws/nuts for Carry Handle

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

email:service@craigelectronics.com

Printed in China

of your unit. Please ship your unit to:

Magnavox warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can

not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt

LIMITED WARRANTY

Craig Electronics Inc. 1160 NW 163 Drive

This warranty is void if the product has been: a) Used in a commercial application of rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craid Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product

MMA3631_WC_E0HZ1_B0WU

Size: 148.5(W) x 210(H)mm (A5)