Bluetooth Speaker

AX INTERNATIONAL LIMITED



'E THE COVER (OR BACK), NO USER SERVICE INSIDE, REFER SERVICING TO QUALIFIED SERVIC

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, O NOT EXPOSE THIS UNIT TO RAIN OR

WARNING: USE UNDER SUPERVISION OF AN

ADULT DUE TO LONG CORD This unit has a long cord that can be easily tripped

on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a All the safety and operating instructions should be read tableton etc Where it can be pulled on by before the appliance is operated Keep these instructions

This equipment has been tested and found to

try to correct the interference by one or mo

children or tripped over accidentally.

Heed all warnings are designed to provide reasonable protection inst harmful interference in a residentia installation. This equipment generates, uses and an radiate radio frequency energy and, if not Oo not use this apparatus near water

nstructions, may cause harmful interference adio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does ause harmful interference to radio or television eception, which can be determined by turning he equipment off and on, the user is encourage

Regrient or relocate the receiving antenna. Increase the separation between the equipment

onnect the equipment into an outlet on a uit different from that to which the receiver is

chnician for help.

his device complies with part 15 of the FCC

es. Operation is subject to the following two This device may not cause harmful

This device must accept any interference

ransmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or

FCC WARNING: To assure continued operation, follow the

attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could

structions carefully Please note that these are general autions and may not pertain to your unit. F or example. unit may not have the copability to be connected to an

re safety and operating instructions should be kept for

All warnings on the appliance and in the operating nstructions should be adhered to. Follow all instructions operation and use instructions should be followed.

installed and used in accordance with the ne appliance should not be used near water; for example, ear a bath tub, washbowl, kitchen sink, laundry tub, in awet basement, or near a swimming pool. Clean only with dry cloth

> Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet and in the back or bottom re provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These nings must not be blocked or covered. The opening uld never be blocked by placing the product or

onsult the dealer or an experienced radio/TV

toves, or other apparatus (including amplifiers

defeat the safety purpose of the polarized or ling-type plug. A polarized plug has two blades with one han the other. A grounding type plug has two blades and rounding prong. The wide or the third prong are provided our safety. If the provided plug does not fit into your outle

sult an electrician for replacement of the obsolete outlet. oduct the power cord from being walked on or pinched rticularly at plugs, convenience receptacles, and the point whe ney exit from the apparatus. 1.Only use attachments / accessories specified by the manufacturer.

surfaces may cause the appliance and cart combination to overturn.

4.Refer all servicing to qualified service personn

15.Power source This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to you home, consult your appliance dealer or local power

appliance should be cleaned only as recommended by

a rug, or similar surface. This product should never h ced near or over a radiator or heat source. This pro-

18.Object and liquid entry

to the product, be sure the antenna tem is grounded so as to provide ne protection against voltage surges o not attempt to service this product yourself as

opening or removing covers may expose you to angerous voltage or other hazards. Refer all servicing to qualified service personnel. nen replacement parts are required, be sure t

the manufacturer or those that have the sai aracteristics as the original parts. Unauthorize 3.Unplug this apparatus during lightning ostitutions may result in fire or electric shock or storms or when unused for long periods of

To protect your product from a lightning storm, or 22.Safety check when it is left unattended and unused for long periods Upon completion of any service or repairs to this f time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. operating condition.

24.Damage requiring service A.Unplug this product from the wall outlet and refer normally, or has been dropped. service to qualified service personnel under the

company. For products intended to operate from ollowing the operating instructions. Adjust only battery power, or other source, refer to the operation

with them might be fatal.

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of

If an outside antenna is connected

POWER SOURCE

vice technician uses replacement parts specifi 2. Connect the small plug from the supplied AC/DC Adapter to the DC IN Jack.

product, ask the service technician to perform safety checks to determine that the product is in proper 3. Connect the AC/DC Adaptor to a wall outlet having AC 100-240V, 50/60Hz as the illustrated on right.

product should be mounted to a wall or ceiling only as recommended by the manufacturer.

B.When the power- supply cord or plug is damaged. C.If liquid has been spilled or objects have fallen into If the product has been exposed to rain or water. E.If the product does not operate normally by

instructions, as an adjustment of other controls esult in damage and will require extensive work by $\normalfont{\sc Nn}$ outside antenna system should not be located in a qualified technician to restore the product to its

antenna system, extreme care should be taken to keep rom touching such power lines or circuits as contac

liquid on the product. 19.Outdoor antenna grounding

Battery Recharging: The unit has a built-in Li-ion rechargeable battery, recharge it before first time use or when it is consumed as follows.

1. Open the rubber cover on the right of unit as the illustrated on right.

3.Plays the music in the paired BT Device as usual. 4.During playback:

4. During charging, the Red Charging Indicator will illuminate. When finished charging, the color of the Charging Indicator will turns to Green.

AC Outlet

AC/USB Adaptor

The adrubber cover is for water and dust resistance; always make sure it is completely closed after open.

 This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position. To save energy, unplug the AC/DC Adaptor from the wall outlet if you will not use it for an extended period of time.

· During charging, you can also play and listen music from the unit at the same time.

Your battery will last longer if you following these simple guidelines for charging and storing. A. Before first time use, recharge the unit approximate 4 hours until the unit was fully recharge

B. Recharging and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F) C. Do not overcharge (longer than 24 hours). Excessive charging or running the F. If the product has been dropped or the cabinet has unit until battery goes empty will damage battery. Battery life will be

LOCATION OF CONTROLS

extended if you keep the battery fully charge D. Battery life naturally shortens slowly over time E. The rechargeable battery incorporated in this product is not user replaceable.

25.Note to CATV system installer This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

plug has been damaged, liquid has been spilled i unit has been dropped or the unit does not operate

ose controls that are covered by the operating

When the product exhibits a distinct change in

performance- this indicates a need for service.

Side View: 1 2 3 4 5 6 7 8 9 10

USB Port (For Charging External USB Device)

12. Rubber Cover (This cover is for water and

dust resistance; always make sure it is

completely closed after open)

OPERATION

BT (BLUETOOTH):

BT PAIRING:

In first time use or re-pairing the unit to a new BT Device, pairing it as below: 1.Power on the unit by press and hold the & Button on the top of unit approximate 1 second. The unit will enter to BT (Bluetooth) mode automatically and the Blue Indicator on the top of unit will illuminate and blink.

2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the Blue Indicator will stop blinking.

• Press and release the Button to pause: press again to resume normal playback.

ress and hold the + or - Buttons to adjust volume level as desire. Press the + or - Buttons repeatedly to skip tracks.

5.If the unit is paired to a Cell Phone and a call is incoming during music listening, press and release the b Button to pause the music playback then speak to the built-in Microphone to answer the call. When your call is complete, press and releases the & Button to hook on and resume to music playback

6.To shut off the unit, press and hold b Button approximate 3 seconds until the Indicator is not light.

• When the external BT Device searched the unit, our model number "MMA3632" will appear on the display of

• Pairing code "0000" or "1234" may need to enter.

NORMAL OPERATION AFTER PAIRED:

1. Power on the unit by press and hold the & Button on the top of unit approximate 1 second. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink.

2. Wait a few seconds until the unit auto paired to the external BT Device. (The Blue Indicator will stop blinking).

3.Plays the music in the paired BT Device as usual.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

· Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your

authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement.

TROUBLESHOOTING

To play music from an external Audio Player via a 3.5mm audio out jack:

1. Power on the unit by press and hold the b Button on the top of unit approximate 1 second. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit

2.Connect one end of the supplied Audio Connection Cable to the AUX Out; Line Out; Phone Jack from the external audio player.

3. Open the rubber cover on the right of unit.

AUX IN

4.Connect the other end to the AUX In Jack on the rear of unit.

5.Press the st Button on the top of unit to enter to AUX In mode, the color of the Indicator will

was set to high. Otherwise, sound form this unit will be weak). 7.During playback, press and hold the + or - Buttons on the unit to adjust the sound level as desire.

8.To shut off the unit, press and hold & Button approximate 3 seconds until the Indicator is not light.

6.Plays the music on the external Audio Player as usual. (Make sure the audio out of the Player

CHARGING THE EXTERNAL USB DEVICE VIA USB POR

The unit equipped a built-in USB Charger. Use it to charging the external USB device as

Open the rubber cover on the right of unit.

2. Connect the suitable plug from the USB Connection Cable (Not included) to the charging port on the external device you wants recharge as the illustrated follows:

Charging will auto start. Monitoring the charging status through the external device as usual. 4. When finished, unplug the USB Connection Cable from both units.

IMPORATANT:

A.Before charge the external device, check the power of the built-in battery. If the power of the o low, it cannot charge the external device. ver of the built-in battery is 2200 mAh only. Do not use it to recharge the external device

which has powerful built-in battery (more than 2200 mAh). It will caused the external device cannot be fully charge by this unit.

The unit has a built-in overload/overheats protector. If the output of the unit is overload (or

short circuit). The built-in charger will auto shut off.

Check the following before requesting service:

POSSIBLE CAUSE

Built in battery consumed Can't power on Recharge the battery as page 3 lume of the unit was set to minimum No sound or sound Increase the volume by press and Volume level of paired/connected Rise the volume level of the paired/connected device device is in low level Sound distortion Volume level too high Reduce the volume level by press and hold the - Button Reduce the volume level of the olume level of the connected/paired connected/paired device Pair the external BT Device to the

The external BT Device too far from Place the external BT Device close

POSSIBLE SOLUTION

SPECIFICATTIONS:

Built-in DC==7.4V, 2200 mAh (16.28 WH) rechargeable Li-ion Battery, Power source: Recharge by DC == 9 V, 2 A through DC IN Jack

Dust/water resistance level: Output of the built-in Charger: DC==5 V, 1A

Impedance of the speakers: 2 x 10 W; 4 ohm Audio power: 2 x 8 W (Total 16 W. RMS

BT Version: BT Operation Distance: 96 Feet in opera area

PACKAGE INCLUDES:

1x AC/DC Adapters (Input: AC 100-240V~; 50/60Hz; Output: DC == 9V, 2A) 1x Audio Connection Cables with 3.5mm Stereo Plugs

LIMITED WARRANTY

Craing warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please retu the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with accessories if applicable, a copy of your sales receipt and a Cashies' s check or Money Order for \$7.00 (to cover shipping and handing costs) payable to Craig Electeonics Inc.For consumers in Canada, please make sure that the cashier check or money order is redeemsble through a U.S.bank. Ship your product freight pre-paid. Your unit will be repaired, replaced, replaced or if the unit can not be repaired or replaued, a refund will be forwarbeb to you within four weeks of receipt of your unit. Plerse ship your unit to:

> Craig Electronice Inc. 1160 NW 163 Drive Miami, FI 33169

This warranty is void if the product has been:a)Used in a commercial application or rental.b)Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover. a)Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original puruchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance sall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights rights. However, you may have other rights which may bary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product

email:service@craigelectronics.com

Printed in China