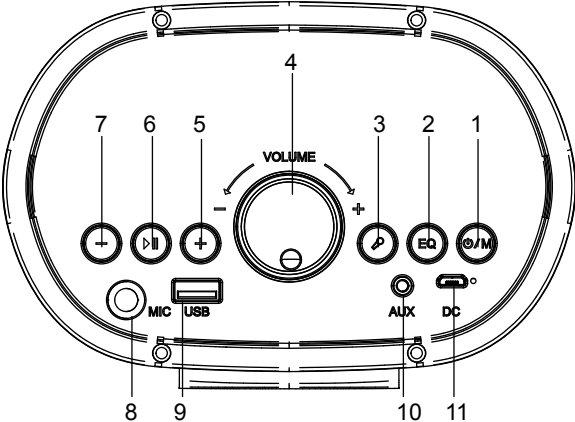
	<div>FEATURE</div> <div>1.Stylish, Fashionable and Elegant Appearance 2. Strong bass, Clear and Rich Vocal 3. Designed with Patented Soft Metal Technology, anti-scratch outer shell and Wooden inner box 4. Music playing through BT, USB, Micro SD and Line in connection</div>	<div>MP3 FUNCTOR DESCRIPTION</div> <div>1.Insert USB Disk or TF Card to play stock music in MP3 format. 2. Play Pause Break: Short press to play/pause 3. Previous/Next Song Key: Short press to Previous/Next Song</div>
	<div>PANEL FUNCTION</div> <div><div><div>1.Mode 2.EQ Volume 3.Microphone 4.Volume Button 5.Next song 6.Play/Pause</div><div><div>7.Precious song 8.Microphone input port 9.USB Merory Card Slot 10.AUX in port 11.USB 5V input interface</div></div></div></div>	<div>FM FUNCTION DESCRIPTION</div> <div>1.Short-Press MODE switch to enter FM Mode. 2.Long-Press Play/pause buttom to enter automatic channel scanning. 3. Previous/Next Song Key: short press to stocked previous/next radio</div> <div>Note: Please automatic searching radio when first use</div> <div>MICROPHONE FUNCTION DESCRIPTION</div> <div>1. You can use the mic once insert it, "MIC"on the display will light on</div> <div>BLUETOOTH FUNCTION DESCRIPTION</div> <div>Pairing With Bluetooth Enabled Devices (Mobile Phones/tablets Etc.) 1.Keep the speaker and device within 1 mater of each other. 2.Once the speaker is powerd on,press the mode switch to enter BT Mode,the LED screen with display "red" 3.Start the Bluetooth function on your mobile device and look for "V10" in the Bluetooth device list. 4.After successfully connecting,the speaker will prompt. 5.To un-pair,long-press the Play/Pause key.</div> <div>EQ FUNCTION DESCRIPTION</div> <div>1.There are 6 modes of EQ, Normal/Pop/Rock/Jazz/Classic/Country.</div> <div>TWS FUNCTION DESCRIPTION</div> <div>Connect up to 2 speaker to get an immersive and explosive sound experience. 1.After powering on both the units, long press 2 speakers' "TWS" key at the same time, Both screens will display "CON" and release voice prompts "left channel" &amp; "right channel" . This indicates the TWS connect is successful. 2.Then pair the mobile device with the speaker in the normal way and search for "V10" 3.If you want to disconnect TWS connection, long press 1 speaker' "TWS" key.</div>

<div>MUSIC PLAYING</div> <div>1.short press Play Pause and Previous/Next Keys to control the respective operation.</div> <div>CHARGING INDICATION</div> <div>Charging the Speaker (3.7V rechargeable battery built-in) 1. Charging is needed when the battery symbol is empty and twinkle, the product will into low power self-protect state the volume will drop to 70% please use our adapter to charge Red light on when charging and of when charging is finished 2.Note: Please charge for more than 12H for first time, please keep battery with electric f to battery doesn't work for long time, or the battery will damage</div> <div>SPECIFICATIONS</div> <div><div>Bluetooth Version:5.0 Sperker Output:9W Battery Capacity:3.7V 1200 mAh Function:Bluetooth,AUX-IN,Mic,USB Flash TF&amp;DM Radio,Echo and EQ Funciton</div><div>Music Playback Time:3.1 hours Frequency Response:75HZ-18KHZ S/N Ratio:86dB Dimensions:W275mmXH325mmXD145mm Product Weight:1.45kg</div></div> <div>Accessories</div> <div><div>• Speaker*1 • User Manual*1 • USB Charding cable*1</div></div>	<div>TROUBLESHOOTING</div> <div>Issue 1: Speaker is unable to connect successfully to your mobile device successfully to your mobile device  Problem 1: Speaker's battery is flat Solution: Fully charge the speaker and retry connection with your mobile device. Problem 2: Speaker not paired to your mobile device Solution: Make sure that the speaker is successfully paired upon selecting "V9" in the device list. Problem 3: Speaker and mobile device too far apart Solution: Make sure that the speaker is within a meter range during pairing and connection. Problem 4: Speaker is connected to other mobile device Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.</div> <div>Issue 2: Sound from the speaker is too soft or silent  Problem 1: Speaker's battery is low/flat  Solution: Fully charge the speaker and retry connection with your mobile device. Problem 2: Speaker or mobile device's volume is too low Solution: Turn the volume of the speaker or mobile device up to increase the volume. Problem 3: Music track may not be audible Solution: Make sure that the music track is of a playable format for the mobile device. Problem 4: Speaker and mobile device might not be connected properly. Solution: Repeat the connection step via Bluetooth again to make sure that it is connected properly and try again</div>	<div>Cautions:</div> <div>Read all the instructions and warnings carefully prior to using this product</div> <div><div>• Do not store the speaker in a high temperature environment. • Do not place the speaker near a fire or other excessively hot environments. • Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times. • Do not attempt to charge the speaker using any other method or connection other than the speaker's provided charging cable. • Do not disassemble this speaker or attempt to repair or modify it in any manner. • Be cautious of excessive drops,bumps,abrasions or other impacts to this speaker.If there is any damage to the speaker such as dents,punctures, tears,deformities or corrosion,stop using the speaker and contact us • If the product produces an abnormal smell,high temperature (low temperature during normal use) ,discolours or changes shape abnormally,stop using the product</div><div>FCC Caution. (1) § 15.19 Labelling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. § 15.21 Changes or modification warning Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. § 15.105 Information to the user. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.</div></div>
---	---	---

尺寸：142\*210mm  
材质：100G书写纸  
要求：单黑印刷，折页