
Model:V6


PORTABLE SPEAKER

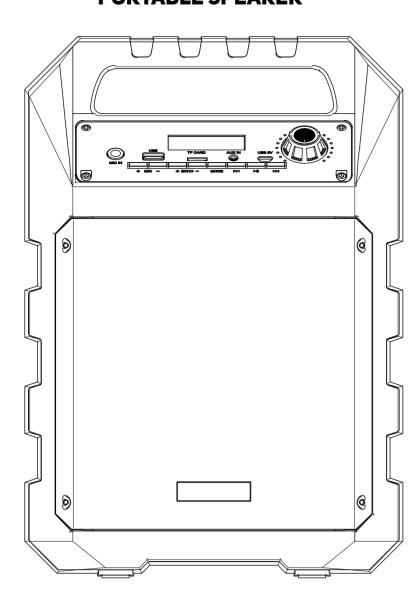

FEATURE

- 1. Stylish, Fashionable and Elegant Appearance
- 2. Strong bass, Clear and Rich Vocal
- 3. With Patented Desingned, Anti-scratch outer shell 4. Music playing through BT, USB, TF card and Aux in connection

PANEL FUNCTION

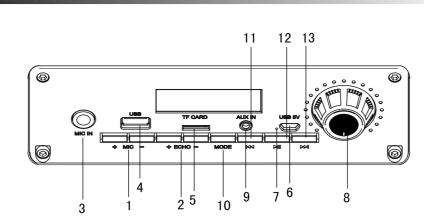

8.ON/OFF Master/Volume knob

9. Aux in port

11 . Previous song

12. Play /Pause

13. Next song

10. Mode

- 1. Microphone Volume
- 2. Echo volume
- 3. Microphone Input port
- 4. USB Memory card Slot
- 5. TF card Slot 6. USB 5V input interface
- 7. Charging indicator light

FUNCTION DESCRIPTION

GENERAL FUNCTION DESCRIPTION

- 1. Master Volume: Turn the knob to adjust the volume, left to power-off and right to power-on.
- 2. Mic Volume: Press the button + /- to adjust the volume.
- 3. Echo volume: Press the button +/- to adjust the volume.

USB, TF card and Aux-in are priority in any-mode, it automatically plays when the devices are inserted in the slots.

MP3 FUNCTION DESCRIPTION

- 1. Insert USB Disk or TF Card to play stock music in MP3 format.
- 2. Play / Pause : Short-Press to Play or Pause 3. Previous / Next Song: Short-Press to Play Previous or Next song.

FM FUNCTION DESCRIPTION

- 1. Short-Press Mode switch to enter FM Mode.
- 2. Play/pause Key: Long-Press to enter automatic channel scanning. a. Short-Press to Play or Pause.
- 3. Previous / Next Song Key: Short-Press to toggle between different radio stations.
- Note: Ensure automatic channel scanning on first use.

TWS FUNCTION DESCRIPTION

- Connect up to 2 speaker to get an immersive and explosive sound experience. 1. After powering on both the units, long press 2 speakers' "Mode" key at the same time. Both screens will display "CON" and release voice prompts "left channel" & "right channel". This indicates the TWS connect is successful.
- 2. Then pair the mobile device with the speaker in the normal way
- and search for "V6" 3.If you want to disconnect TWS connection, long press 1 speaker' "Mode" key.

MICROPHONE FUNCTION DESCRIPTION

1. Mic function is activated once a microphone is plugged into the respective Port.

BLUETOOTH FUNCTION DESCRIPTION

Pairing with Bluetooth enabled devices (Mobile phones/Tablets etc.)

- 1. Keep the speaker and device within 1 meter of each other. 2. Once the speaker is powered on, press the mode switch to enter BT
- Mode. The LED Screen with Display "blue" 3. Start the Bluetooth function on your mobile device and look for
- "V6" in the Bluetooth device list.
- 4. After successfully connecting, the speaker will prompt. 5. To un-pair, long-press the Play/Pause key.

MUSIC PLAYING

1. Short-Press Play/Pause and Previous/Next keys to control the respective operation.

CHARGING INDICATION

- Charging the Speaker (3.7V rechargeable battery built-in)
- 1. Charging is needed when you hear the speaker prompts voice
- 2. Use the USB Charging cable to connect your Computer.
- 3. Red light turns on during charging, turns OFF after fully charged. 4. Unplug USB Charging cable after fully charged.
- 5. Please charge for 10–12 hours when using for the first time.

SPECIFICATIONS

Bluetooth Version:

Speaker Output: Connectivity:

Charging: FM Radio: Battery Capacity:

Music Playback Time: Charging Time: Frequency Response:

FM Frequency response: Sensitivity:

Operating Distance: Dimensions:

Product Weight:

- USB Charging cable *1
- Aux cable Microphone

v5.0

≥60dB

87.5 - 108mHZ

W 250.16 x H 358.10 x D 143.10

Accessories:

- Speaker *1 User Manual
- 9 W Bluetooth, Aux, Mic-IN, USB Flash, TF & FM Radio 5V
- Yes 3.7V 1200mAh 2 hours Up to 3.5hrs* 90Hz - 20kHz

1.4kg

TROUBLESHOOTING

Issue 1: Speaker is unable to connect successfully to your mobile device Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker and retry connection with your mobile

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting " V6 " in the device list.

Problem 3: Speaker and mobile device too far apart Solution: Make sure that the speaker is within a meter range during pairing and connection.

Problem 4: Speaker is connected to other mobile device Solution: Make sure that the speaker has already been disconnected before

Issue 2: Sound from the speaker is too soft or silent

Problem 1: Speaker's battery is low / flat

making a new connection with a new device.

Solution: Fully charge the speaker and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low Solution: Turn the volume of the speaker or mobile device up to increase

the volume. Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly. Solution: Repeat the connection step via Bluetooth again to make sure that it is connected properly and try again

Cautions:

speaker dry at all times.

Read all the instructions and warnings carefully prior to using this product

· Do not expose this speaker to moisture or submerge it in liquid. Keep

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.

- · Do not attempt to charge the speaker using any other method or connection other than the speaker's provided charging cable. · Do not disassemble this speaker or attempt to repair or modify it in any
- · Be cautious of excessive drops, bumps, abrasions or other impacts to this speaker. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us
- · If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.